




30" ELECTRIC BUILT-IN COOKTOP

MODELS:

MEC8830HB00 (Black)

MEC8830HS00 (Stainless)

COOKTOP PARTS

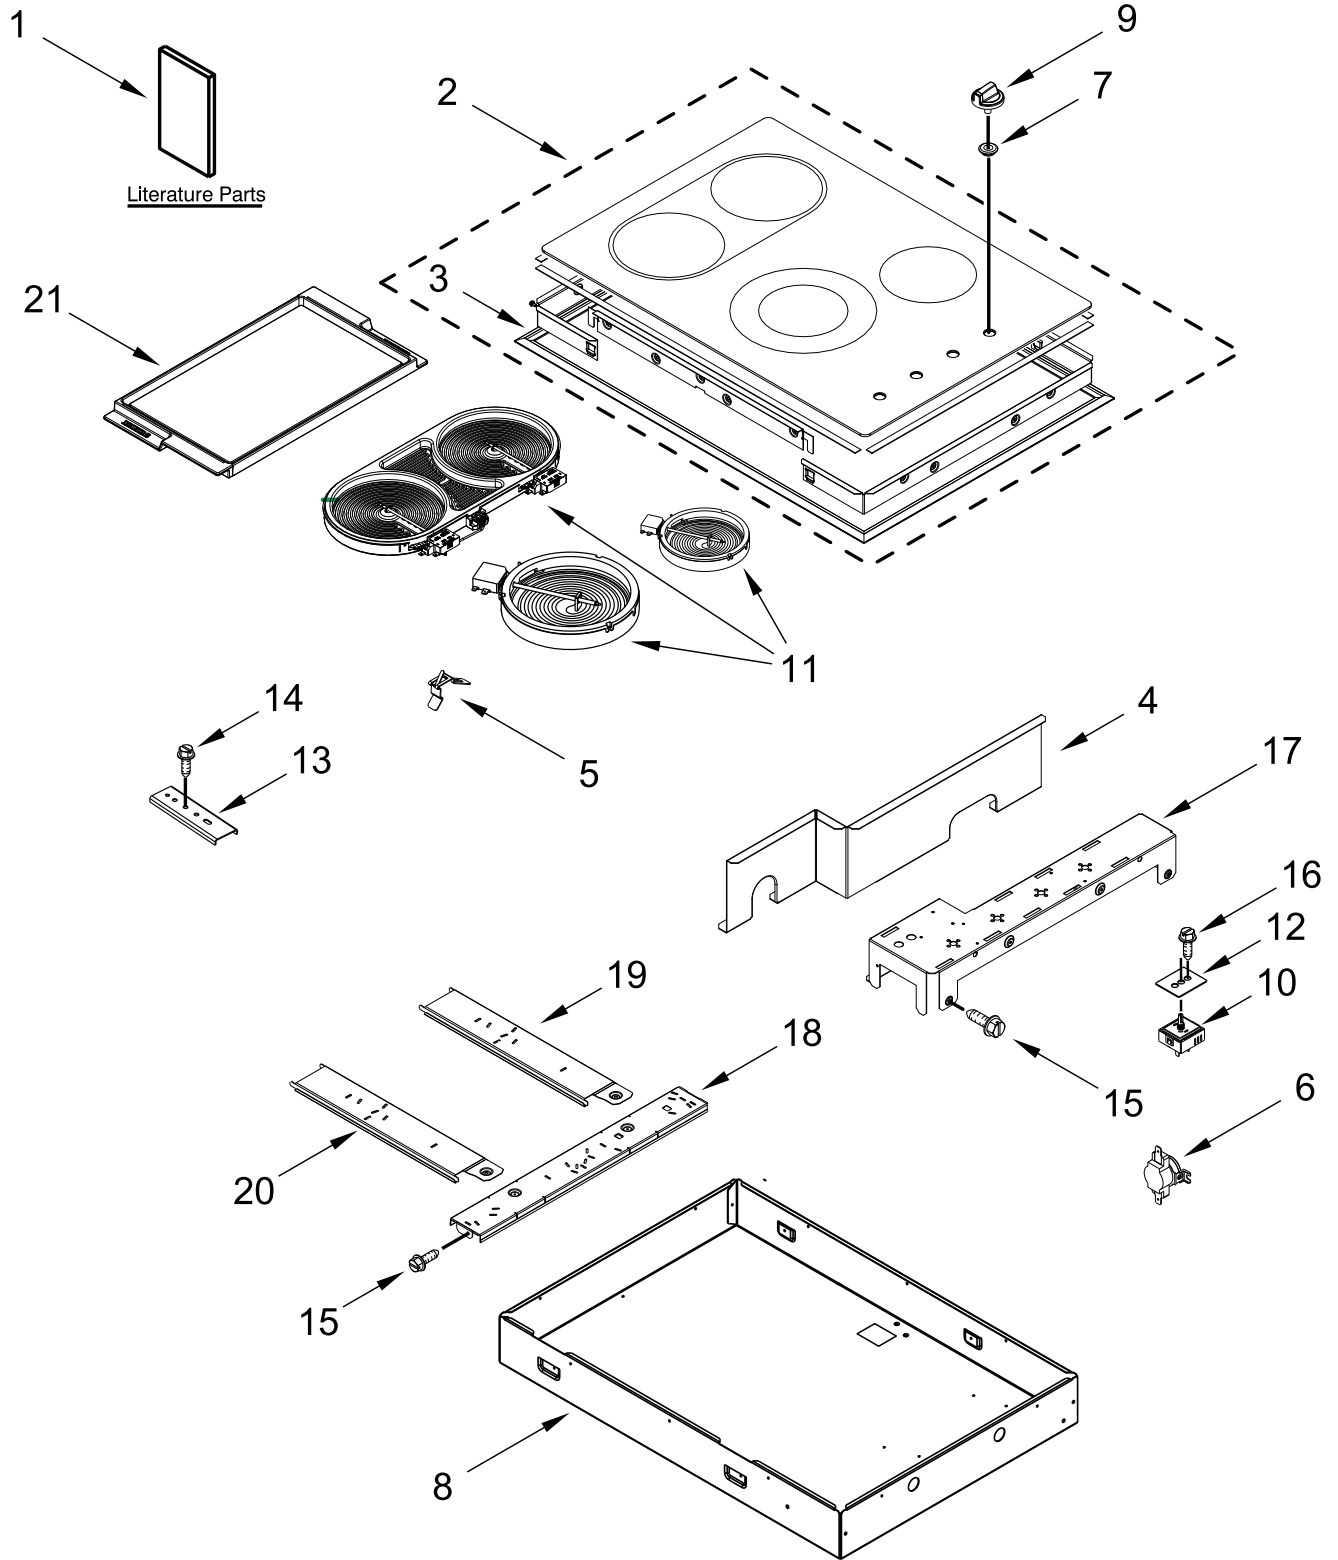

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	14	3400093	Screw
	W11206696	Instructions, Installation		W10895122	Black	15	7101P426-60	Screw
	W11245478	Instructions, Undercounter Installation		W10859808	Stainless	16	7101P309-60	Screw
	W11161590	Guide, Use & Care	10	W10437092	Switch, Infinite (Left Front and Right Front)	17	W11215837	Plate, Switch
	W11238363	Diagram, Wiring		W10843843	Switch, Infinite (Left Rear)	18	W11175477	Rail, Vertical
2		Cooktop		W10578768	Switch, Infinite (Right Rear)	19	W11175474	Rail, Horizontal Rear
	W11120984	Black		W10248259	Element, Bridge (Left Front and Left Rear)	20	W11175476	Rail, Horizontal Front
	W11120985	Stainless	11			21	W11192139	Grill/Griddle
3		Trim, Stainless (Not Serviced)		W10275048	Element (3000/1400W) (Right Front)		W11110551	Harness, Main
4	W11172720	Shield, Switch		8273994	Element (1200W) (Right Rear)		3400015	Screw, Grounding
5	W10225448	Spring, Element					7101P520-60	Screw
6	W10464566	Switch, TOD High Limit					7103P027-60	Nut
7		Grommet					3192439	Seal, Limiter
	W10293874	Black	12	3183956	Seal, Switch Cover		8286642	Tape, Foam
8		Box, Burner (Not Serviced)	13	4455917	Bracket, Cooktop Mounting		W11161211	Insulation, Cooktop (Knob)

FOLLOWING PARTS NOT ILLUSTRATED

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	W10355016	Cleaner, Stainless Steel
	31464	Cleaner, Cooktop
	31463	Protectant, Cooktop
	WA906B	Scraper, Cooktop
	W10355051	Cleaner, Cooktop