




30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE

MODELS:

WFE525S0JB0 (Black)
WFE525S0JW0 (White)


COOKTOP PARTS

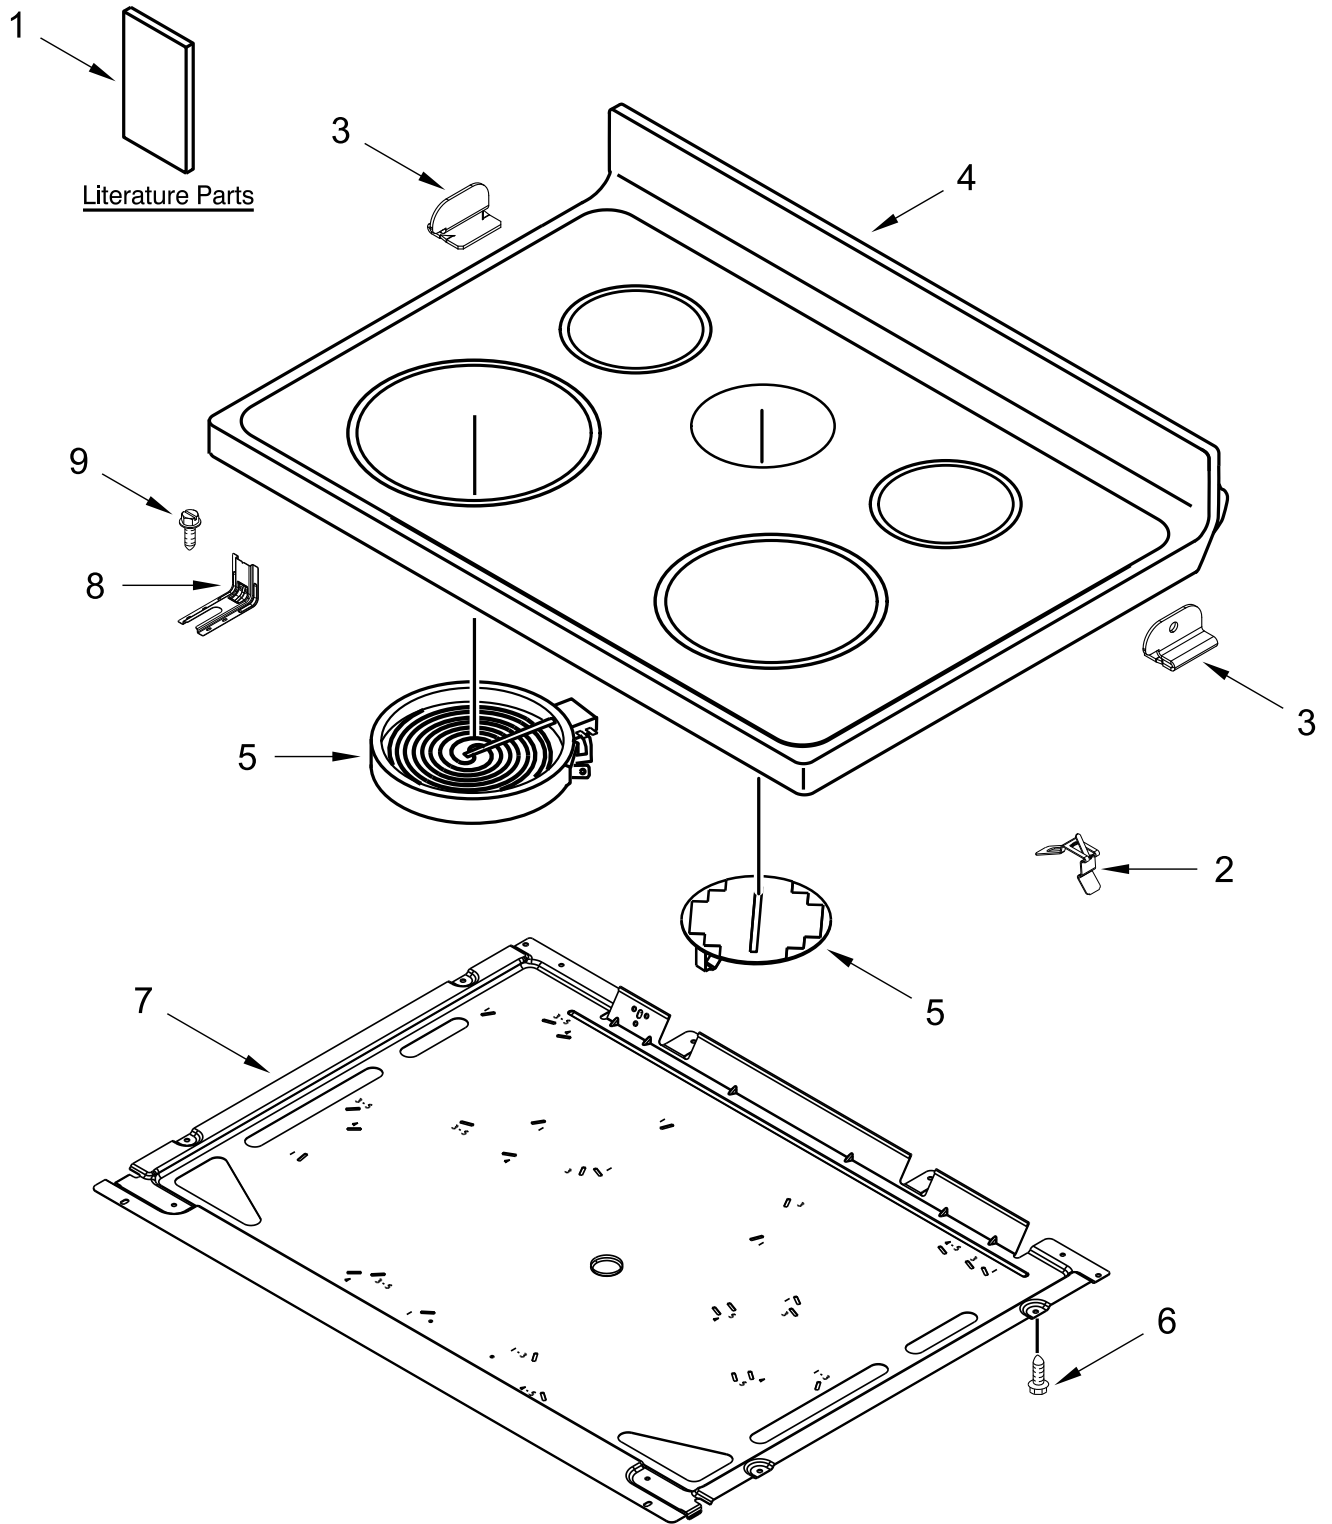

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	6	3196169	Screw
	W11333088	Instructions, Installation		W11034825	Black	7	W10691223	Pan, Radiant Element
	W11333073	Use and Care Guide		W11370569	White	8	W10306542	Bracket, Anti-Tip
	W11351201	Sheet, Tech	5	W10275048	Element (3000/1400W)	9	7101P485-60	Screw, Anti-Tip Kit
	W11351207	Diagram, Wiring			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
2	W10225448	Spring, Element		W10248261	Element (1200W)		W11344556	Harness, Main
3	W10607641	Bracket, Cooktop (Left)			(Left Rear, Right Rear)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)		8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
					(Right Front)		W11134592	Harness, Warm Zone
				W10799048	Element, Warm Zone (Center)			


CONTROL PANEL PARTS

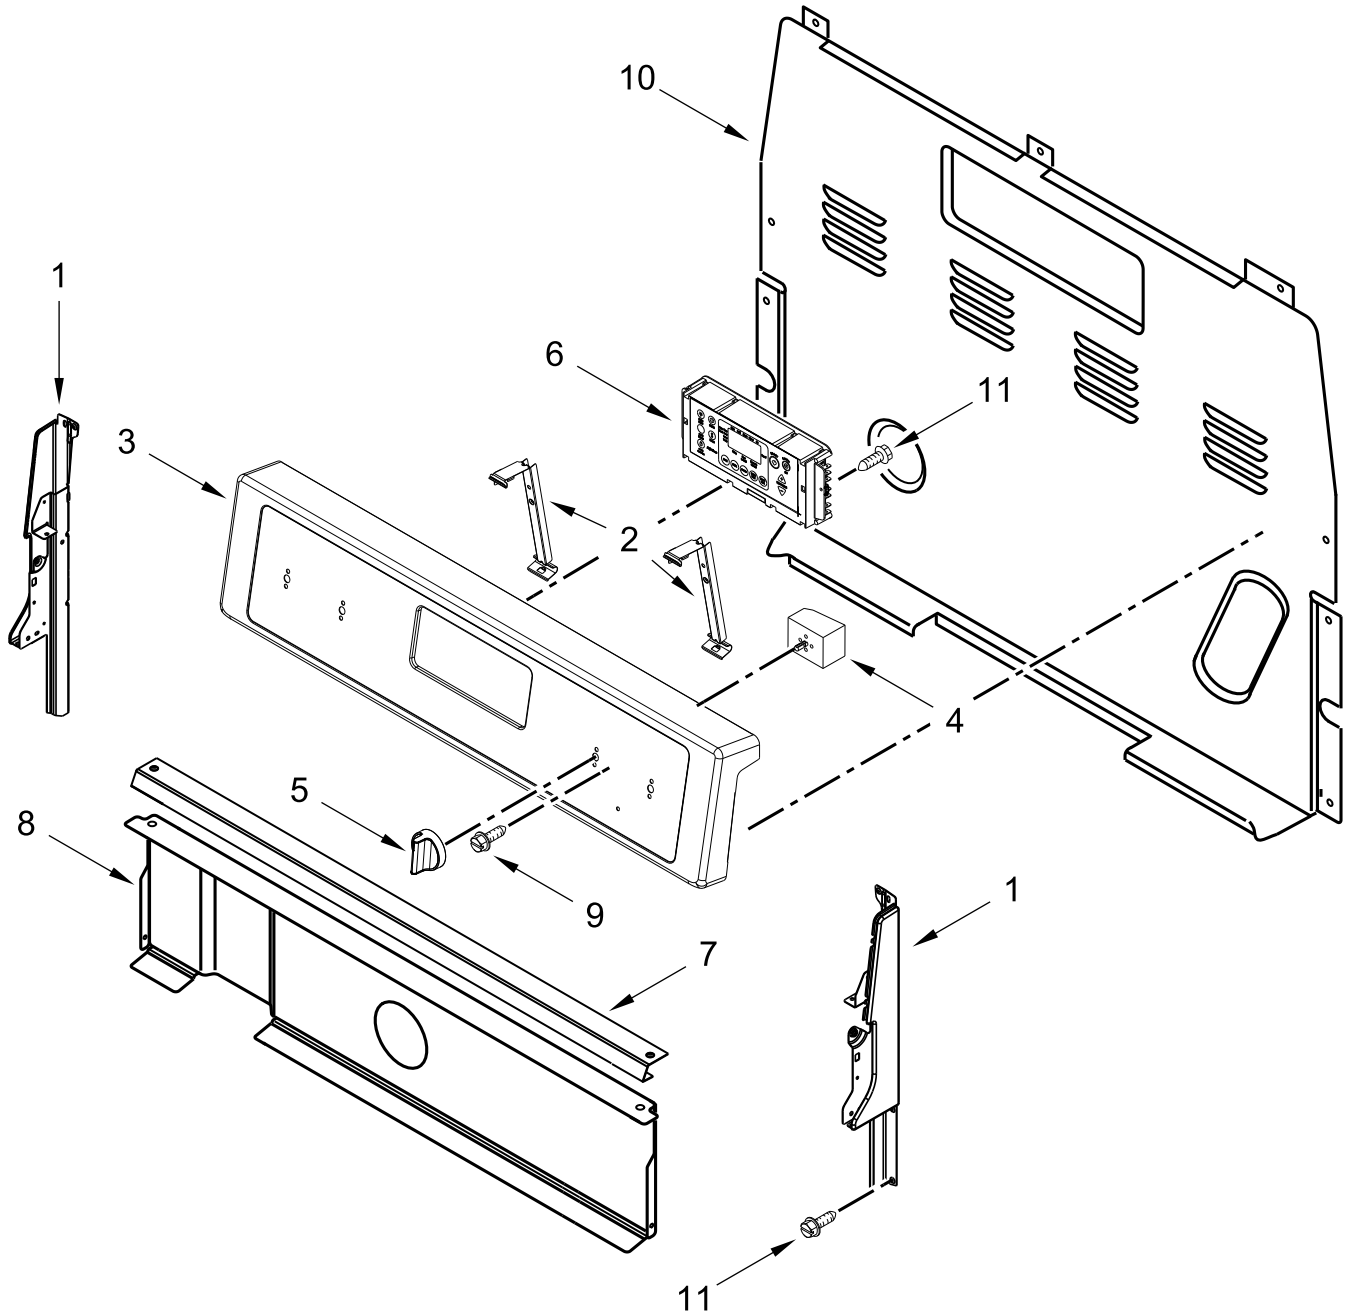

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11204519	Black
	W11130379	Black (Right)		3148951	Switch, Infinite		W11204520	White
	W11130371	White (Left)			(Right Rear and Left Rear)	7	W10525121	Bracket, Console Mounting
	W11130378	White (Right)						
2	W10695491	Bracket, Control		3148954	Switch, Infinite (Orange)	8	W10134247	Shield, Heat
3		Console, Assembly			(Right Front)	9	3400882	Screw
	W11027374	Black			Knob	10	8272473	Cover, Upper Rear
	W11027375	White	5			11	3196178	Screw
				W11022718	Black			
				W11022720	White			


CHASSIS PARTS

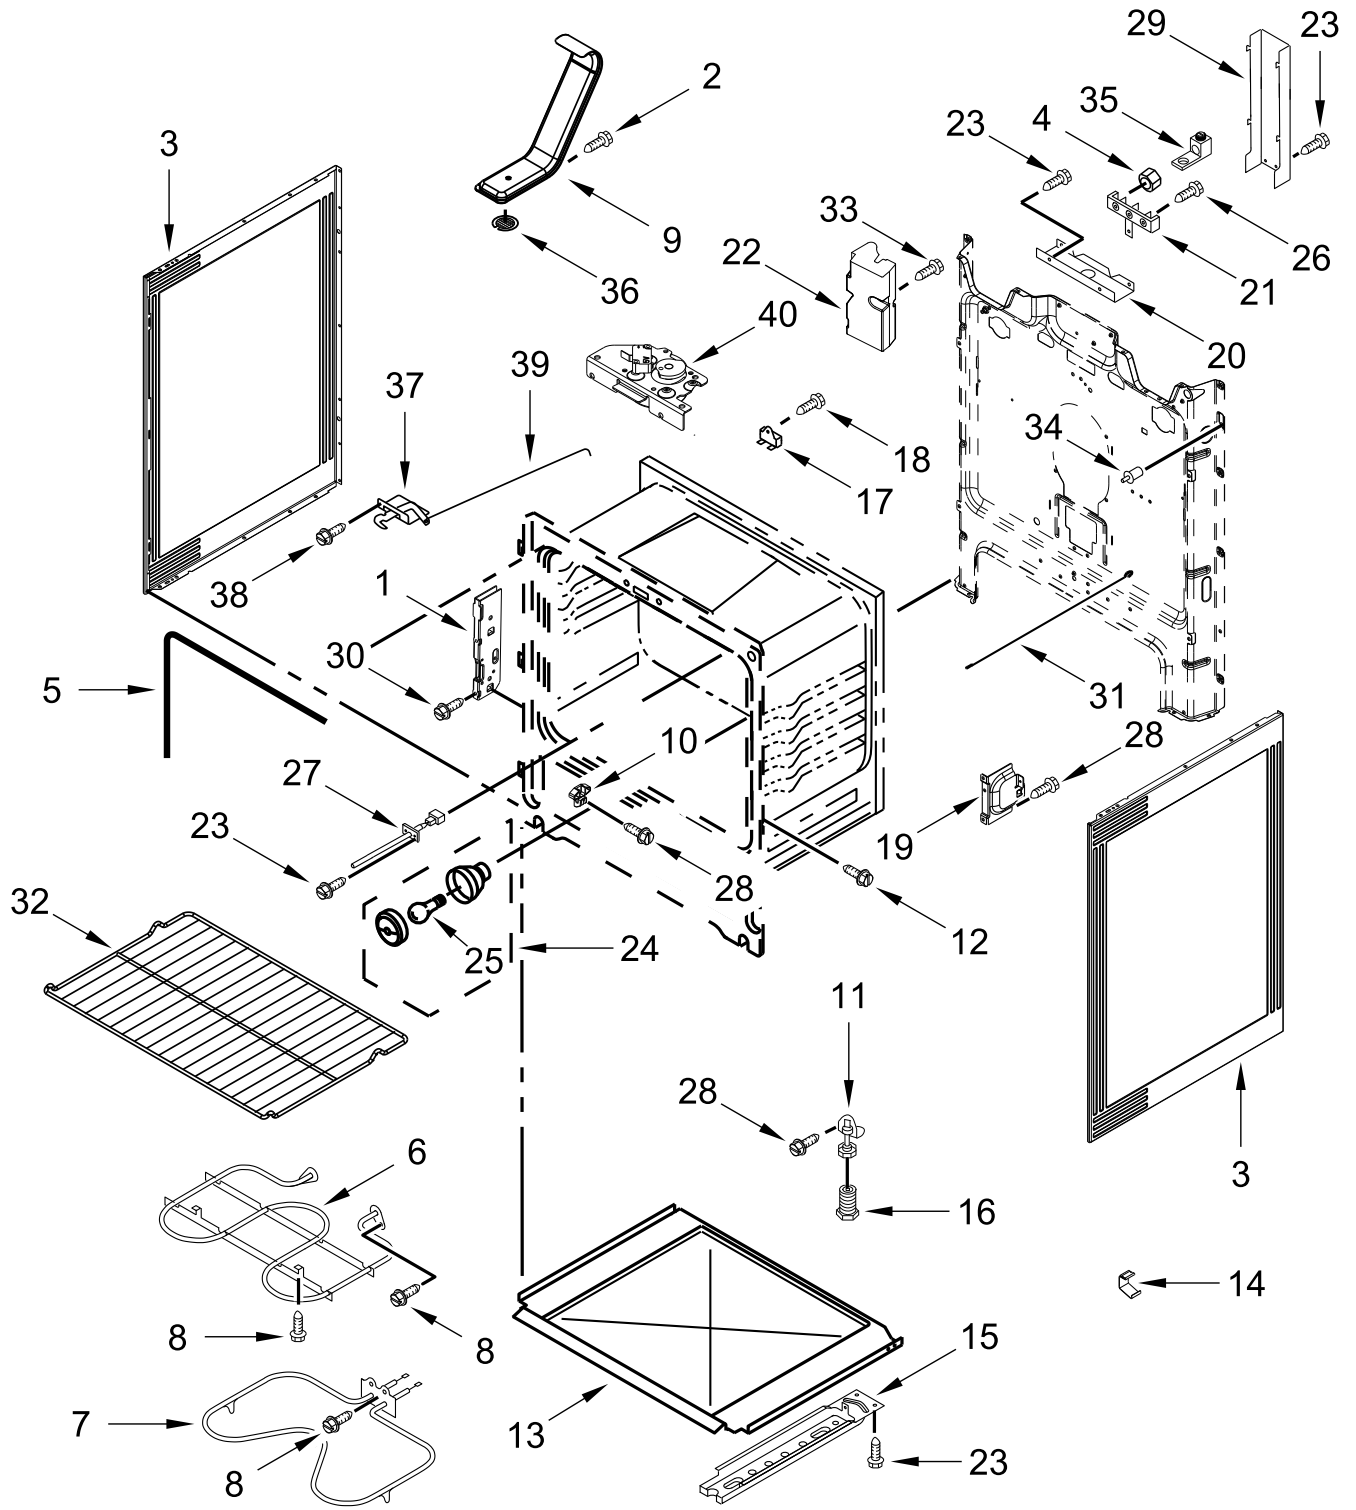

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block
2	3196154	Screw	17	3196548	Fuse, Thermal	36	W11092984	Screen, Vent
3		Panel, Side	18	3196172	Screw	37	9761013	Assembly, Door Latch (Front)
	W10162245	Black	19	W10404688	Clip, Oven Support	38	3196560	Screw
	W10575396	White	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
4	3400029	Nut	21	W10245259	Block, Terminal	40	W10107820	Assembly, Door Latch (Rear)
5	W10658354	Seal, Door	22	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
6	9757340	Element, Broil	23	3196178	Screw	W10774939		Insulation, Wrap
7	W11111743	Element, Bake	24	W11175594	Assembly, Light	W11127325		Insulation, Back
8	3196174	Screw	25	W10571723	Bulb, Halogen 40 Watts	W10333344		Insulation, Flue
9	W10134285	Tube, Vent	26	3400016	Screw			
10	W10674705	Glide, Drawer Front	27	W10181986	Sensor, Oven			
11	W10341186	Assembly, Front Foot	28	3196169	Screw			
12	W10067840	Screw	29	W10326122	Cover, Terminal Block			
13	8054068	Retainer, Insulation	30	W10031780	Screw			
14	W10137382	Clip, Panel	31	9757239	Rod, Door Switch			
15	W10390008	Assembly, Base Rail (Left)	32	W10268578	Rack, Oven			
	W10390007	Assembly, Base Rail (Right)	33	W11034869	Screw			
			34	W10627802	Switch, Door			


DOOR PARTS

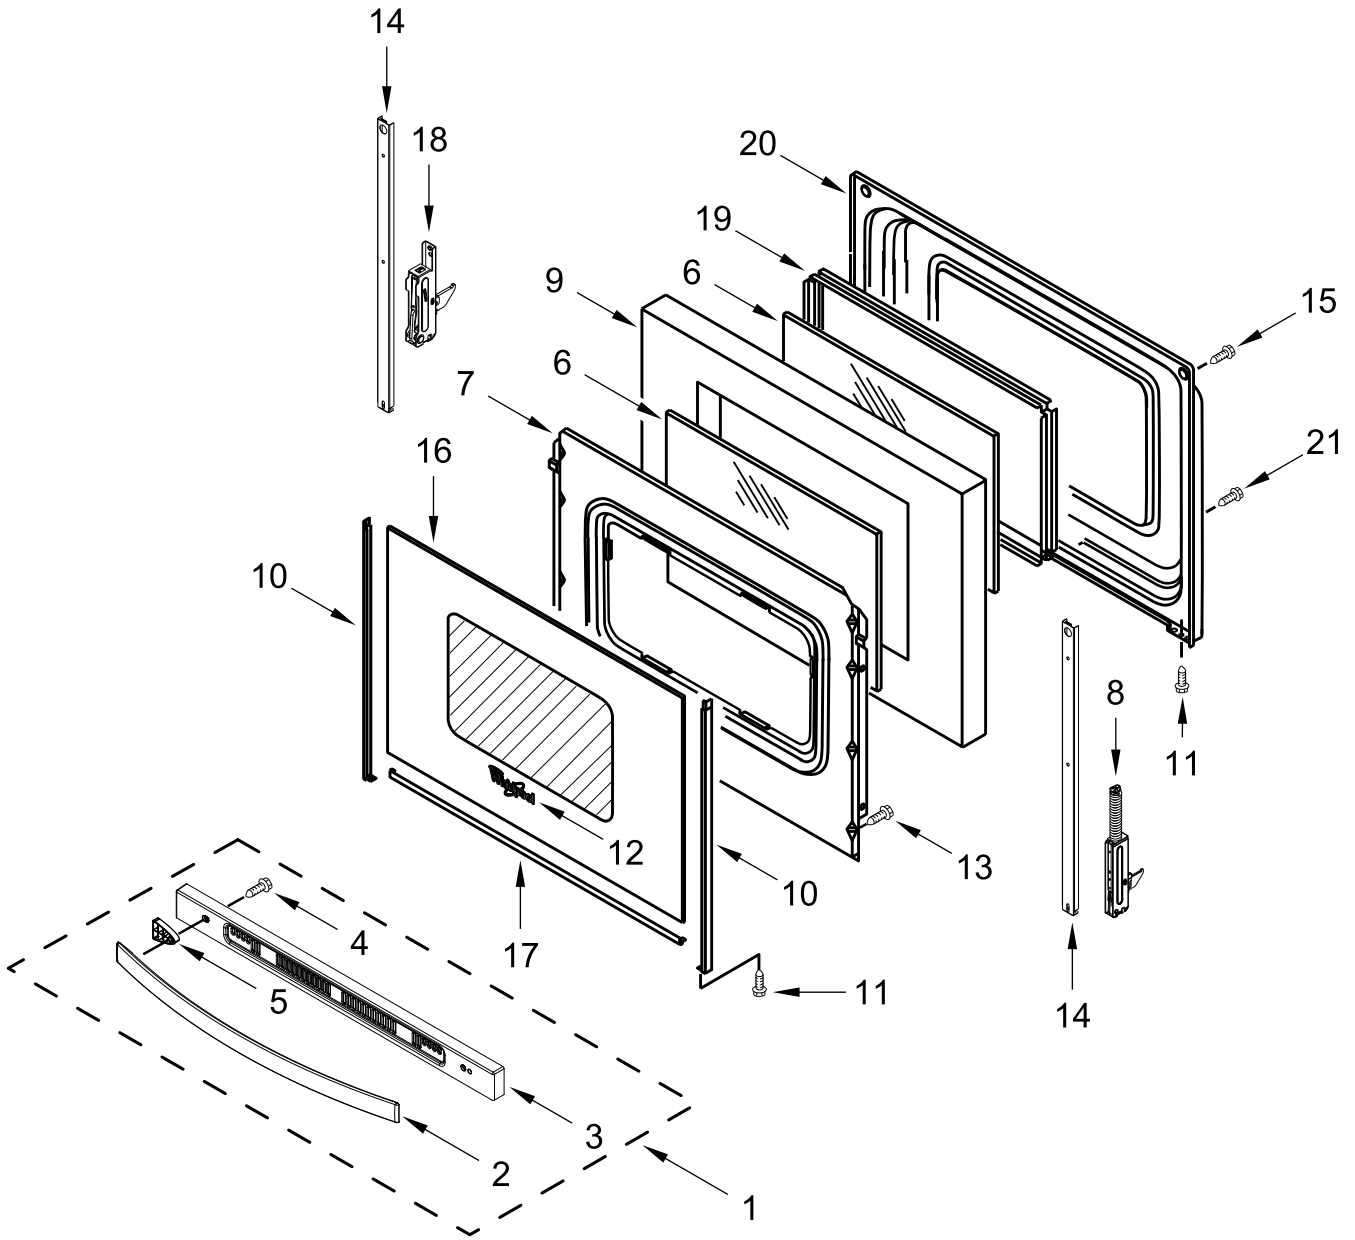

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299226	Hinge, Active	17		Trim, Lower
	W11039085	Black	9	W10278991	Insulation, Door Strip		8523177	Black
	W11039084	White	10		Trim, Side		8523175	White
2		Door Handle		W10746436	Black (Left)	18	W10299227	Hinge, Door (Passive)
	W11022643	Black		W10746435	Black (Right)	19	W10316950	Frame, Glass
	W11022644	White		8523172	White (Left)	20	9761344	Liner, Door
3		Trim, Vent		8523166	White (Right)	21	W10031790	Screw
	W10310922	Black	11	W10327235	Screw			
	W10310920	White	12	W10884775	Nameplate			
4	W10480830	Screw	13	W10031780	Screw			
5		Standoff (Not Serviced, Order Handle and Vent Assembly)	14	W10544179	Strap, Door			
			15	W10200660	Screw			
6	9758162	Glass, Inner	16		Glass Assembly, Outer Door			
7	9761357	Retainer, Insulation		W10884159	Black			
				W10409945	White			

DRAWER PARTS

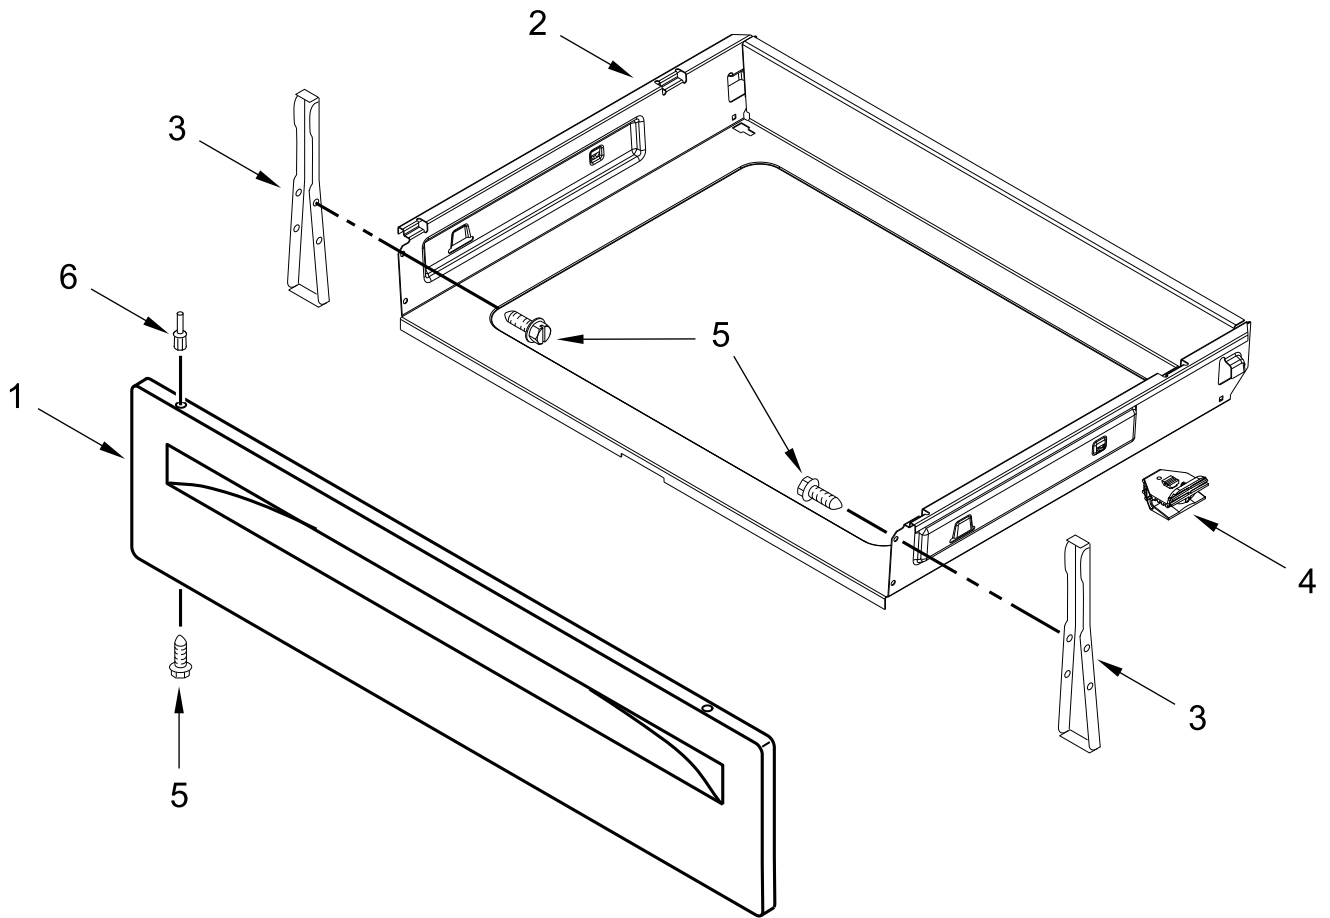

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462912	Bracket, Mounting Drawer	6		Rivet, Push
	W11123900	Black					3196813	Black
	W11123901	White	4	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage	5	3196165	Screw			

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting