



30" ELECTRIC DOUBLE OVEN RANGE



MODELS:

WGE745C0FE05 (Black Ice)

WGE745C0FH05 (White Ice)

WGE745C0FS05 (Stainless)


COOKTOP PARTS

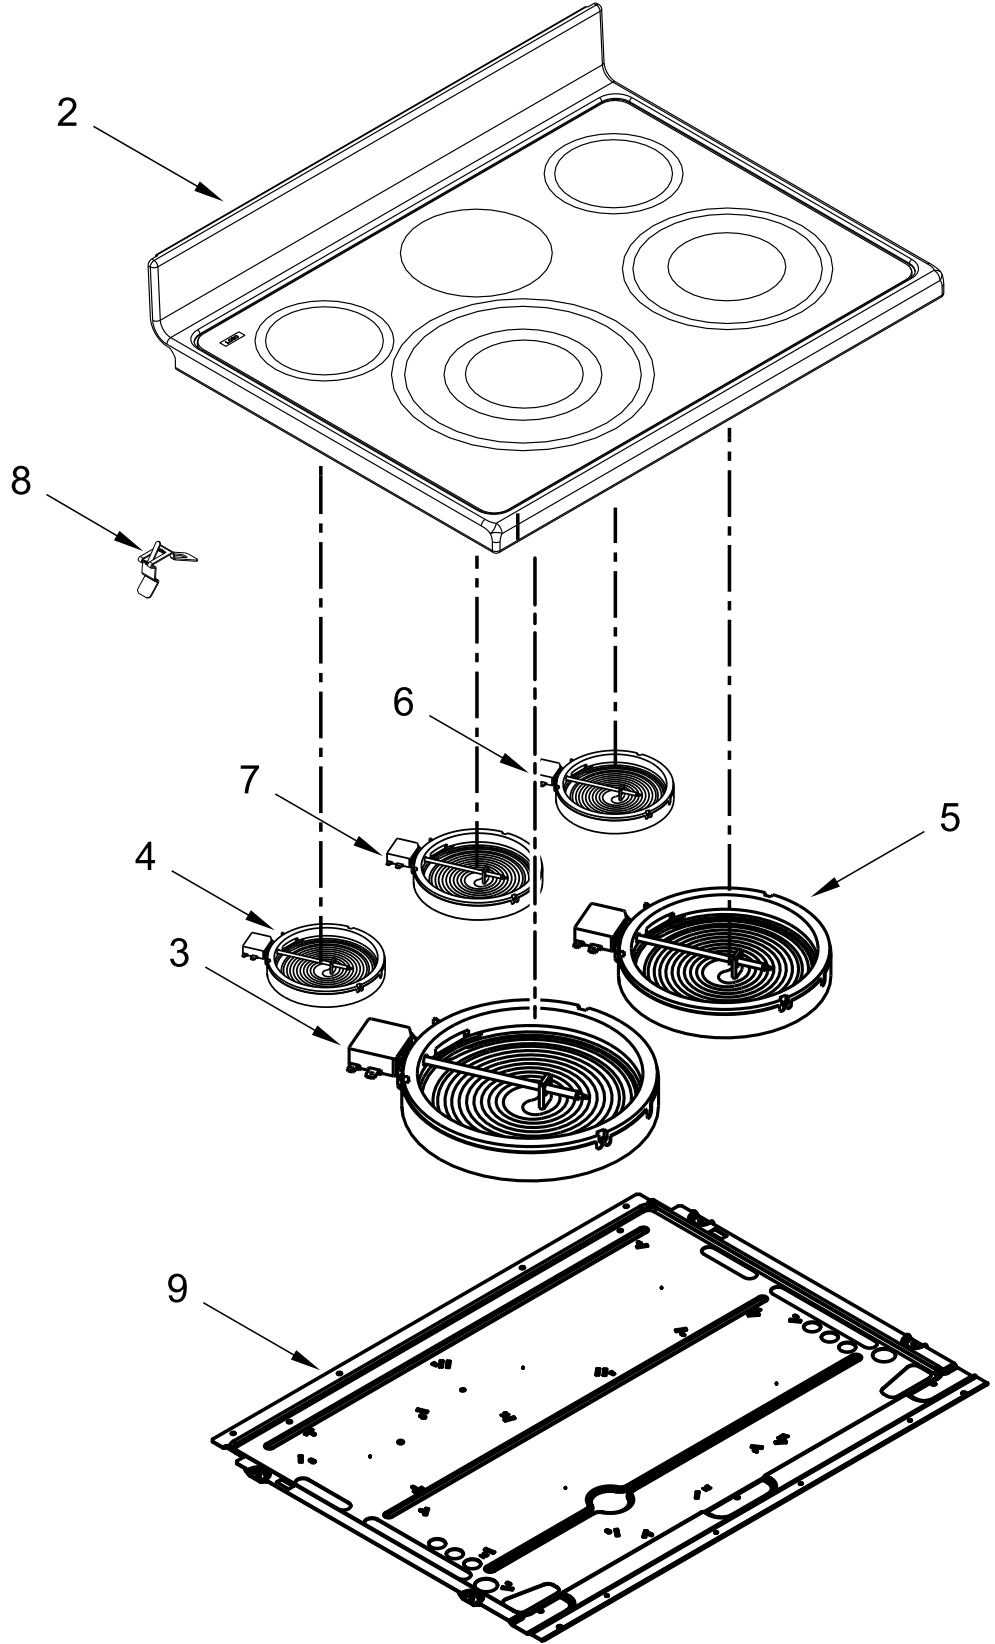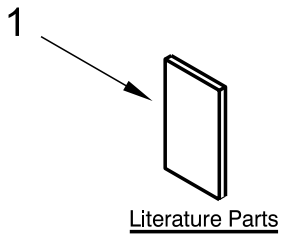

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10799048	Element, Warm Zone (Center Rear)	9	W10260946	Panel, Element Support
	W11427490	Owner's Manual						FOLLOWING PARTS NOT ILLUSTRATED
	W11325875	Tech Sheet	8	W10225448	Spring, Element			
	W11430272	Quick Start Guide					W11134679	Harness, Main
2		Cooktop					W11217844	Harness, Infinite Switch (Left)
	W10828383	Black					W11172427	Harness, Infinite Switch (Right)
	W10828384	White					W11172428	Harness, EOL (DOFSR)
3	W10187839	Element (3000W) (Left Front)					W11190451	Harness, Cooktop
4	W10342780	Element (1300W) (Left Rear)					W11172531	Harness, Sensor & Locks
5	W10275048	Element (3000/1400W) (Right Front)					7101P027-60	Screw, Ground
6	8273994	Element (1200W) (Right Rear)					8019P013-60	Clip, Wire Lock
							7401P157-60	Block, Bare Wire Adapter


CONTROL PANEL PARTS

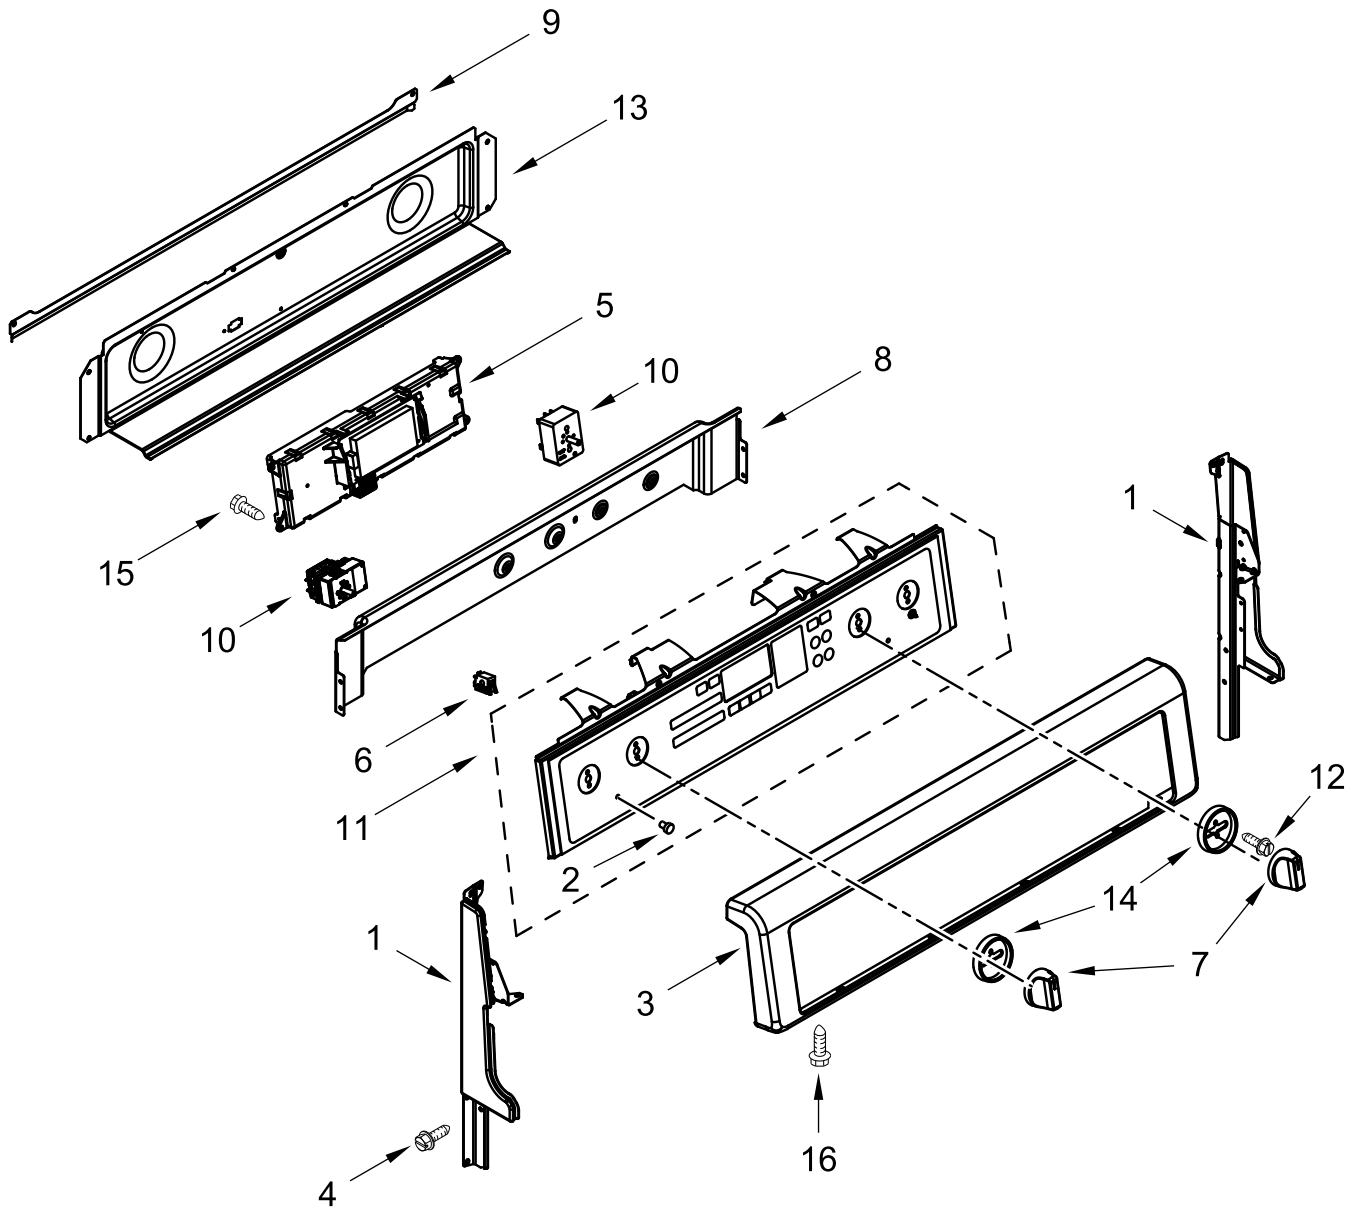

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	7		Knob	11		Assembly, Membrane (Including Bracket)
	W10319109	Black (Left)		W10850040	Chrome		W11527483	Black
	W10319111	Black (Right)	8	W10278697	Shield, Vent		W11527481	White
	W10319110	White (Left)	9	W10299338	Shield, Wire Cover		W11527484	Stainless
	W10319112	White (Right)	10	W10437097	Switch, Infinite (Left Front)	12	W10674068	Screw
2	3196068	Lens, Indicator		W10437094	Switch, Infinite (Left Rear)	13	W10776098	Cover, Backguard
3		Console		W10312185	Switch, Infinite (Right Front)	14		Bezel
	W10318551	Black		7403P373-60	Switch, Infinite (Right Rear)		W10850042	Stainless
	W10318552	White				15	7101P434-60	Screw
	W10318550	Stainless				16	7101P633-60	Screw (Black)
4	7101P500-60	Screw						
5	W11515091	Control, Maxwell Electronic						
6	7407P136-60	Light, Indicator						


CHASSIS PARTS

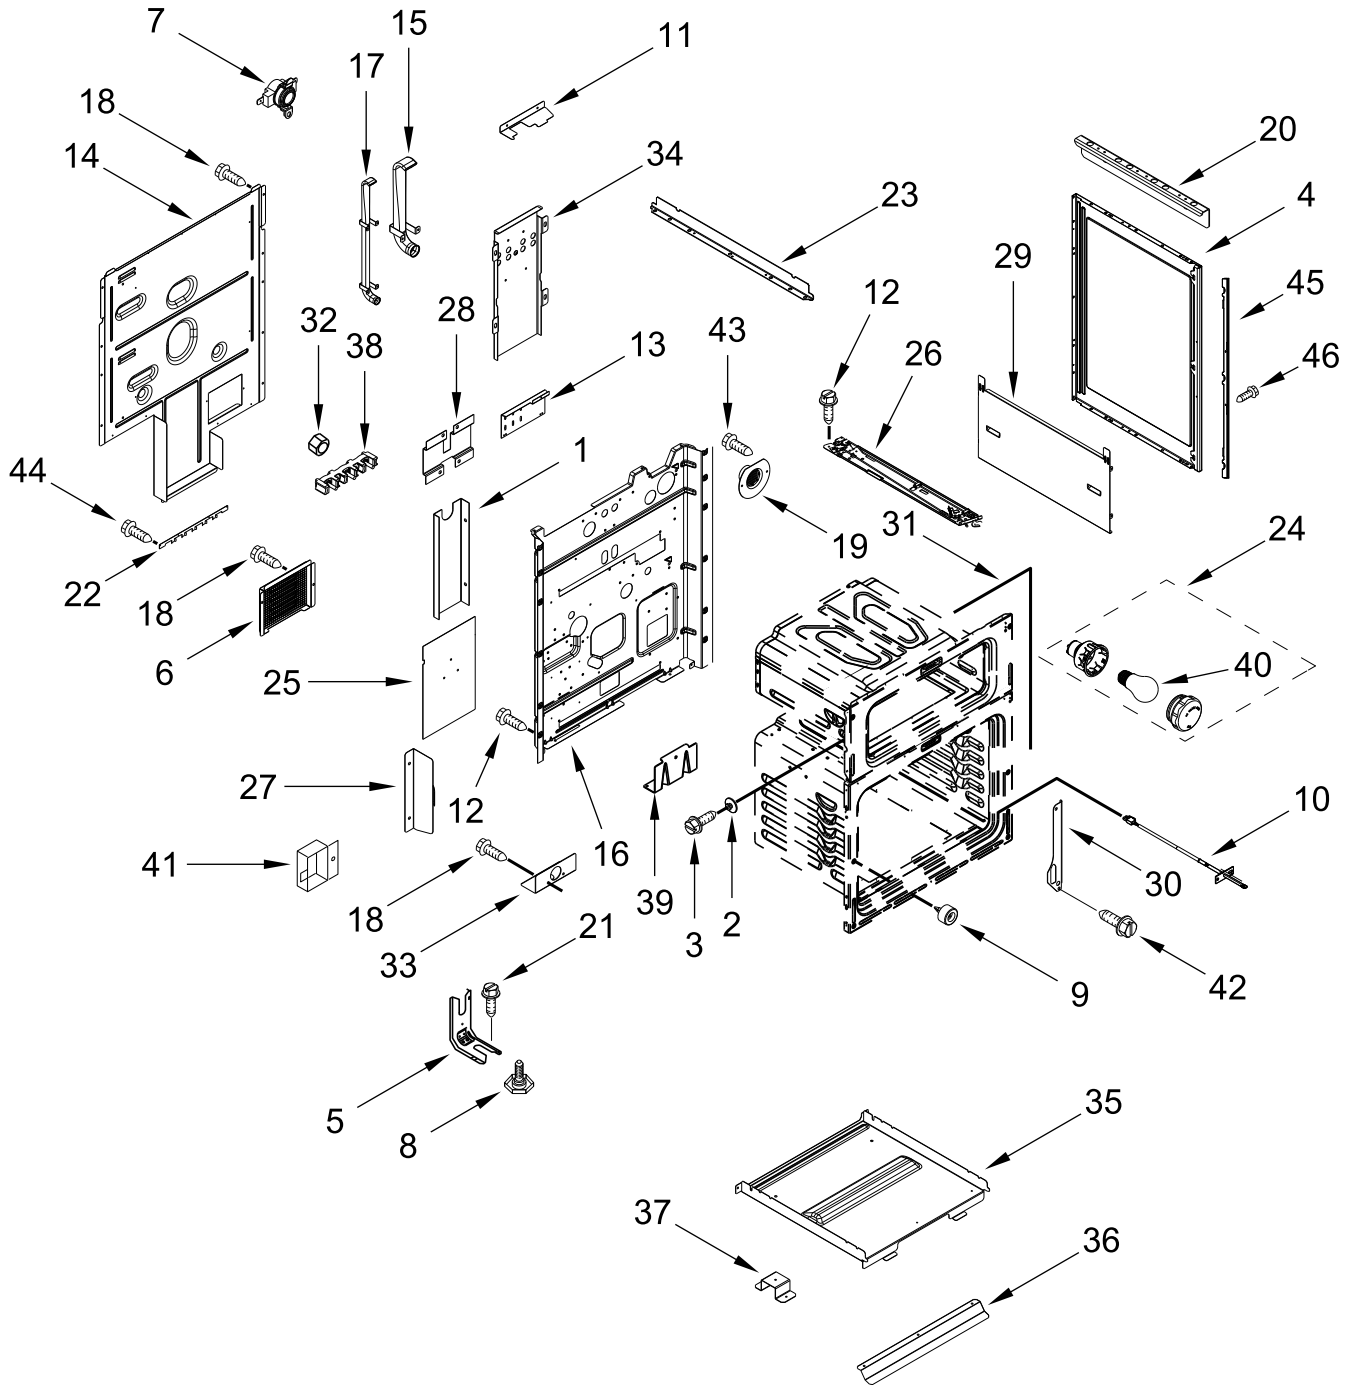

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	21	7101P485-60	Screw, Anti-Tip Kit	37	W10260545	Clip, Retaining
2	W11479123	Spacer, Side Panel	22	8036P012-60	Shield, Power Cord	38	7401P039-60	Block, Terminal
3	7101P642-60	Screw	23	W10357697	Bracket, Side Panel	39	W10863342	Support, Lower Oven
4		Panel, Side	24	W11544370	Light Assembly	40	7407P103-60	Bulb, Light
	W11477310	Black	25	W10311987	Shield, Cord (Right)	41	8285593	Cover, Connector
	W11477311	White	26	W10683517	Lock, Rear Mount	42	4449743	Screw
5	3801F656-51	Bracket, Anti-Tip	27	W10268560	Cover, Wire Lower	43	7101P434-60	Screw
6	W10312612	Cover, Access (Terminal Block)	28	7003P104-60	Insulator, Heat Shield	44	489290	Screw
7	7403P899-60	Switch, High Limit	29	W10538516	Shield, Side Insulation	45	W11453994	Bracket, Rubber Barrier
8	7101P507-60	Foot, Leveler	30	W10410463	Cover, Hinge (Left)	46	7101P633-60	Screw (Black)
9	W10105790	Bumper & Screw		W10410461	Cover, Hinge (Right)			FOLLOWING PARTS NOT ILLUSTRATED
10	7430P044-60	Sensor, Oven	31	W11491754	Gasket, Oven Door (Upper)	W10271637		Insulation, Floor
11	W10268559	Cover, Lower Wire		W11491753	Gasket, Oven Door (Lower)	W11462751		Insulation, Wrapper
12	7101P426-60	Screw	32	3400029	Nut	W10322111		Insulation, Back
13	W10332449	Shield, Cord	33	W10190166	Bracket, Power Supply	W10204079		Insulation, Middle
14	W10261386	Cover, Main Wire	34	W10261388	Bracket, Terminal	W10204085		Insulation, Main Front Strip
15	W10337391	Tube, Vent (Upper)	35	W10548601	Pan, Element	W11463064		Insulation, Hidden Bake Pouch
16	W10668730	Back, Main	36	W10253470	Bracket, Retaining			
17	W10323793	Tube, Vent (Lower)						
18	7101P338-60	Screw						
19	W10322408	Adapter, Vent Tube						
20	W10319087	Bracket, U Channel						


INTERNAL OVEN PARTS

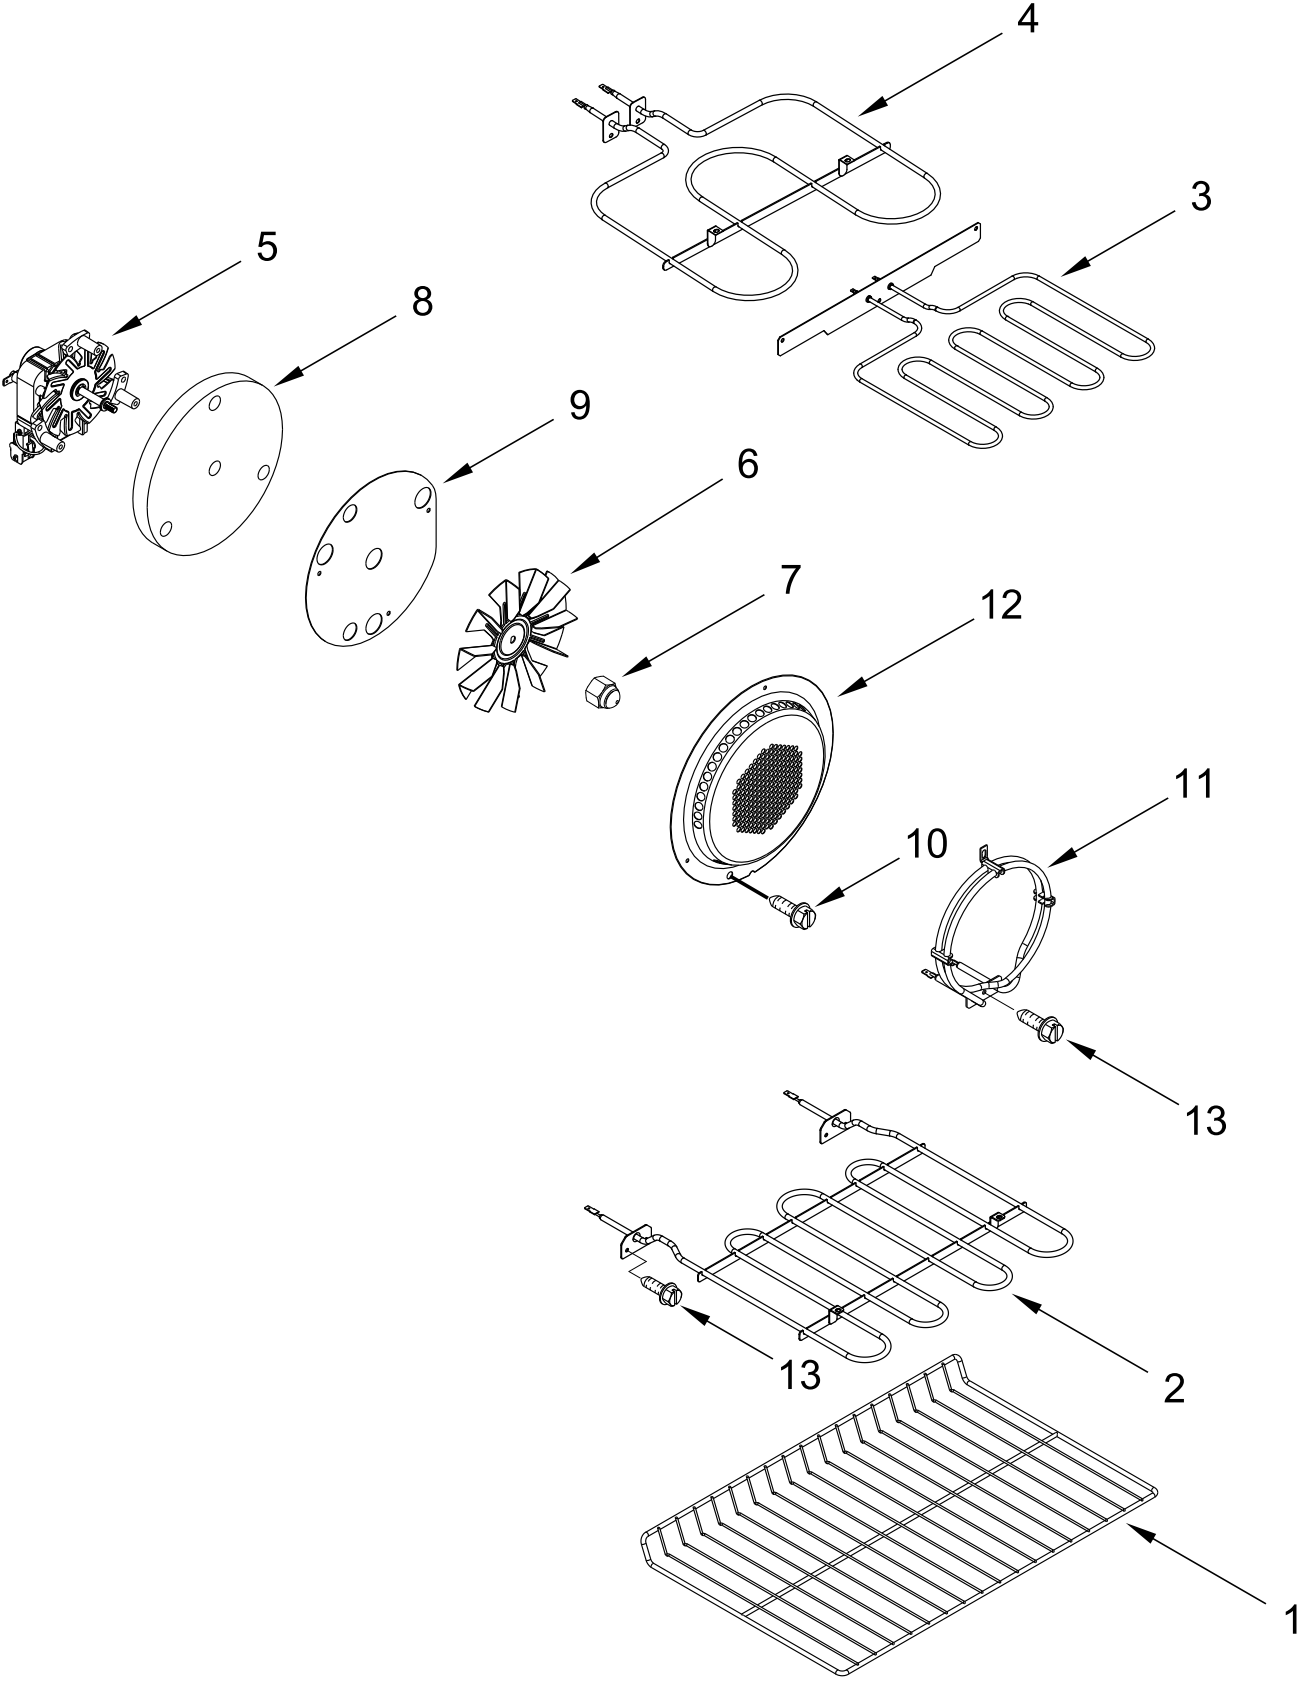

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10179152	Rack, Oven	6	W10631503	Blade, Fan	12	4448988	Cover, Fan
2	W10611615	Element, Broil (Lower)	7	W10631504	Nut, Acorn (LH)	13	7101P434-60	Screw
3	W11095935	Bake Element (Upper & Lower)	8	W10274268	Insulation, Convection Motor			
4	W11095934	Broil Element (Upper)	9	W10339476	Plate, Insulation			
5	W11190725	Motor, Convection	10	W10720084	Screw			
			11	W10271639	Element, Convection (240VAC)			


UPPER DOOR PARTS

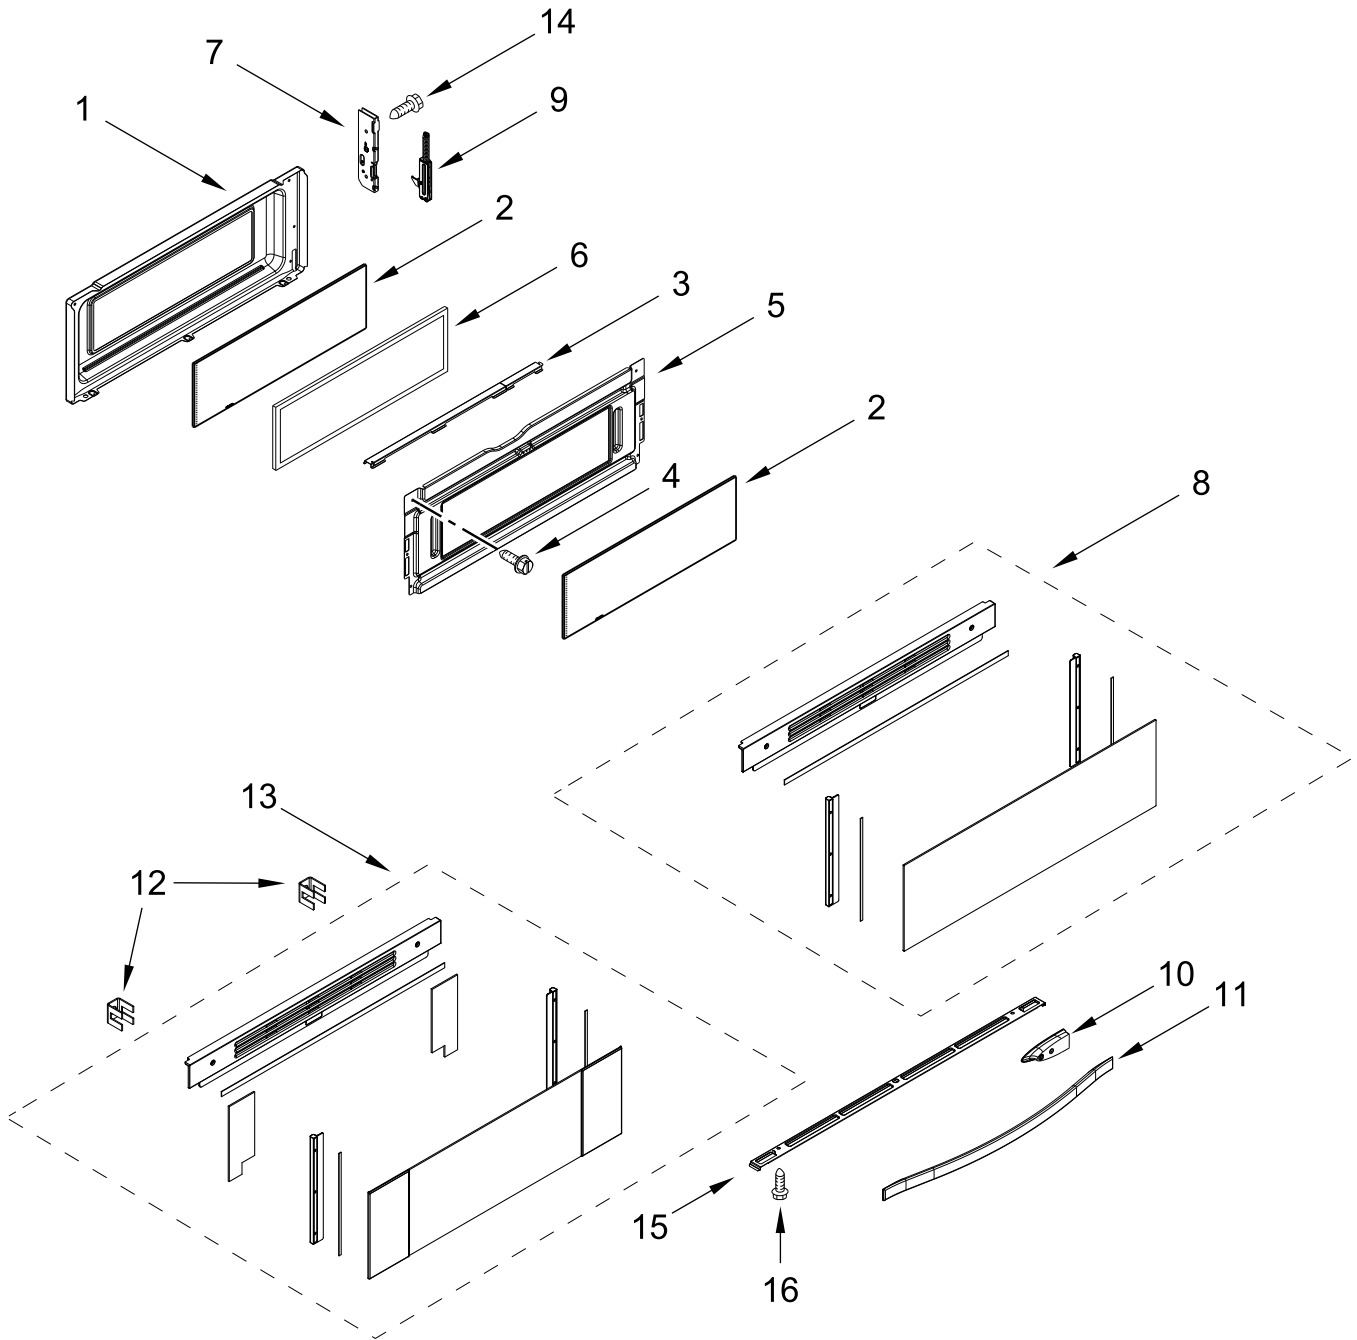

UPPER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051040	Lining, Door	9	W10485733	Hinge, Door (Left)	13		Assembly, Door
2	W11099272	Glass, Inner		W10485732	Hinge, Door (Right)		W10845034	Stainless
3	W10272708	Frame, Glass	10		Standoff, Handle	14	W10031780	Screw
4	W10292297	Screw		W10410341	Black	15	W11448964	Bracket, Door Trim
5	W10485723	Retainer, Insulation		W10429492	White	16	W10284411	Screw with Washer
6	W10321271	Insulation, Door	11		Handle, Door			
7	W10289077	Receiver, Hinge		W10254687	Stainless			
8		Assembly, Door	12	W10575917	Spacer, Vent Trim			
	W10675404	Black Ice			(Stainless Models Only)			
	W10675403	White Ice						

LOWER DOOR PARTS

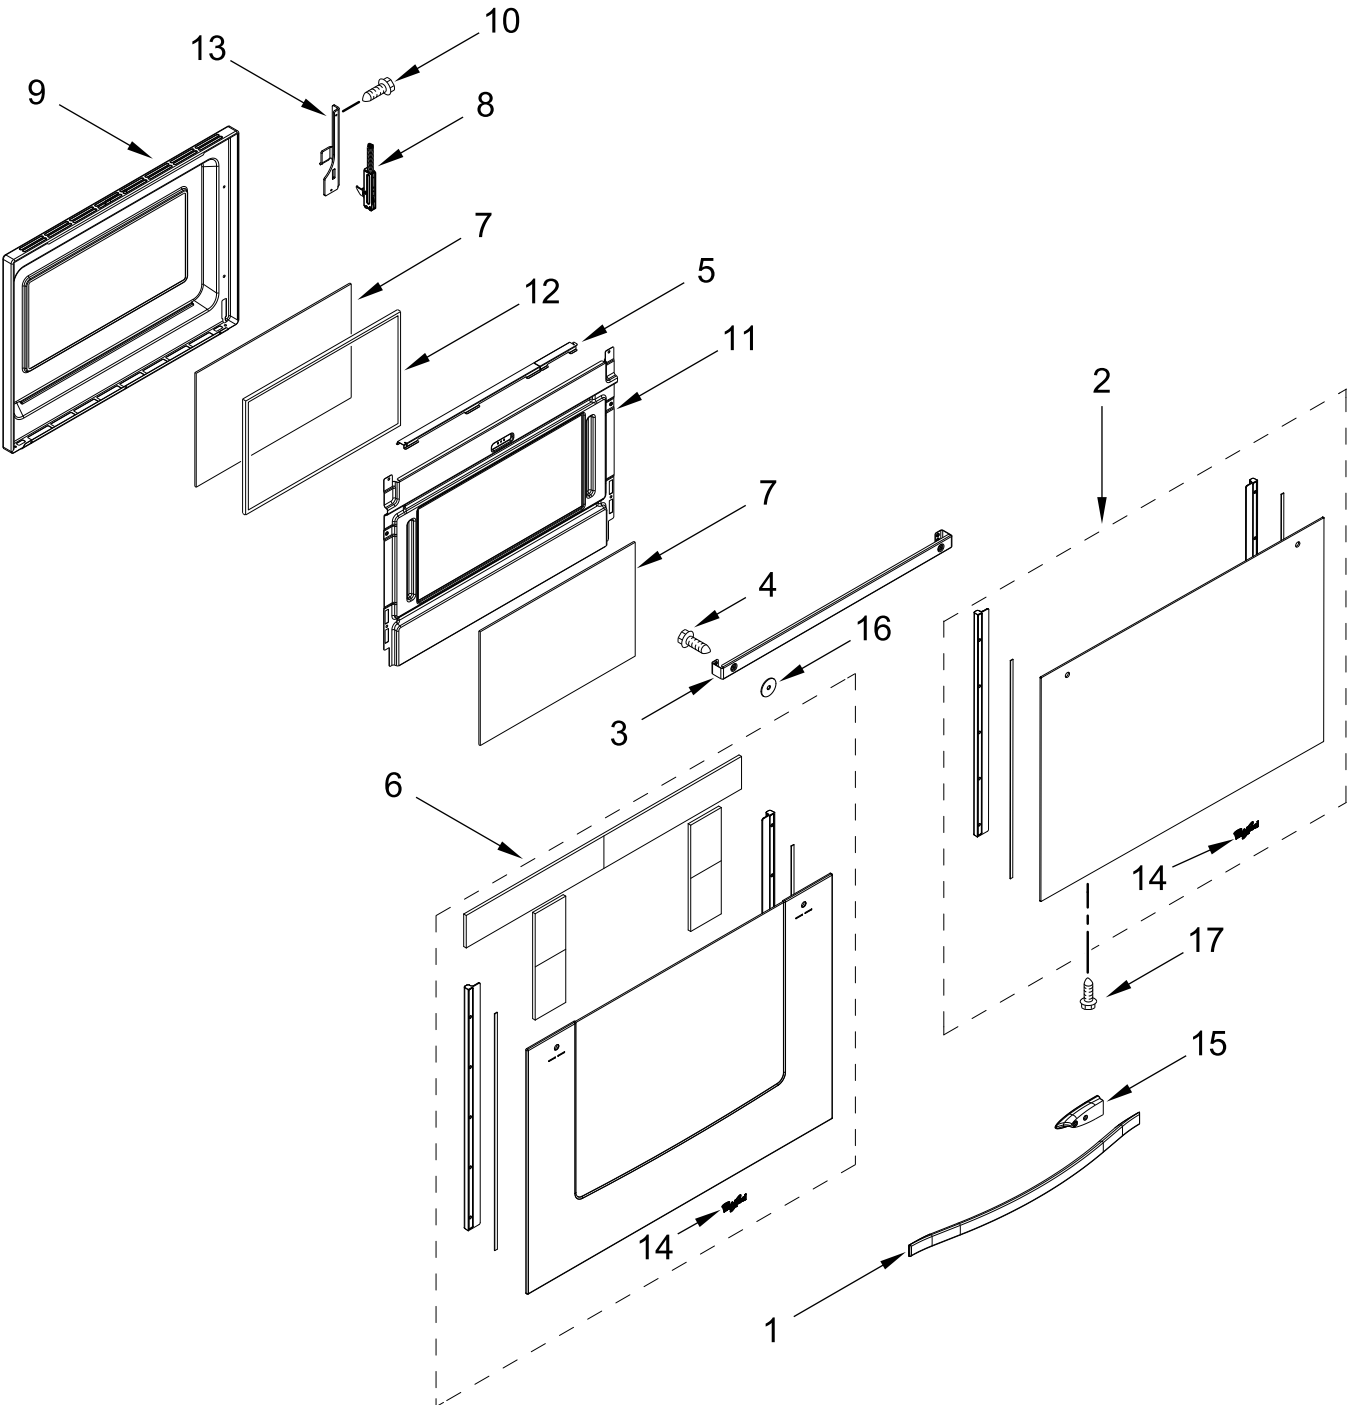

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door	6		Assembly, Door	13	W10272329	Receiver (Left)
	W10254687	Stainless		W11528034	Stainless		W10272328	Receiver (Right)
2		Assembly, Door	7	9757706	Glass, Inner	14	W10884775	Badge
	W11528029	Black Ice	8	W10335434	Hinge, Door (Left)	15		Standoff, Handle
	W11528053	White Ice		W10335433	Hinge, Door (Right)		W10410341	Black
3	W10294695	Bracket, Handle	9	W10272698	Lining, Door		W10429492	White
	W10575689	Bracket, Handle (Stainless Models Only)	10	4449743	Screw	16	7109P084-60	Washer, Fiber
4	W10317886	Screw	11	W10340464	Retainer, Insulation	17	W10284411	Screw with Washer
5	W10272594	Frame, Glass	12	W10321285	Insulation, Door			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)
		PAINT, SPRAY
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORIES
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	4378577	Stone, Brick Pizza
	W10355051	Cleaner, Cooktop