



## **ELECTRIC COMBO WALL OVEN**


### **MODELS:**

WOEC5027LB00 (Black)

WOEC5027LW00 (White)

WOEC5027LZ00 (Stainless)


# CONTROL PANEL PARTS

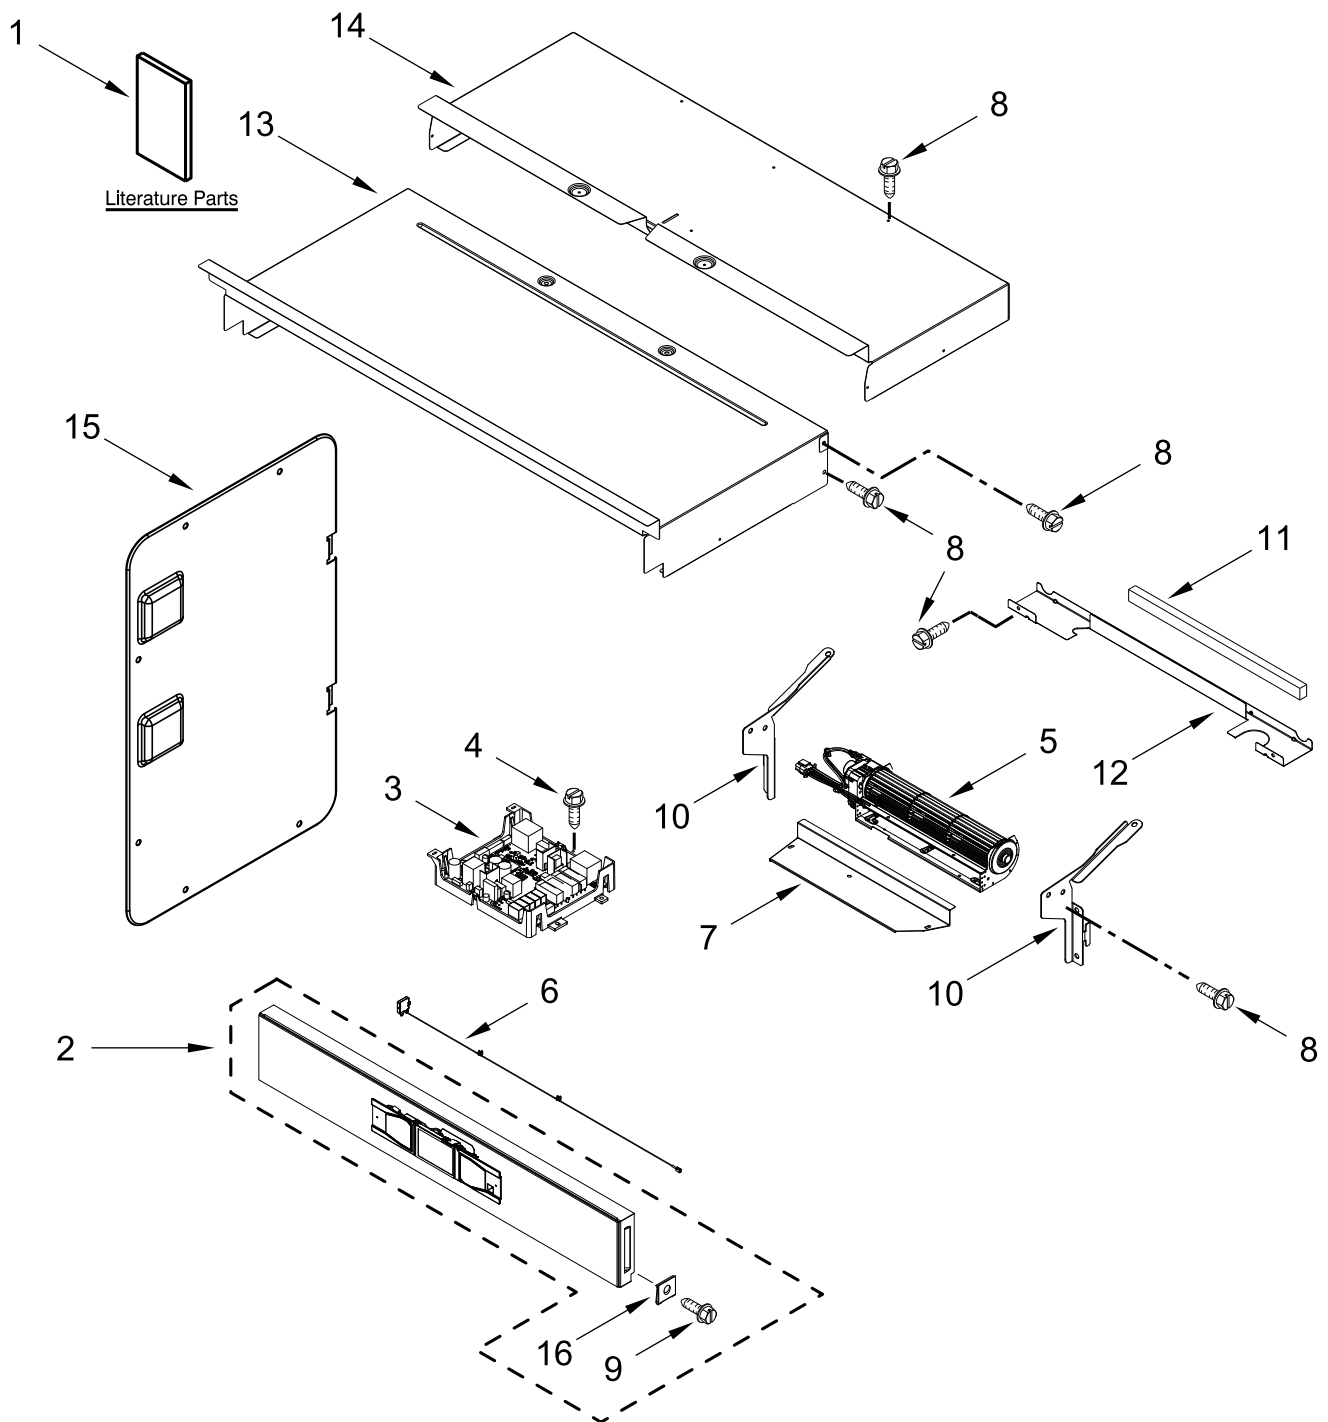

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10681157	Cover, Combo Blower	16	4450118	Nut
	W11555307	Owner's Manual	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	9	W11339492	Screw (Black)			
	W11601393	Tech Sheet	10	W10655463	Bracket, Blower (Left)	W11659377		Harness, Main
2		Assembly, Control Panel (Includes Overlay)		W10655462	Bracket, Blower (Right)	W11256629		Harness, Signal
	W11468019	Black (Used in Black and Stainless Models)	11	4451758	Block, Foam	W11264646		Harness, Door Latch
	W11568110	White	12	W11166802	Divider, Chassis Back	W11356990		Harness, Communication
3	W11585754	Control, Copernicus	13	W10318159	Chassis, Cover Top Front 27 In	W11226264		Strap, Ground
4	7101P460-60	Screw, Grounding	14	W11037652	Chassis, Cover Top Back 27 In WIFI	W11394923		Bag, Hardware
5	W11397930	Blower				313438		Clip, Harness
6	W11409842	Antenna	15	W10655467	Chassis, Combo Side	4448664		Clamp, Conduit


# OVEN PARTS

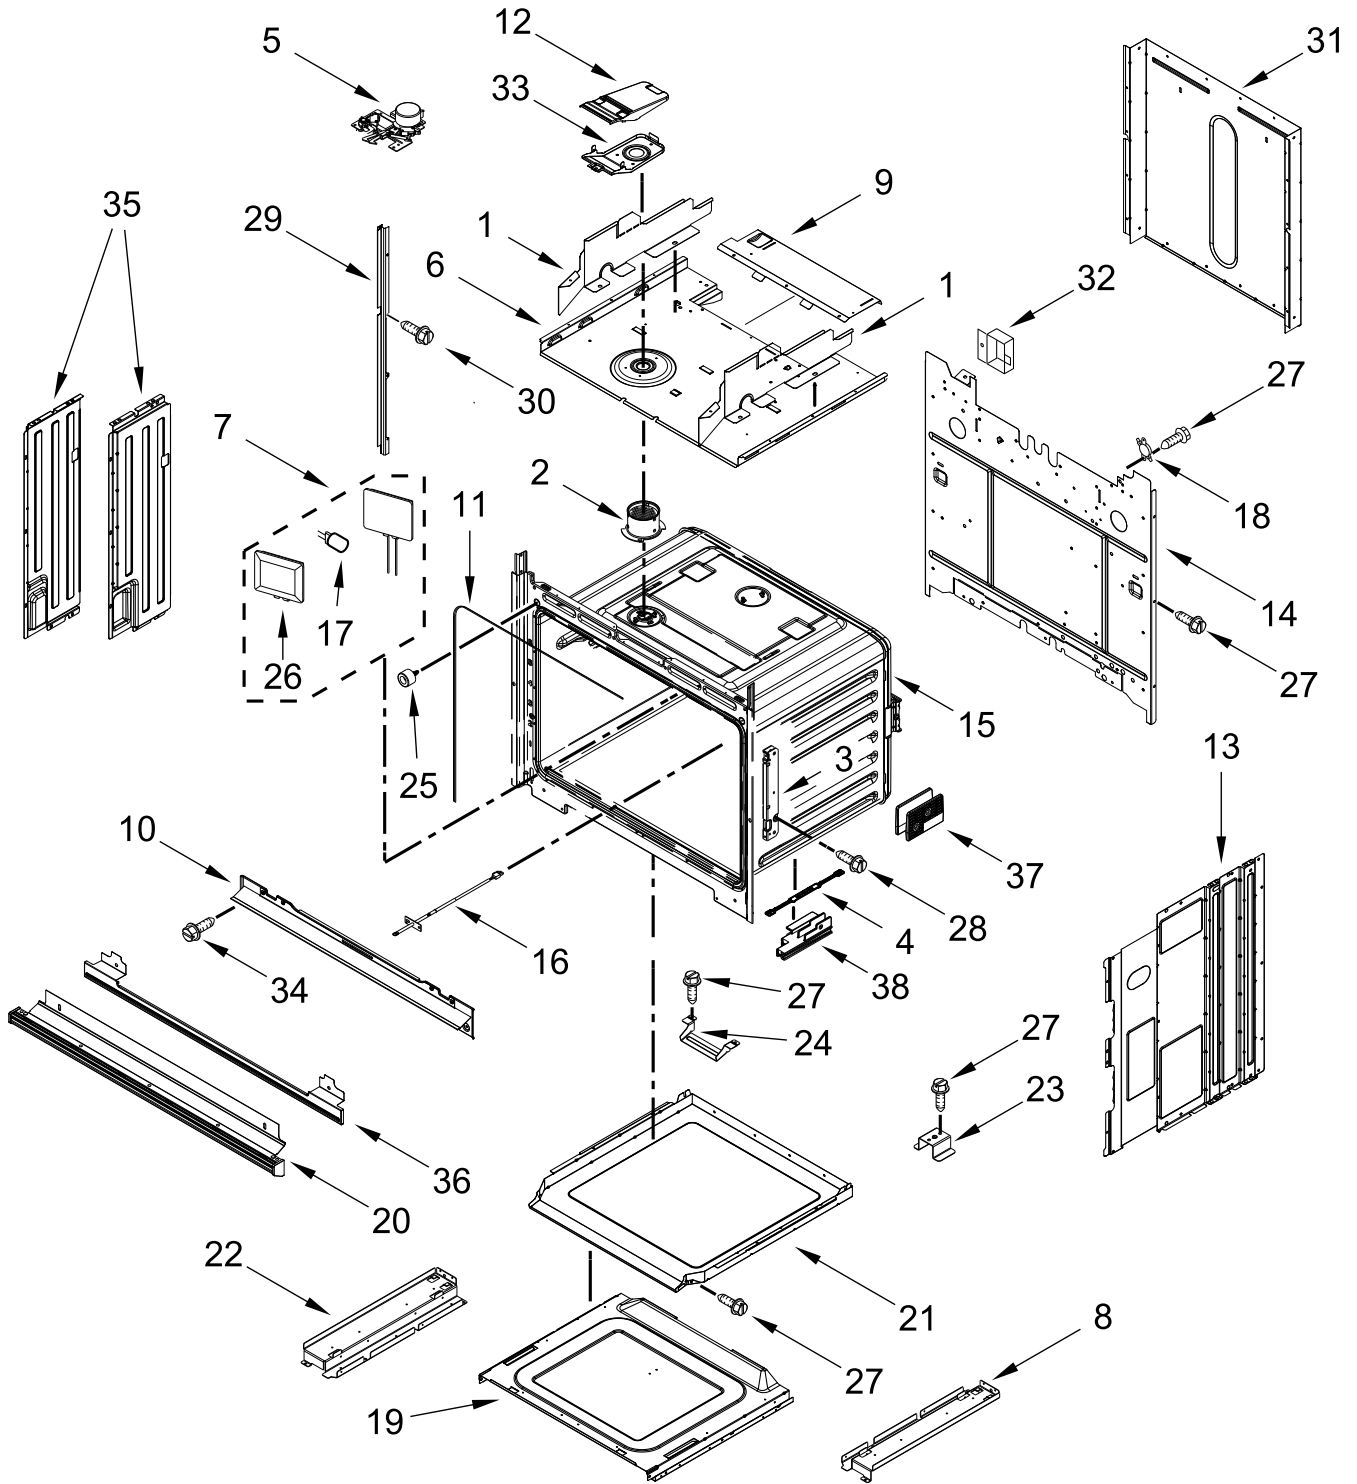

# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11186391	Deflector, Chassis (Left)	15		Liner, Oven (Not Serviceable)	29		Sidetrिम, Bended
	W11186398	Deflector, Chassis (Right)	16	W11346074	Probe, Sensor		W11235457	Black (Left)
2	W11085298	Tube, Vent	17	W10472384	Bulb, Light		W11235458	Black (Right)
3	W11239070	Receiver, Hinge (Left)	18	4449751	Thermostat (TOD)	30	W11404000	Screw
	W11239072	Receiver, Hinge (Right)	19	W11244454	Base, Chassis	31	W11134657	Duct, Lower Chassis Back
4	W11558603	Spacer, Base	20		Assembly, Bottom Vent	32	8285593	Cover, Connector
5	W11132456	Latch, Motorized		W11467807	Black (Used in Black and White Models)	33	W11256423	Base, Vent Exhaust
6	W11244456	Top, Chassis		W11467824	Stainless	34	W11249635	Screw
7	W11205574	Assembly, Oven Light	21	W11244446	Duct, Bottom Chassis	35	W11167419	Cover, Suction (Left)
8	W10283021	Support, Base (Right)	22	W10283020	Support, Base (Left)		W11186675	Cover, Suction (Right)
9	W10904163	Deflector, Blower	23	W11135135	Support, Air Channel	36		Trim, Bottom Vent
10	W11518348	Vent, 27 In Combo Center	24	W11390667	Spacer, Chassis Bottom Duct		W11560860	Black
11	W11608109	Gasket, Cavity	25	W11166315	Bumper and Screw	37	W11245118	Foot, Base
12	W11256424	Cover, Vent Exhaust	26	W10472386	Lens, Light	38	W11245114	Foot, Chassis (Left)
13	W11165274	Side, Chassis	27	7101P426-60	Screw		W11245116	Foot, Chassis (Right)
14		Back, Chassis (Not Serviced)	28	W10254050	Screw			FOLLOWING PARTS NOT ILLUSTRATED
							W11244475	Insulation, Back
							W11244474	Insulation, Wrap


# OVEN DOOR PARTS

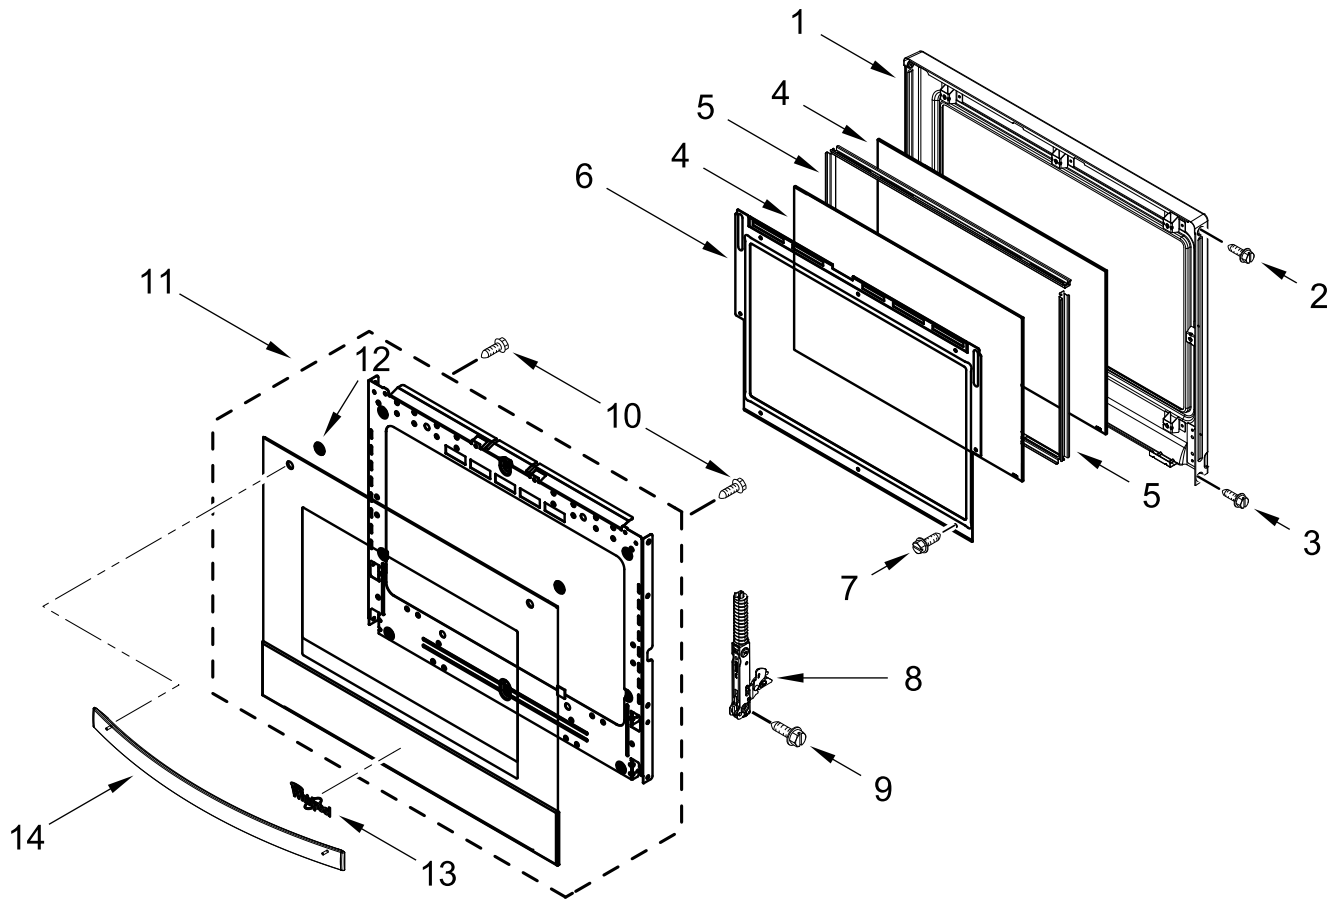

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	8	W11470044	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11470045	Hinge, Door (Right)	13	W10884775	Badge
3	W11290045	Screw	9	3196183	Screw	14		Handle, Door
4	W10618123	Glass, Inner	10	W11317731	Screw (Black)		W11548016	Black
5	W11302731	Spacer, Air Divider	11		Door Assembly		W11660150	White
6	W11204277	Retainer, Air Divider Glass		W11499374	Black		W11532601	Stainless
7	7101P426-60	Screw		W11499376	White			
				W11499375	Stainless			

# INTERNAL OVEN PARTS

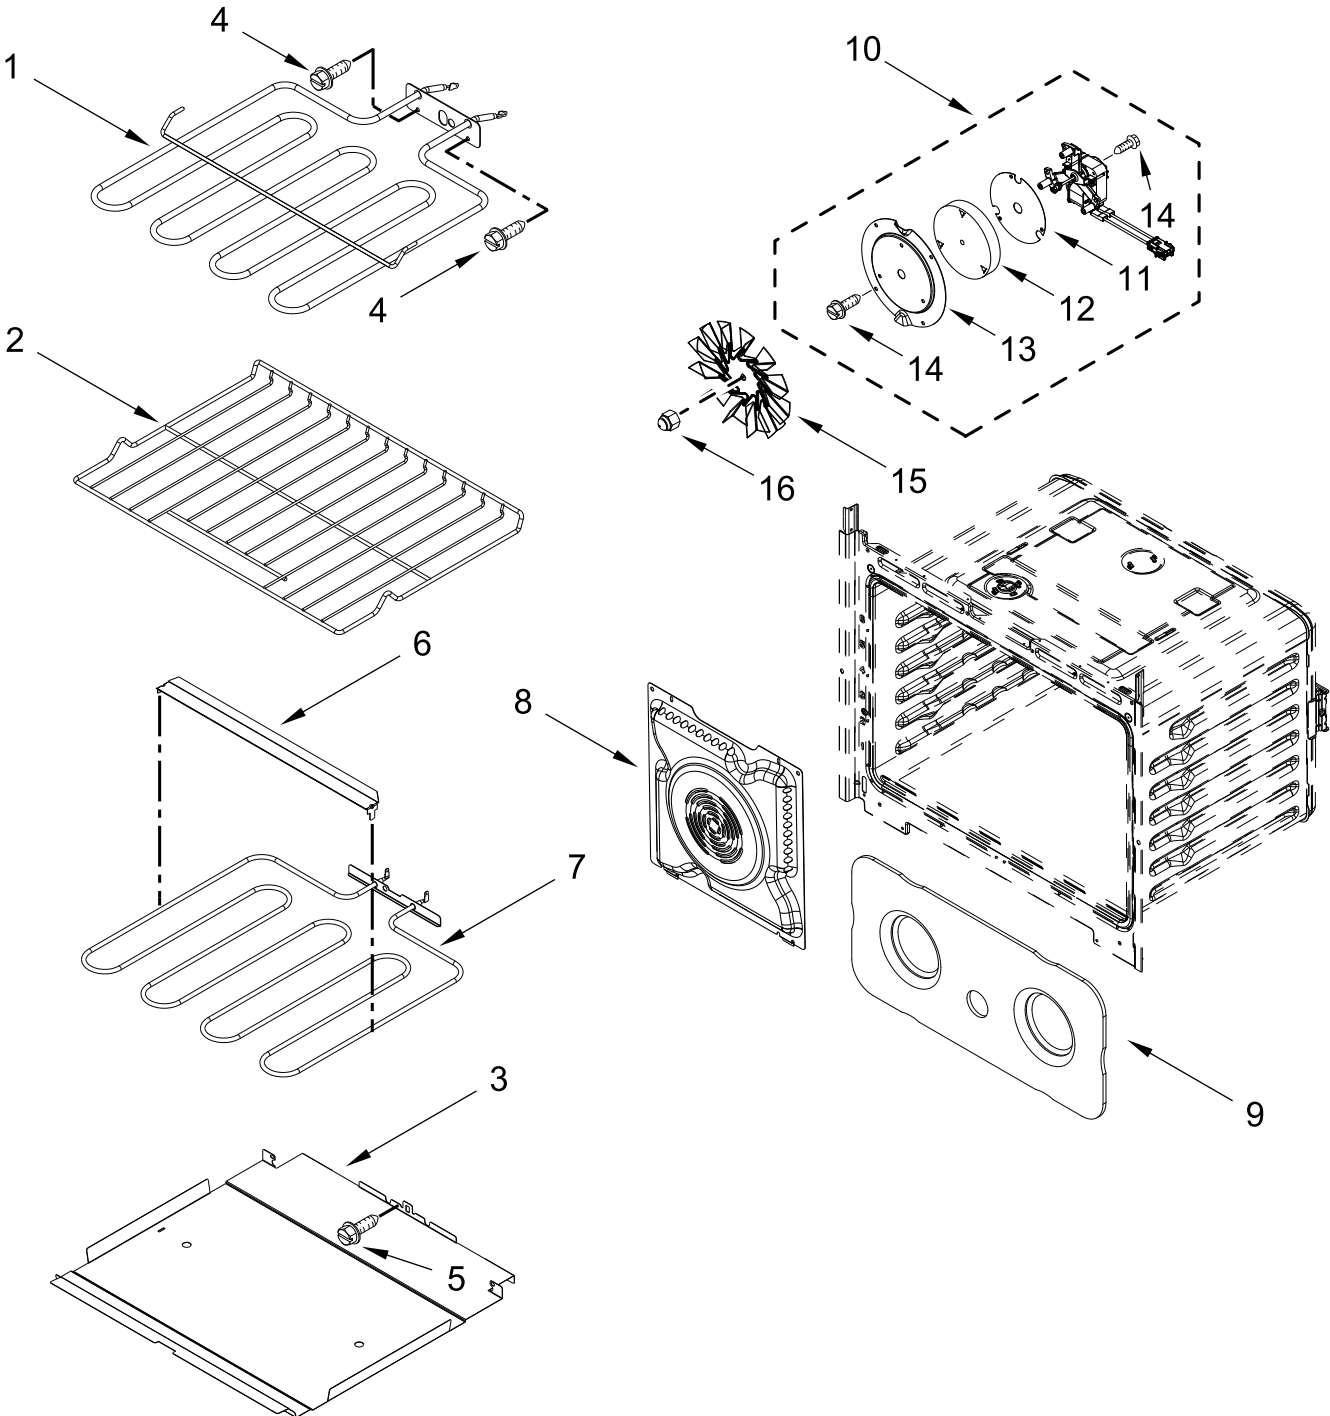




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	7	W11292248	Element, Bake	12	W11251716	Insulation, Convect Motor
2	W10317431	Rack, Oven	8	W10359278	Baffle, Convection	13	W11398057	Cover, Convect Plate
3	W10318198	Tray, Hidden Bake	9	W11489860	Plate, Ring Element	14	W10720084	Screw
4	7101P434-60	Screw	10	W11398058	Convect Motor Assembly	15	W11425715	Blade, Fan
5	7101P426-60	Screw	11	W11251715	Plate, Convect Motor	16	W11433702	Nut, Acorn (LH)
6	W10282957	Crossbar, Hidden Bake Tray						


# CABINET AND STIRRER PARTS

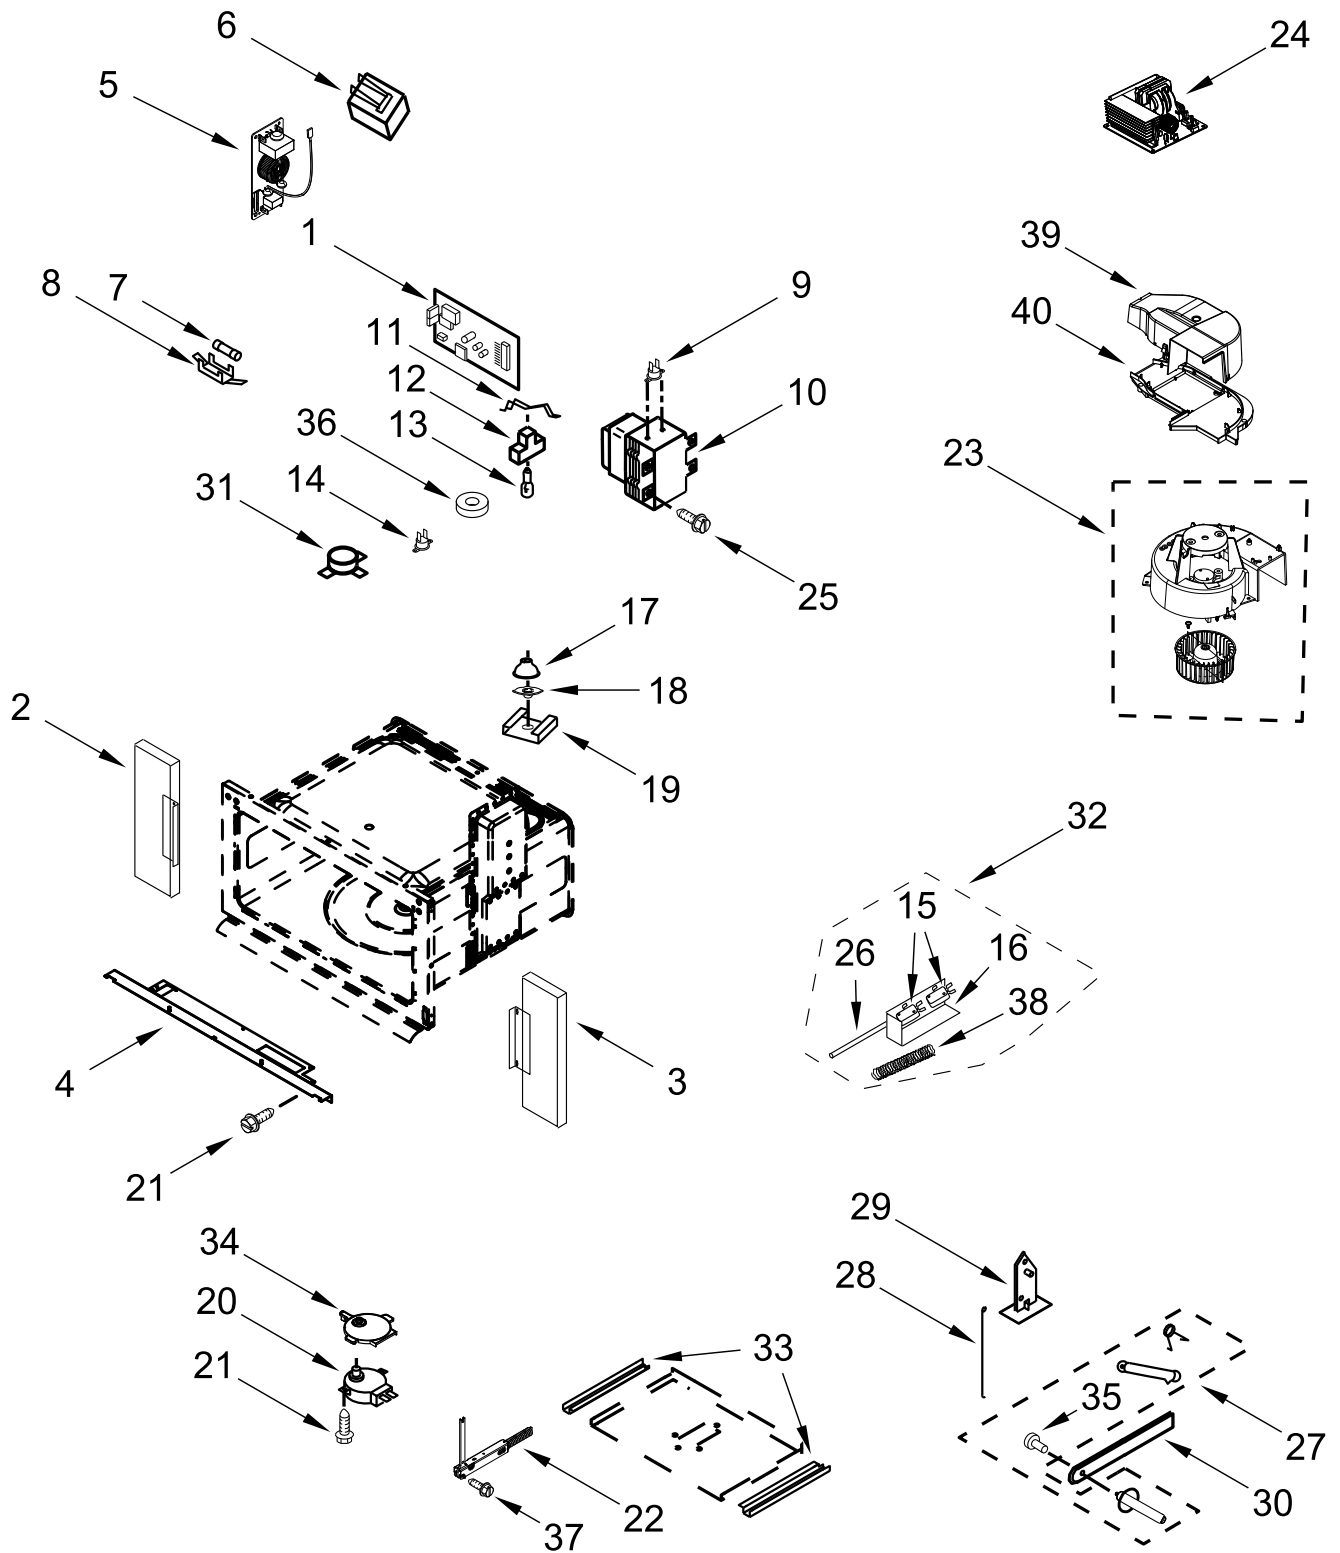

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	18	423107720491	Lens, Lamp	35	461967510191	Bushing
2	461967017511	Trim, Side (Left)	19	W11440819	Clip, Spring	36	W10769147	Sealing, Lamp
3	W11044584	Trim, Side (Right)	20	461967848971	Motor, Turntable	37	461967825781	Screw (Shoulder)
4	W11334717	Vent, Top	21	461967825321	Screw	38	423107570871	Spring, Release Rod
5	W11505129	Filter, Noise	22	W11474392	Hinge, Door	39	W11591019	Housing, Upper Inverter
6	461967848621	Transformer, Light (20V)	23	W11131760	Cooling Fan Assembly	40	W11591018	Housing, Lower Inverter
7	241908600053	Fuse	24	W11504539	Inverter			
8	4375231	Block, Fuse	25	461967825971	Screw			
9	461967846741	Thermostat, Magnetron	26	461967750464	Rod, Push			FOLLOWING PARTS NOT ILLUSTRATED
10	W11504545	Magnetron	27	W10128850	Assembly, Sliding Arm			
11	W10465869	Spring, Lamp	28	461967570351	Spring, Torsion	W11454022		Harness, Fan and Turntable
12	W10490593	Holder, Lamp	29	461967750494	Support	W11539527		Jumper Harness, Communication
13	W10795595	Lamp, Halogen	30	W11213889	Arm, Sliding	W11539494		Harness, Inverter
14	W10389447	Thermostat	31	W10460457	Sensor, Humidity	W11555169		Harness, Interlock
15	461967848881	Switch	32	W10358241	Assembly, Interlock Switch	W11555848		Harness, Input
16	W10876593	Holder, Switch	33	461967008461	Support, Bottom			
17	423107022541	Reflector	34	461967753742	Adapter, Turntable Motor			


# INTERNAL MICROWAVE PARTS

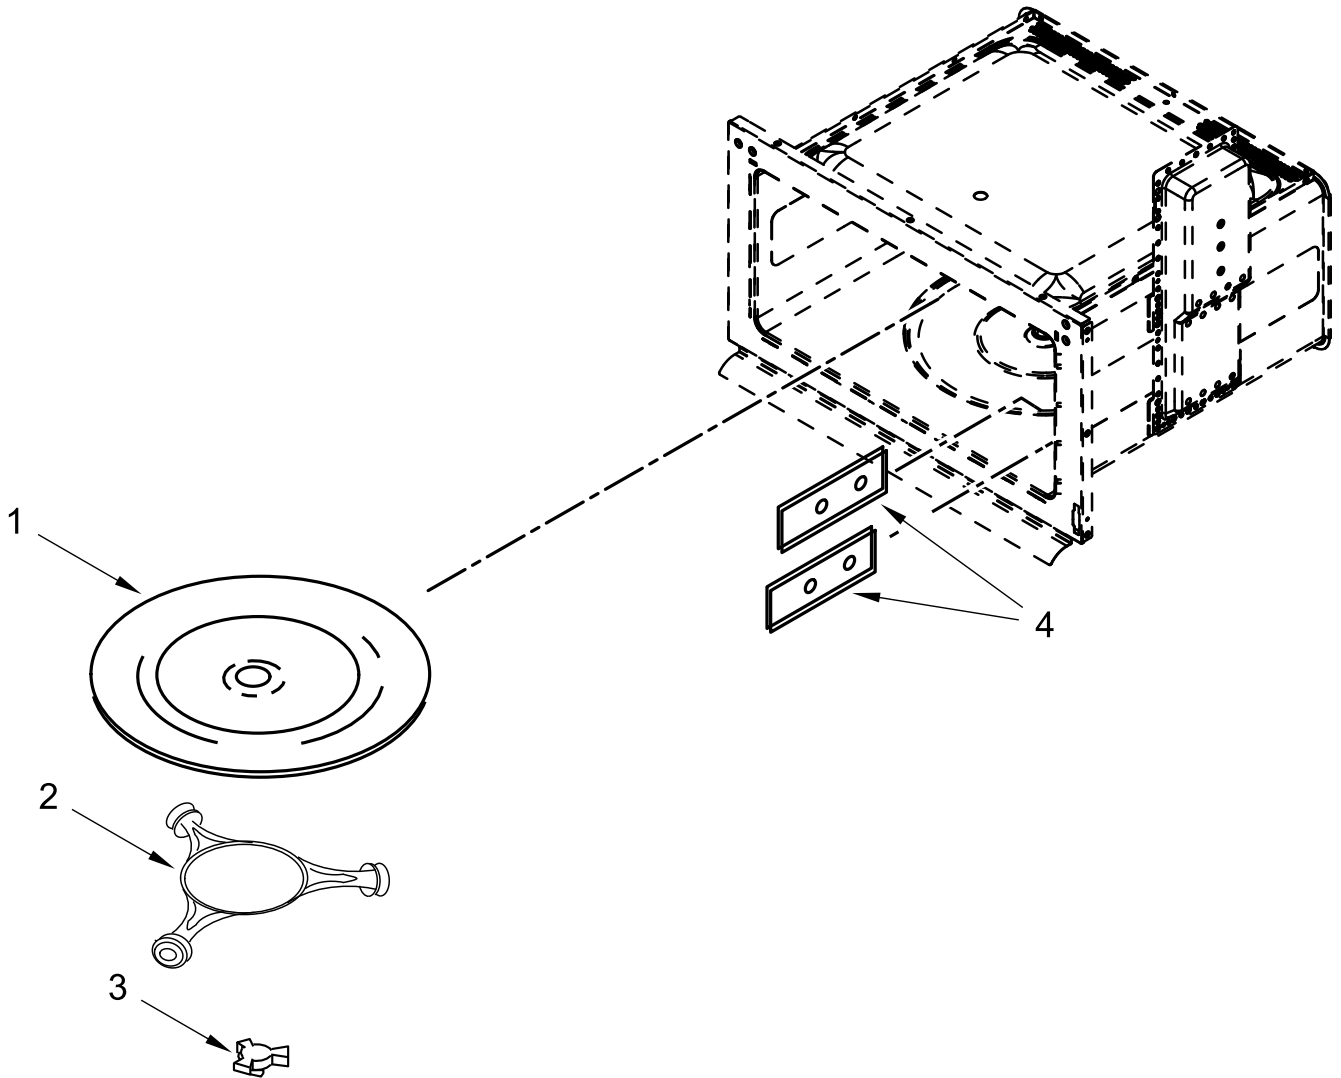

# INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	3	W10545578	Drive, Turntable
2	W10367316	Ring, Turntable	4	461967451001	Plate, Cover


# TOP VENTING PARTS

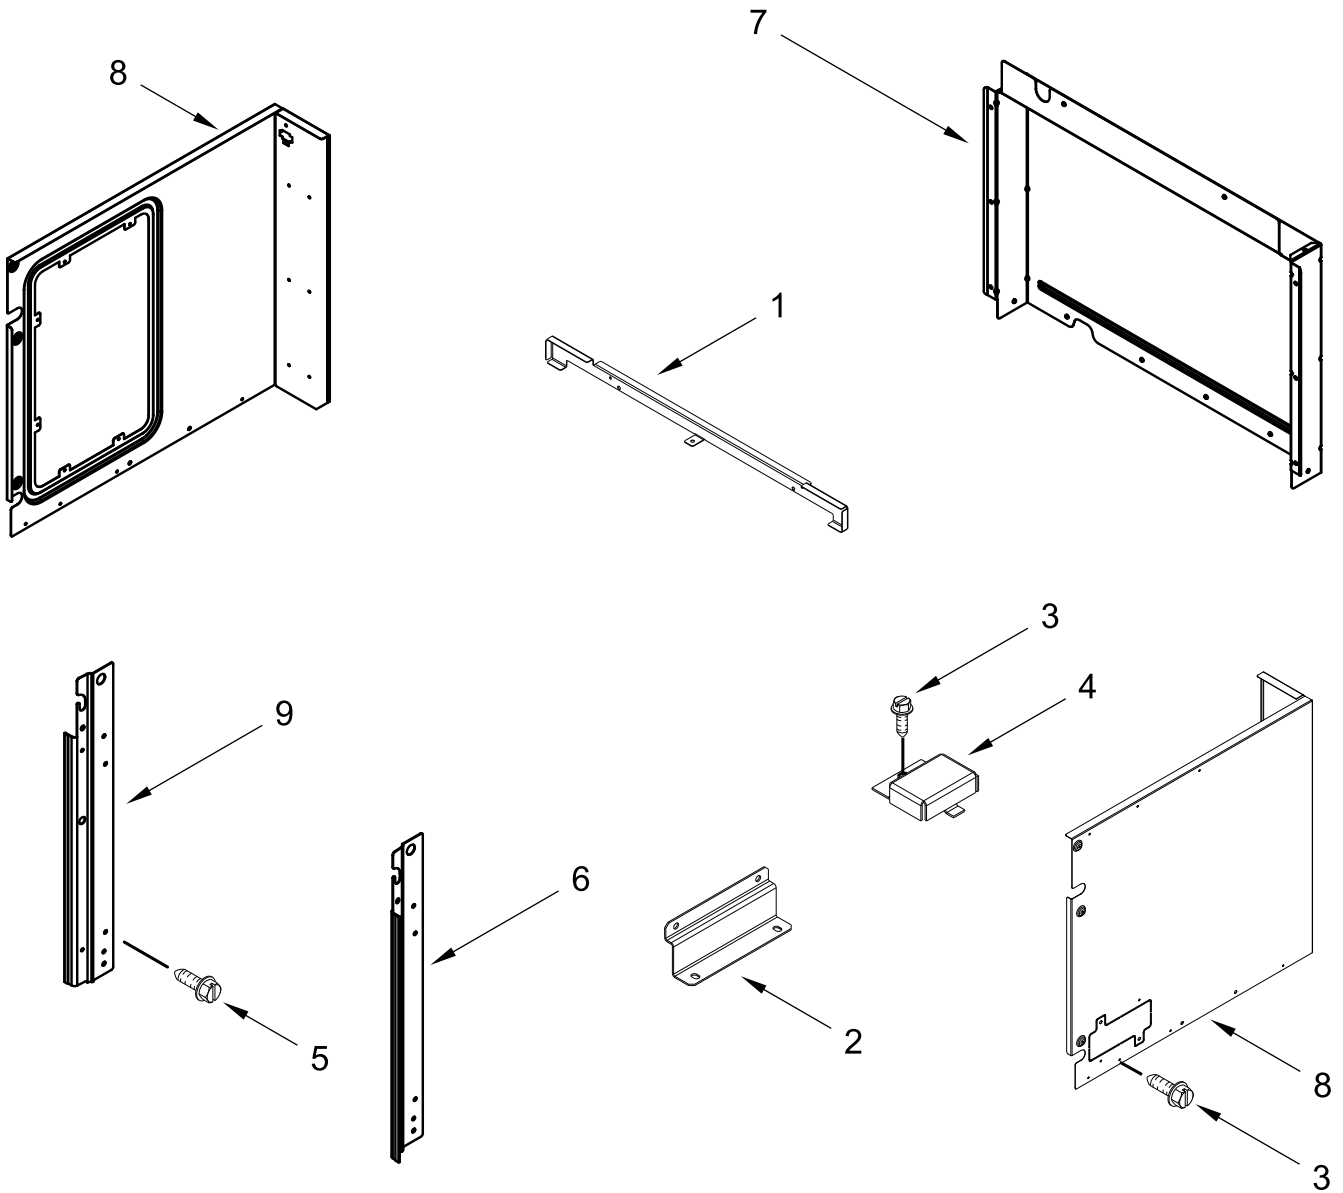

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10283023	Support, Crossbar	5	7101P633-60	Screw (Black)	8	W11171909	Side, Combo Chassis (Left)
2	W10283025	Side, Bracket	6	W11627411	Siderail, Combo (Right)		W11171919	Side, Combo Chassis (Right)
3	7101P426-60	Screw	7	W11171004	Cover, Combo Chassis Back Duct	9	W11627410	Siderail, Combo (Left)
4	8285593	Cover, Connector						

# MICROWAVE DOOR PARTS

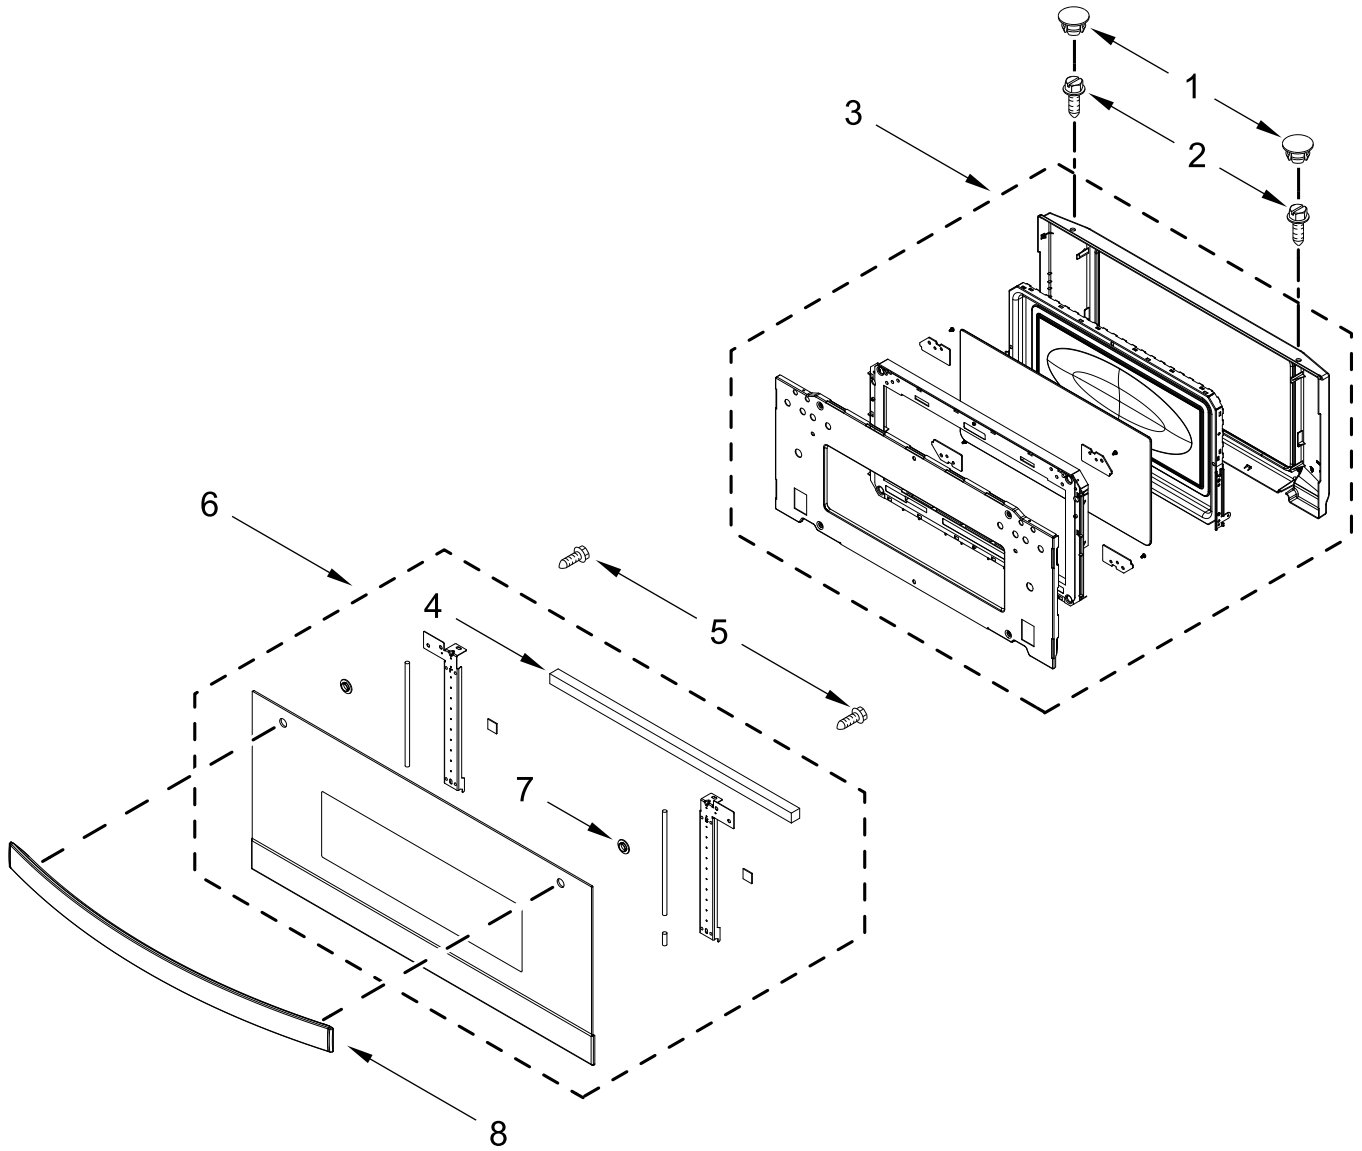



# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Door Assembly	8		Handle Assembly
2	7101P338-60	Screw		W11500265	Black		W11548016	Black
3	W11328749	Inner Door Assembly		W11500268	White		W11660150	White
4	W10359769	Foam, Door Handle		W11500266	Stainless		W11532601	Stainless
5	W11317731	Screw (Black)	7	W10319024	Washer, Door			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic Miscellaneous
	4448950	Screw, Door Installation
		ACCESSORIES
		Trim, Tall Vent
	W11570326	Black
	W11570324	Stainless Vent, Deflector
	W11594554	Black
	W11551865	Stainless Trim, Bottom Vent
	W11570322	Stainless