




ELECTRIC WALL OVEN

MODELS:

WOED7030PZ01 (Stainless)

WOED7030PV01 (Black Stainless)


CONTROL PANEL PARTS

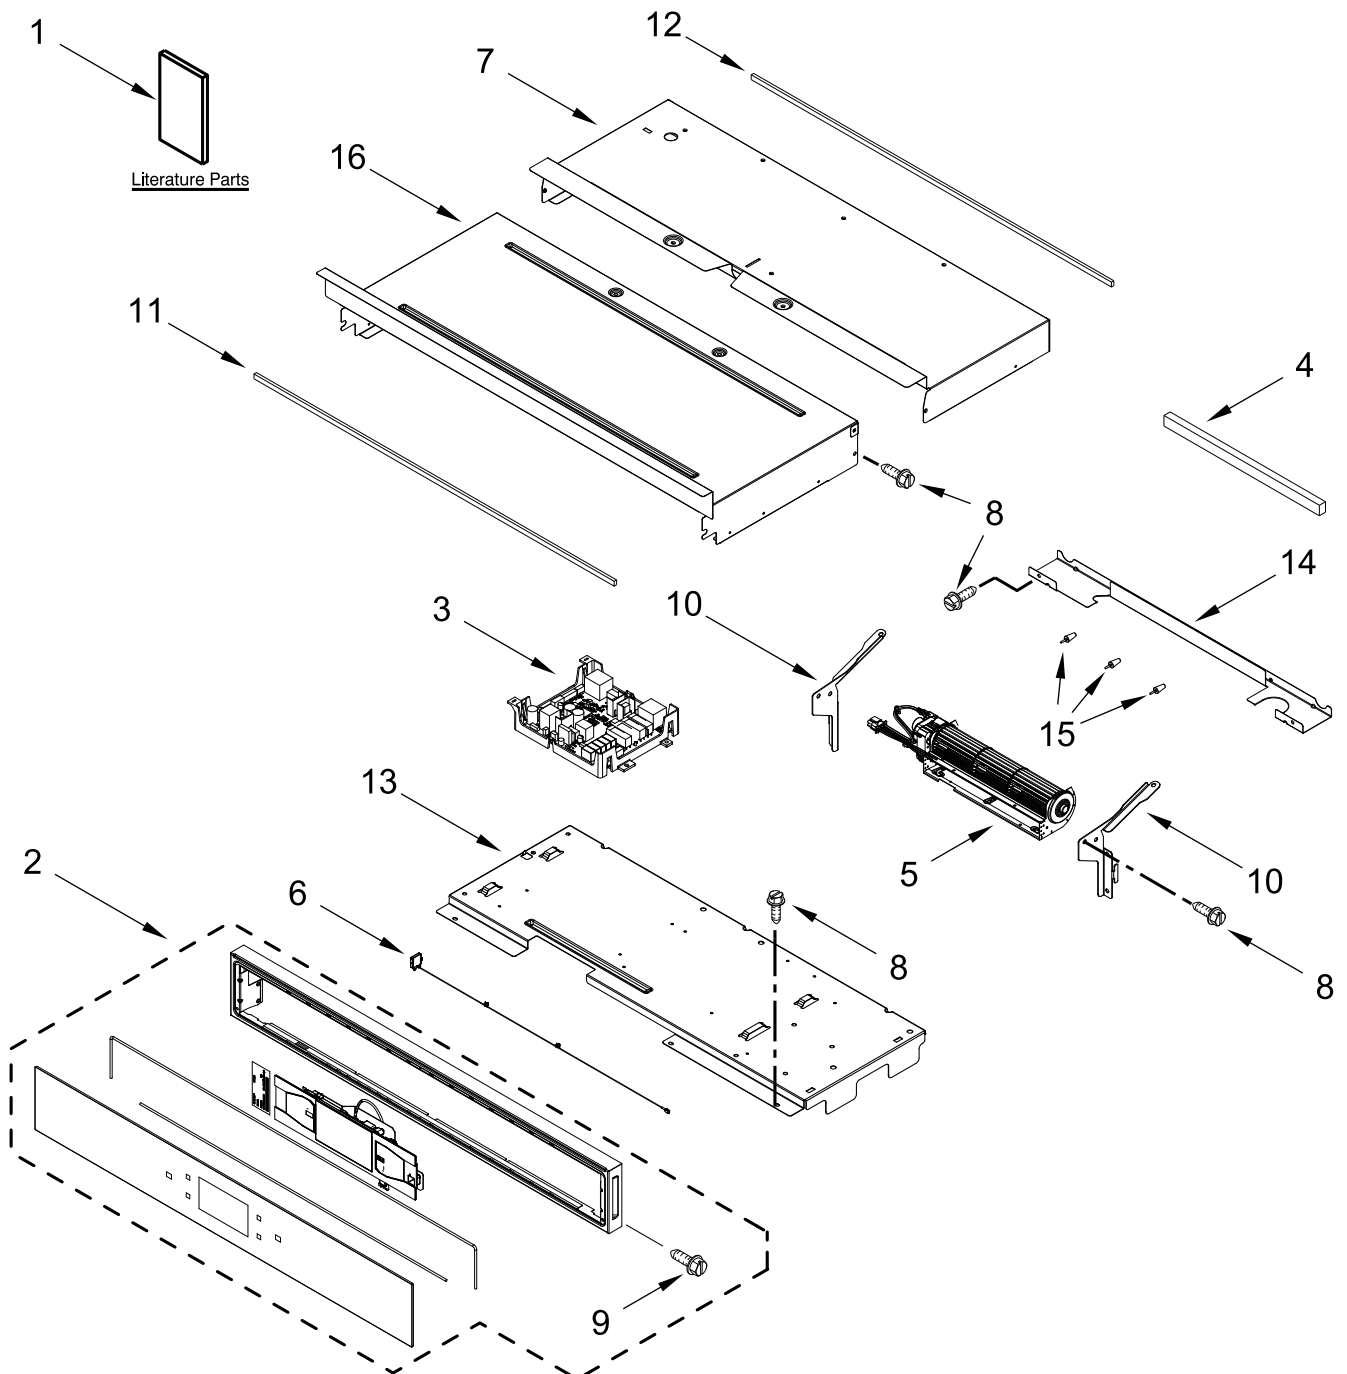

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11397930	Blower	16	W11244445	Cover, 30 IN Chassis Top Front
	W11656312	Owner's Manual	6	W11409842	Antenna			
	W11553919	Quick Start Guide	7	W11223325	Cover, 30 IN Chassis Top Back			FOLLOWING PARTS NOT ILLUSTRATED
	W11623567	Tech Sheet	8	7101P426-60	Screw	W11621911		Harness, Main
2		Assembly, Control Panel (Includes Overlay)	9	W11339492	Screw (Black)	W11264646		Harness, Door Latch
	W11639720	Stainless	10	W10655463	Bracket, Blower (Left)	W10562910		Harness, EOL
	W11639824	Black Stainless		W10655462	Bracket, Blower (Right)	W11233570		Harness, Console
3	W11253186	Appliance Manager, Copernicus (With Power Supply)	11	W11162063	Gasket, Rubber	4448664		Clamp, Conduit
	W11253182	Appliance Manager, Copernicus (Without Power Supply)	12	W10728475	Gasket, Rubber	W10655464		Bracket, Harness
			13	W11179509	Tray, Electronic	313438		Clip, Harness
			14	W11166802	Divider, Chassis Back	4450800		Screw, Grounding
4	4451758	Block, Foam	15	W10351295	Bumper	W10487999		Clip, Harness
						W11394923		Bag, Hardware


OVEN PARTS

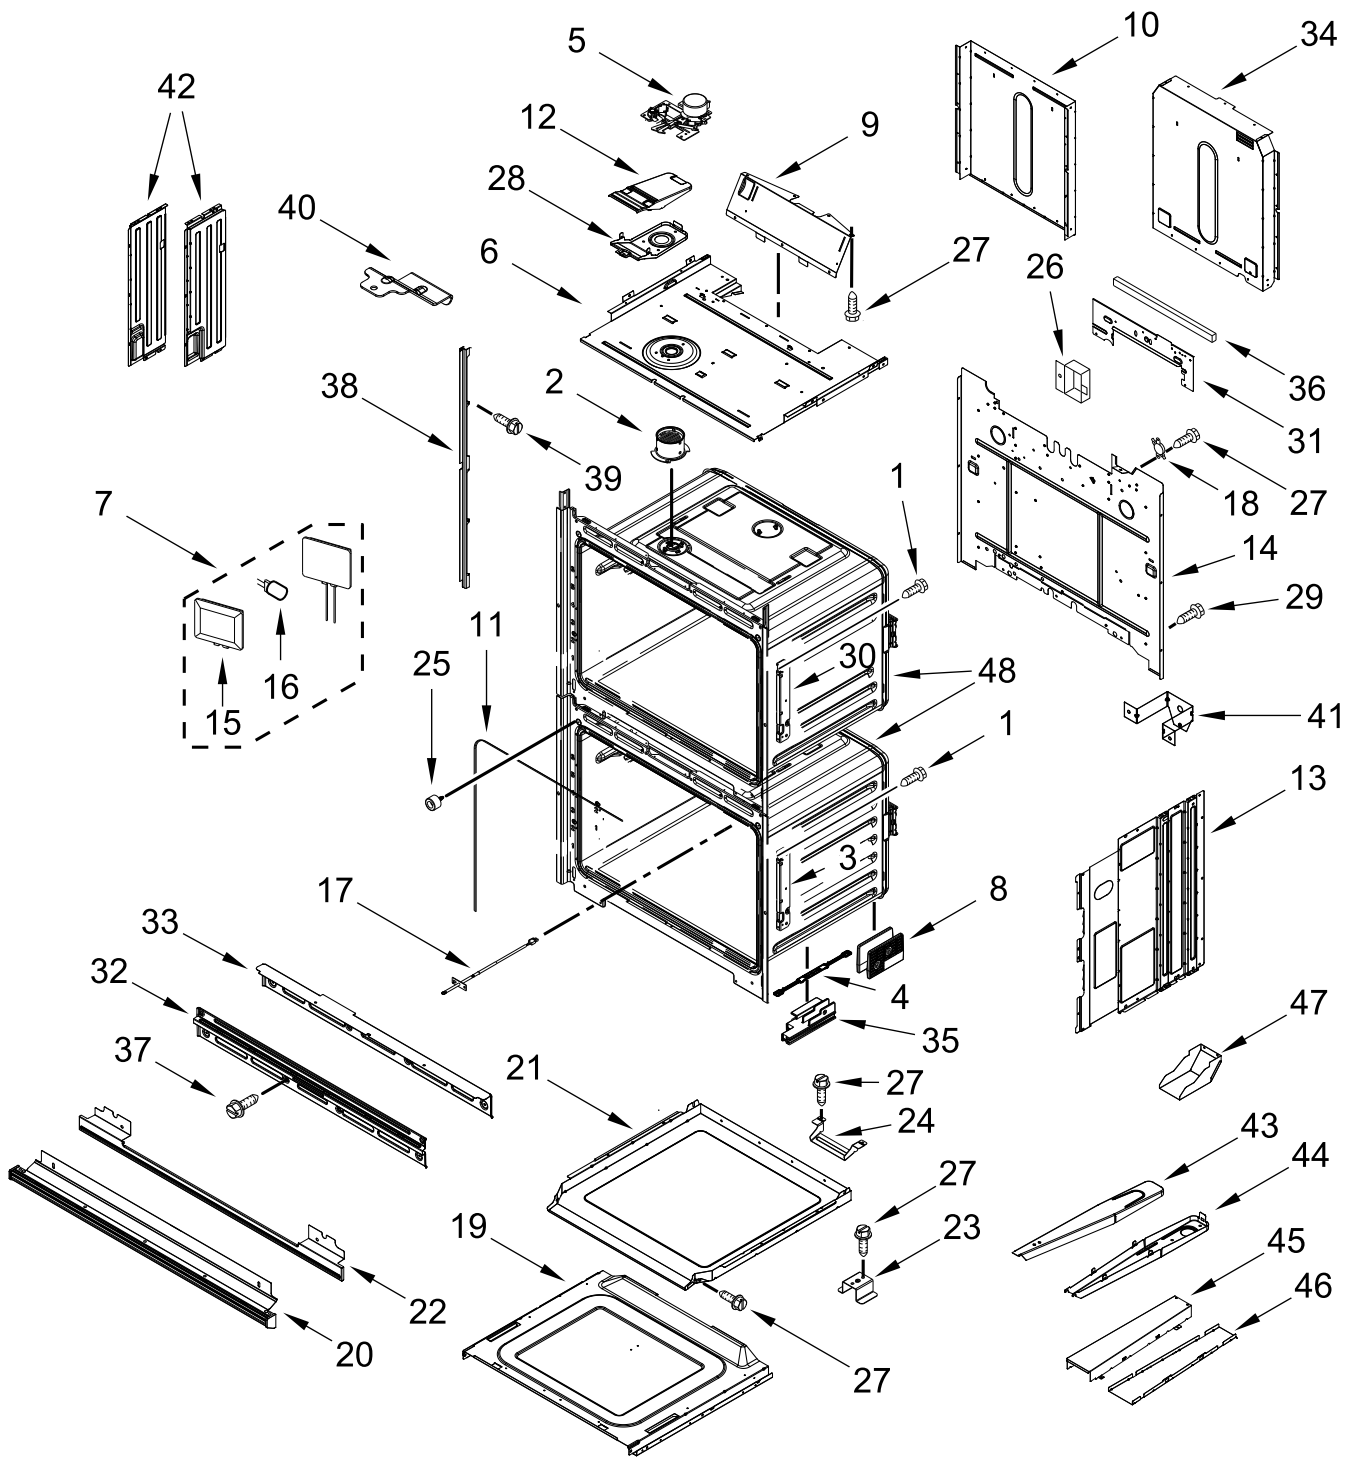

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	21	W11244446	Duct, Bottom Chassis	40	W11342780	Bracket, Top Front
2	W11085298	Tube, Vent	22		Trim, Bottom Vent	41	W11344645	Hat Bracket, Vent
3	W11239070	Receiver, Hinge (Left)		W11560859	Black	42	W11167419	Cover, Suction (Left)
	W11239072	Receiver, Hinge (Right)	23	W11135135	Support, Air Channel		W11186675	Cover, Suction (Right)
		(Lower)	24	W11390667	Spacer, Chassis Bottom Duct	43	W11256421	Cover, Top Back Exhaust
4	W11558603	Spacer, Base	25	W11166315	Bumper and Screw	44	W11256420	Base, Top Back Exhaust
5	W11132456	Latch, Motorized	26	8285593	Cover, Connector	45	W11256431	Cover, Lower Back Exhaust
6	W11168071	Top, Chassis	27	7101P426-60	Screw	46	W11256430	Base, Lower Back Exhaust
7	W11205574	Assembly, Oven Light	28	W11256423	Base, Vent Exhaust	47	W11256432	Deflector, Lower Back Exhaust
8	W11245118	Foot, Base	29	W10142292	Screw	48		Liner, Oven (Not Serviceable)
9	W10904163	Deflector, Blower	30	W11100732	Receiver, Hinge (Upper)			FOLLOWING PARTS NOT ILLUSTRATED
10	W11134657	Duct, Lower Chassis Back	31	W11186652	Bracket, U-Shape	W11188284		Insulation, Wrap
11	W11608108	Gasket	32	W11235482	Vent, Center 30"	W11234758		Insulation, Cavity
12	W11256424	Cover, Vent Exhaust	33	W11334857	Vent, Top 30 IN			
13	W11165274	Side, Chassis	34	W11165250	Duct, Chassis Back (Upper)			
14	W11223327	Back, Chassis						
15	W10472386	Lens, Light	35	W11245114	Foot, Chassis (Left)			
16	W10472384	Bulb, Light		W11245116	Foot, Chassis (Right)			
17	W11346074	Probe, Sensor	36	W11211345	Foam, U-Bracket			
18	4449751	Thermostat (TOD)	37	W11249635	Screw			
19	W11135103	Base, Chassis	38	W11235460	Cover, Side trim (Left)			
20		Assembly, Bottom Vent		W11235461	Cover, Side Trim (Right)			
	W11467754	Stainless	39	W11404000	Screw			
	W11467336	Black						


UPPER OVEN DOOR PARTS

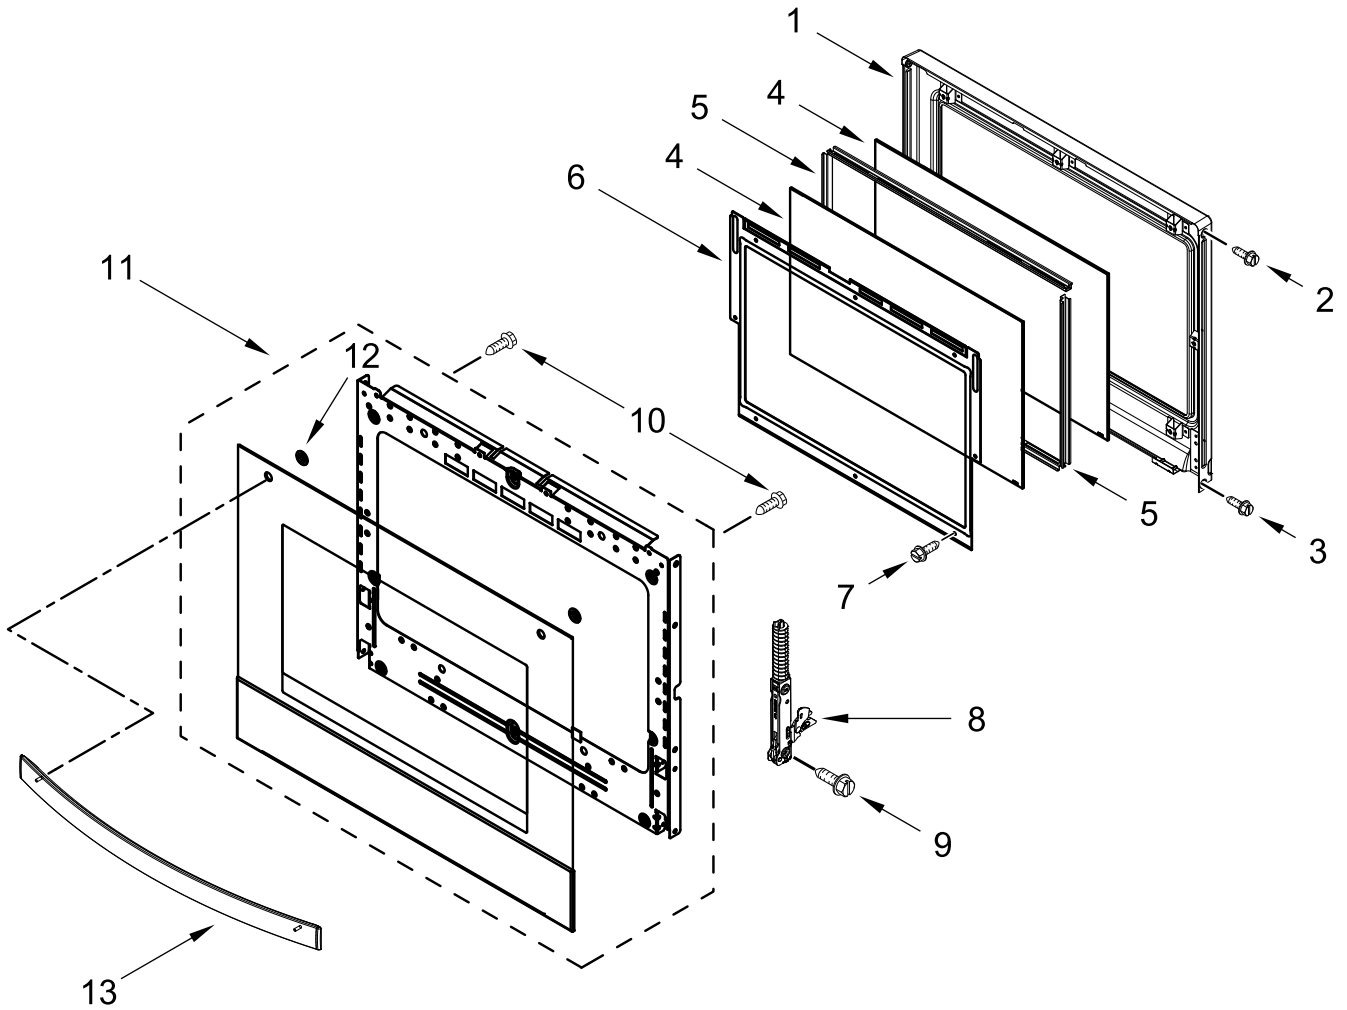

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11633416	Hinge, Door (Left)	13		Handle Assembly
2	7101P375-60	Screw		W11633417	Hinge, Door (Right)		W11532517	Stainless
3	W11290045	Screw	9	3196183	Screw		W11548014	Black Stainless
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)			
5	W11302730	Spacer, Air Divider	11		Door Assembly			
6	W11174095	Retainer, Air Divider Glass		W11499218	Stainless			
				W11634524	Black Stainless			
7	7101P426-60	Screw	12	W10319024	Washer, Door			


LOWER OVEN DOOR PARTS

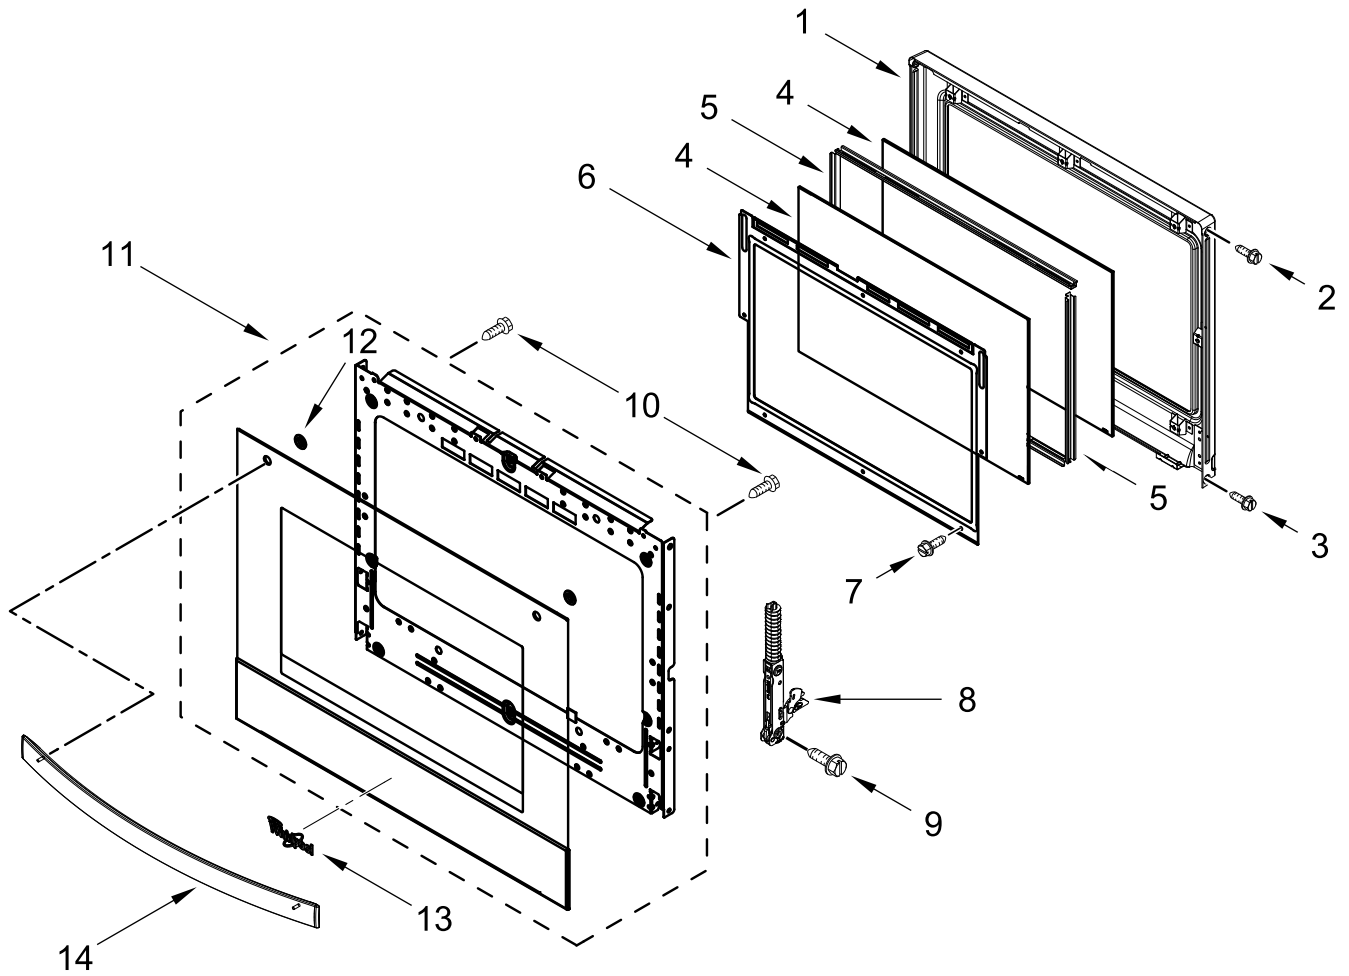

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11633416	Hinge, Door (Left)	13	W10884775	Badge
2	7101P375-60	Screw		W11633417	Hinge, Door (Right)	14		Handle Assembly
3	W11290045	Screw	9	3196183	Screw		W11532517	Stainless
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)		W11548014	Black Stainless
5	W11302730	Spacer, Air Divider	11		Door Assembly			
6	W11174095	Retainer, Air Divider Glass		W11499218	Stainless			
7	7101P426-60	Screw		W11634524	Black Stainless			
			12	W10319024	Washer, Door			

INTERNAL OVEN PARTS

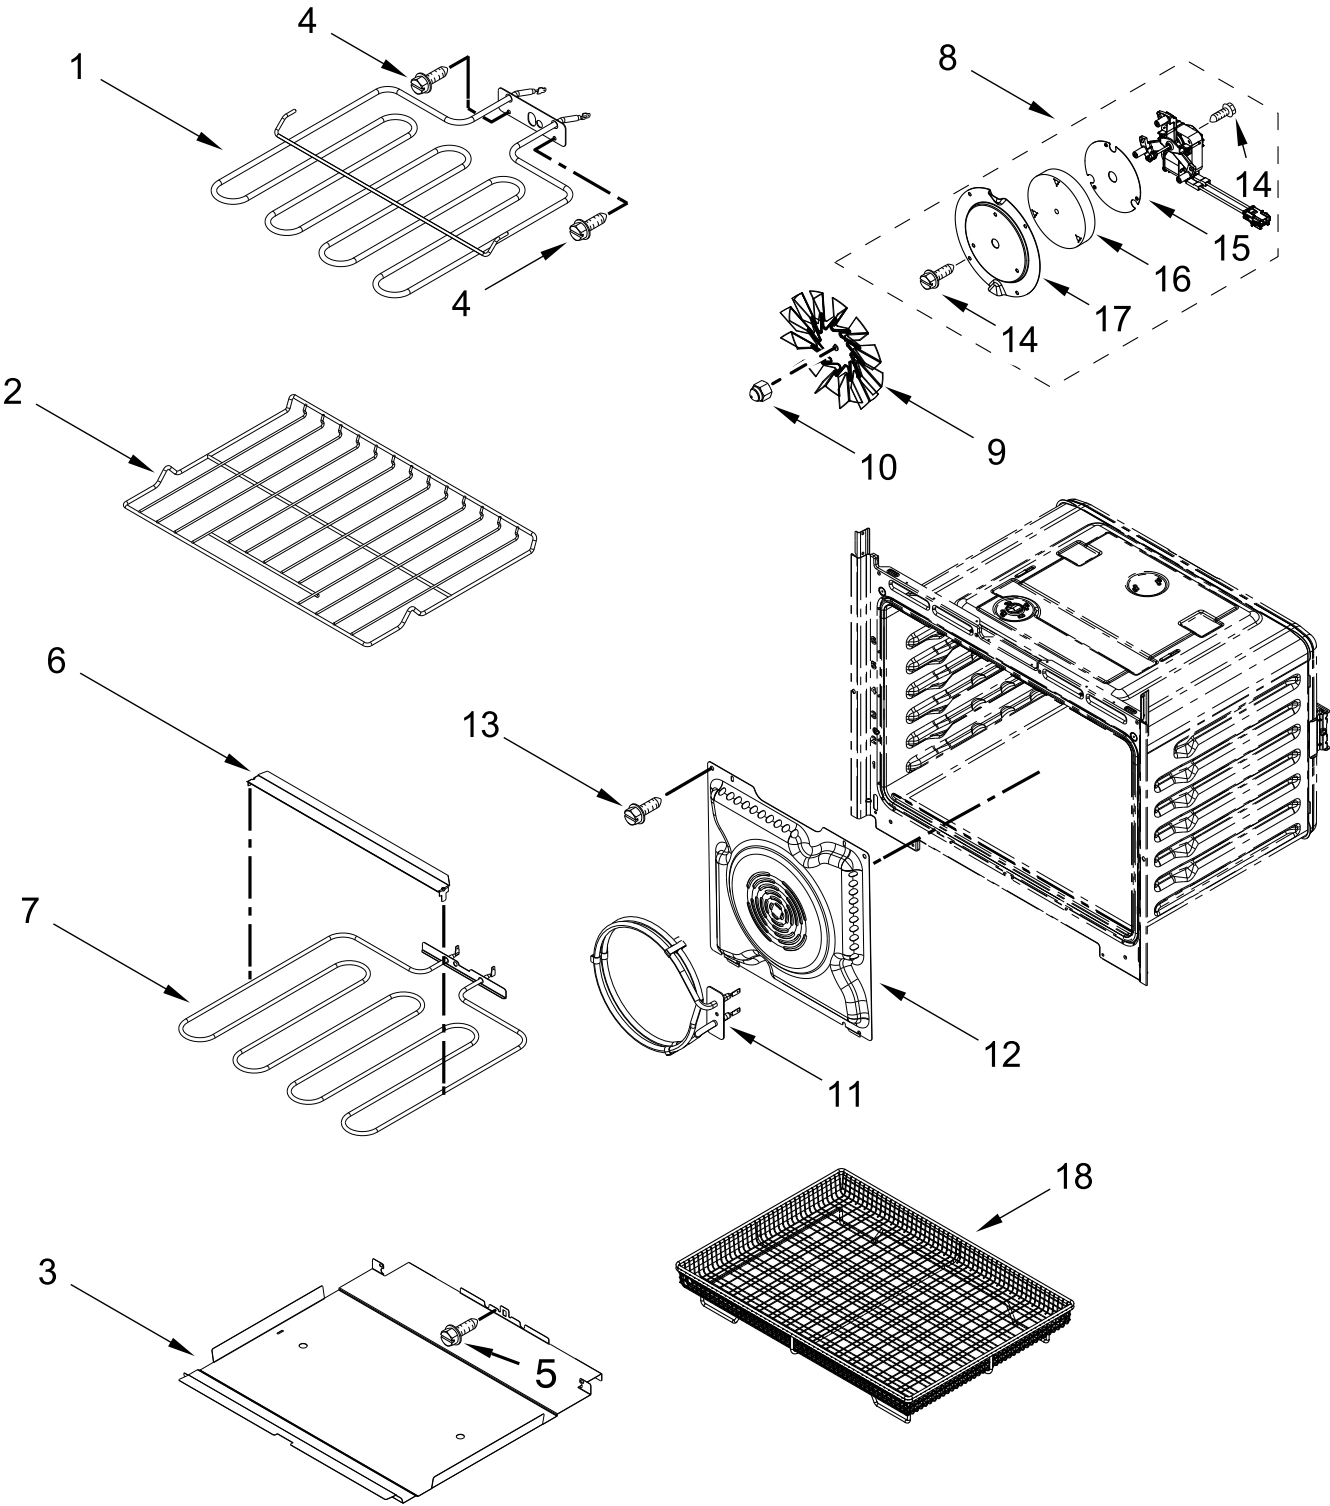

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W11398058	Convect Motor Assembly	15	W11251715	Plate, Convect Motor
2	W11122597	Rack, Oven	9	W11425715	Blade, Fan	16	W11251716	Insulation, Convect Motor
3	W10318198	Tray, Hidden Bake	10	W11433702	Nut, Acorn (LH)	17	W11398057	Cover, Convect Plate
4	7101P434-60	Screw	11	W10260248	Ring, Element	18	W11480738	Air Fry Basket Assembly
5	7101P426-60	Screw	12	W10359278	Baffle, Convection			
6	W10282957	Crossbar, Hidden Bake Tray	13	W10906658	Screw			
7	W11292248	Element, Bake	14	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORY PARTS
		Assembly, Bottom Vent
	W11369884	Black
	W11369889	Stainless Trim, Tall Vent
	W11366049	Black
	W11406621	Stainless