



## **ELECTRIC COMBO WALL OVEN**

 
### **MODELS:**

WOEC5030LB01 (Black)

WOEC5030LW01 (White)

WOEC5030LZ01 (Stainless)


# CONTROL PANEL PARTS

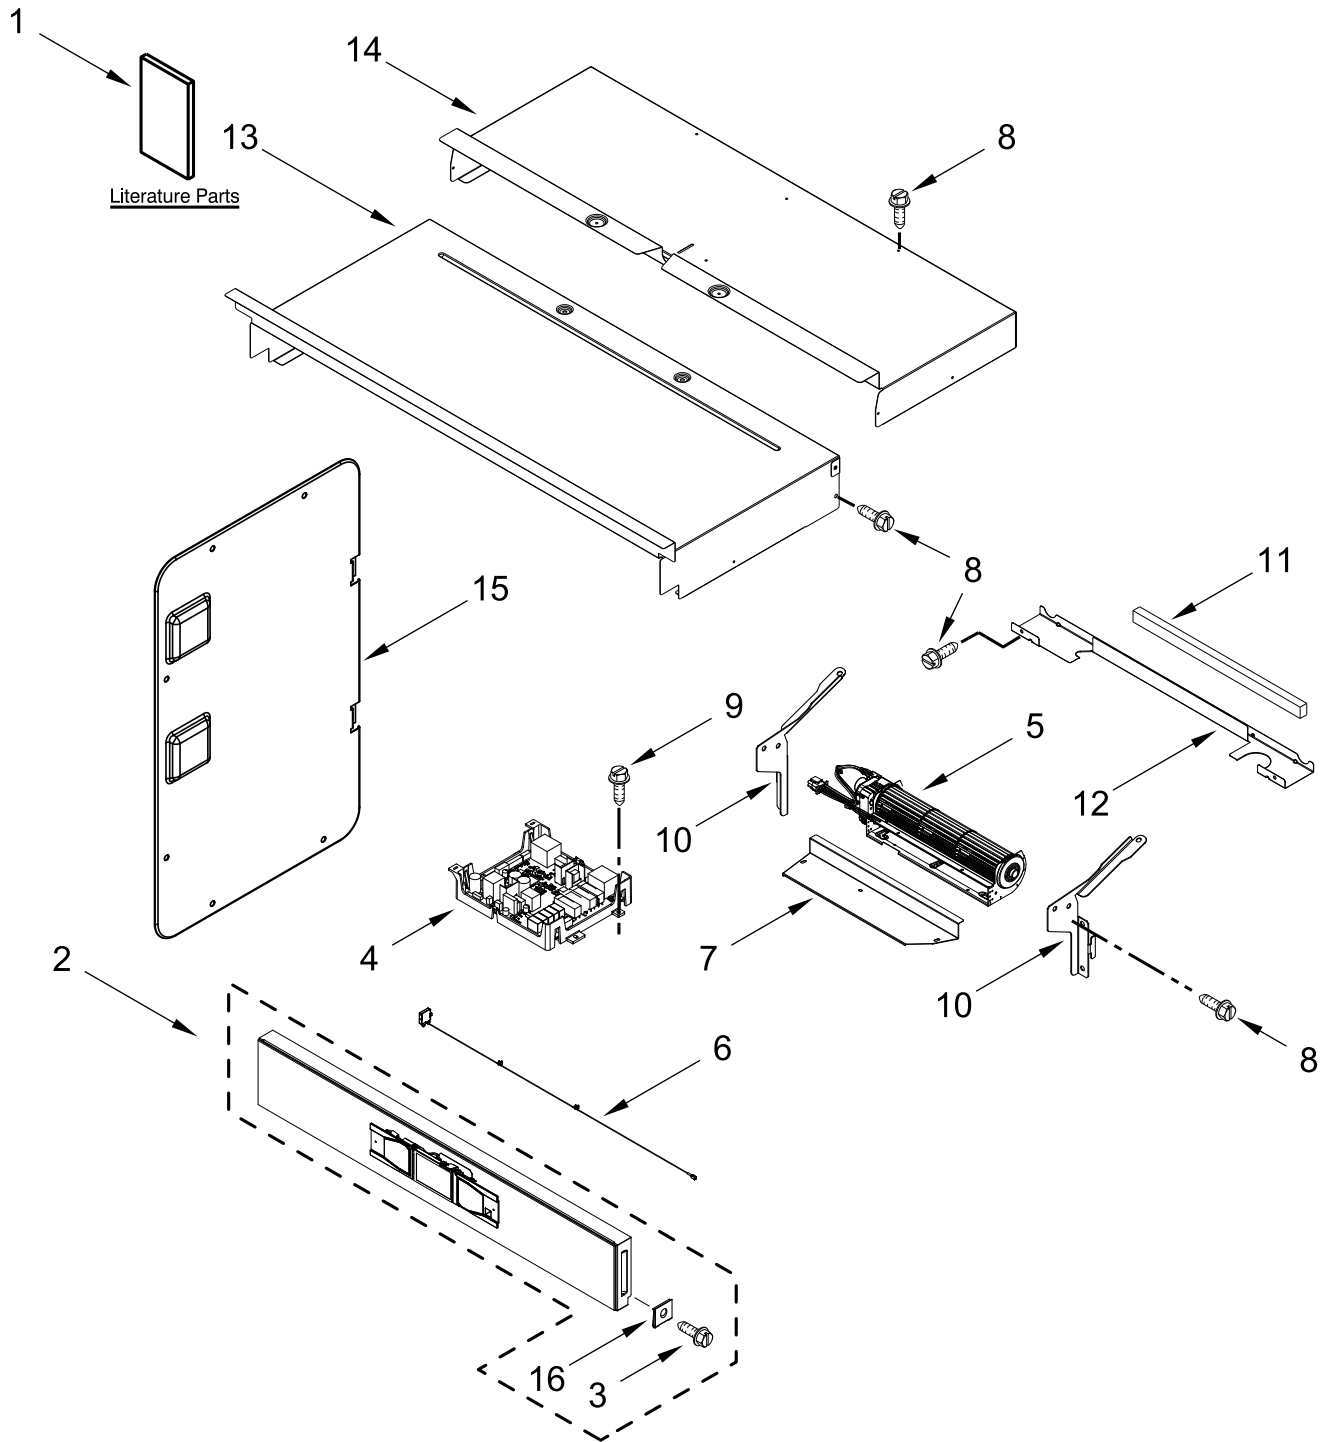

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	11	4451758	Block, Foam	16	4450118	Nut
	W11655510	Owner's Manual	12	W11166802	Divider, Chassis Back			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	13	W10318158	Chassis, Cover Top Front 30 IN		W11659377	Harness, Main
	W11601393	Tech Sheet	14	W10588732	Chassis, Cover Top Back 30 IN		W11256629	Harness, Signal
2		Assembly, Control Panel (Includes Overlay)	15	W10655467	Chassis, Combo Side		W11356990	Harness, Communication
	W11468021	Black  (Used in Black and Stainless Models)					W11264646	Harness, Door Latch
	W11568108	White					W11226264	Strap, Ground
3	W11339492	Screw (Black)					W11454022	Harness, Fan and Turntable
4	W11585754	Control, Copernicus					W11539494	Harness, Inverter
5	W11397930	Blower					W11555169	Harness, Interlock
6	W11409842	Antenna					W11539527	Jumper Harness, Communication
7	W10681157	Cover, Combo Blower					W11555848	Harness, Input
8	7101P426-60	Screw					313438	Clip, Harness
9	7101P434-60	Screw					4448664	Clamp, Conduit
10	W10655463	Bracket, Blower (Left)					W11394923	Bag, Hardware
	W10655462	Bracket, Blower (Right)						

 
# OVEN PARTS

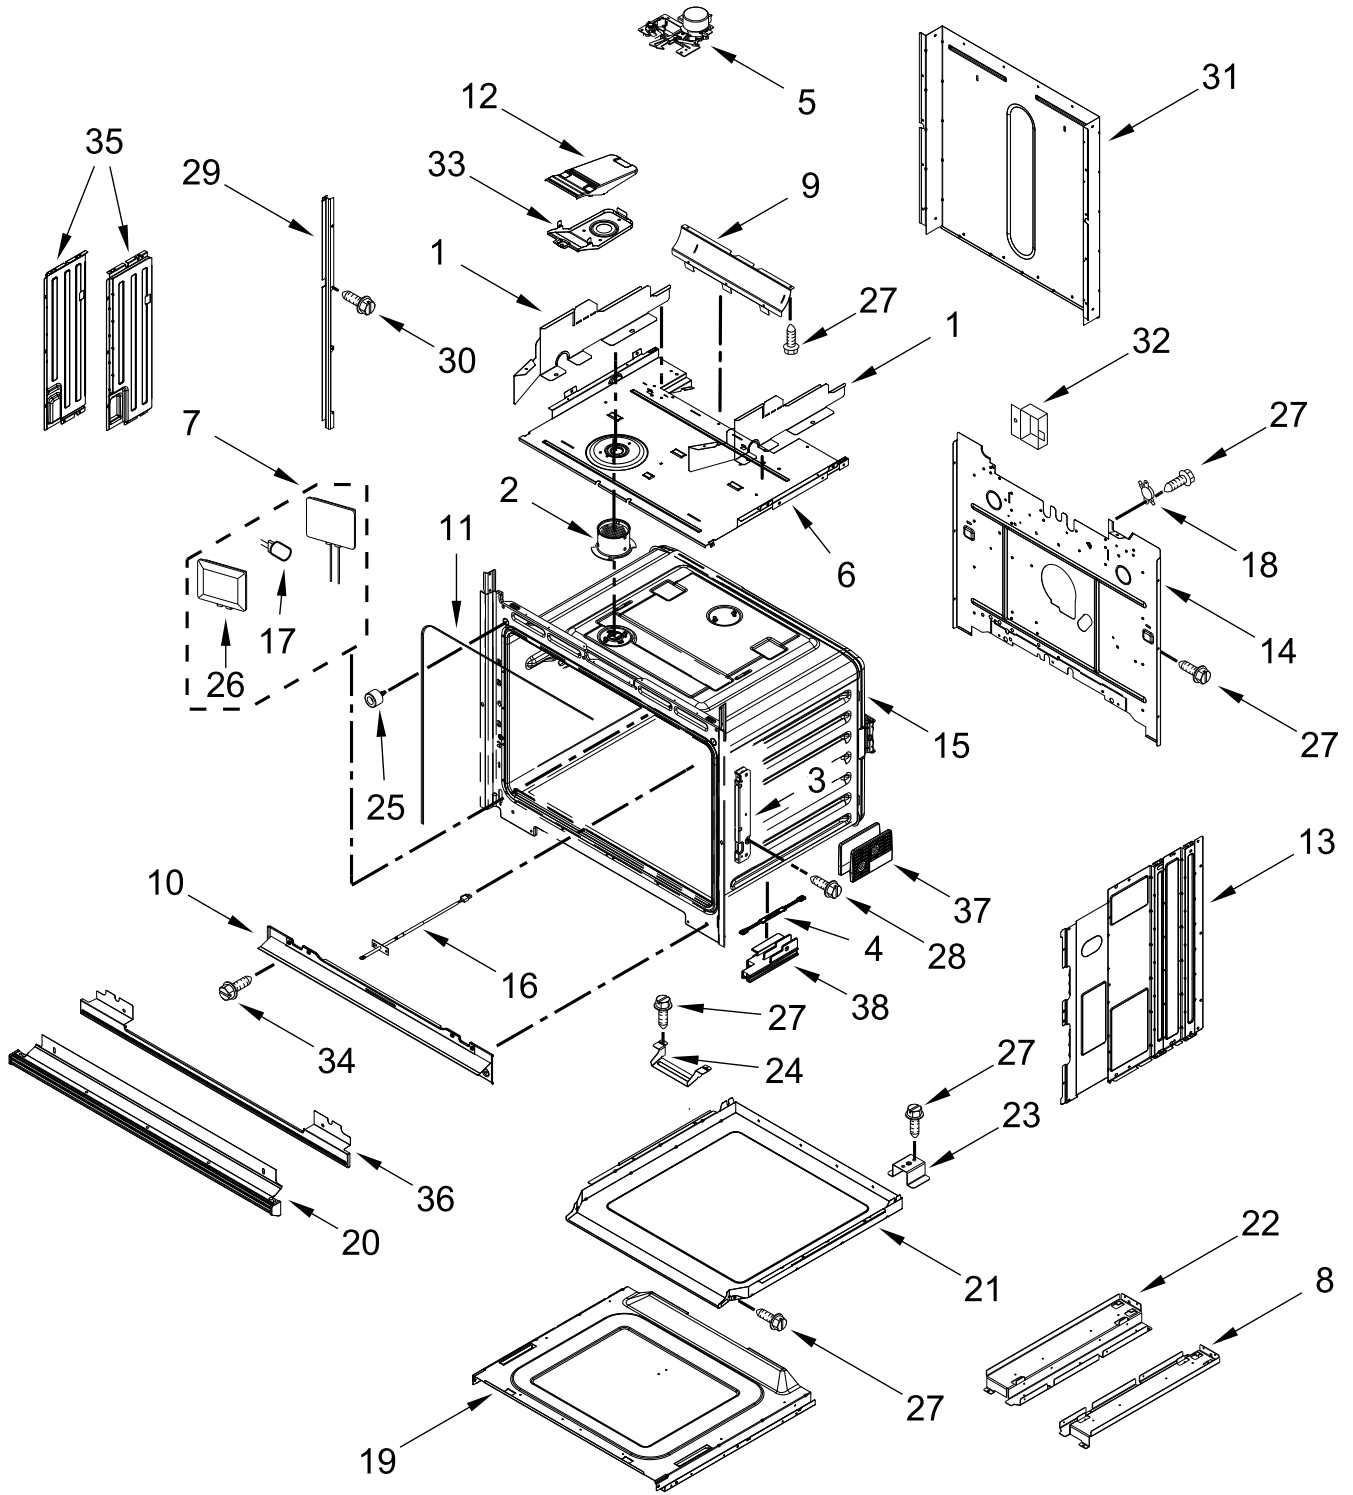

# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11186391	Deflector, Chassis (Left)	17	W10472384	Bulb, Light	31	W11134657	Duct, Lower Chassis Back
	W11186398	Deflector, Chassis (Right)	18	4449751	Thermostat (TOD)	32	8285593	Cover, Connector
2	W11085298	Tube, Vent	19	W11135103	Base, Chassis	33	W11256423	Base, Vent Exhaust
3	W11239070	Receiver, Hinge (Left)	20		Assembly, Bottom Vent	34	W11249635	Screw
	W11239072	Receiver, Hinge (Right)		W11467336	Black (Used in Black and White Models)	35	W11167419	Cover, Suction (Left)
4	W11558603	Spacer, Base		W11467754	Stainless	36		Trim, Bottom Vent
5	W11132456	Latch, Motorized	21	W11244446	Duct, Bottom Chassis		W11560859	Black
6	W11168071	Top, Chassis	22	W10283020	Support, Base (Left)	37	W11245118	Foot, Base
7	W11205574	Assembly, Oven Light	23	W11135135	Support, Air Channel	38	W11245114	Foot, Chassis (Left)
8	W10283021	Support, Base (Right)	24	W11390667	Spacer, Chassis Bottom Duct		W11245116	Foot, Chassis (Right)
9	W10904163	Deflector, Blower	25	W11166315	Bumper and Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	W11518347	Vent, Combo Center	26	W10472386	Lens, Light		W11234758	Insulation, Cavity
11	W11608108	Gasket	27	7101P426-60	Screw		W11188284	Insulation, Wrap
12	W11256424	Cover, Vent Exhaust	28	W10254050	Screw			
13	W11165274	Side, Chassis	29		Trim, Side			
14	W11223327	Back, Chassis		W11235457	Black (Left)			
15		Liner, Oven (Not Serviceable)		W11235458	Black (Right)			
16	W11346074	Probe, Sensor	30	W11404000	Screw			

 
# OVEN DOOR PARTS

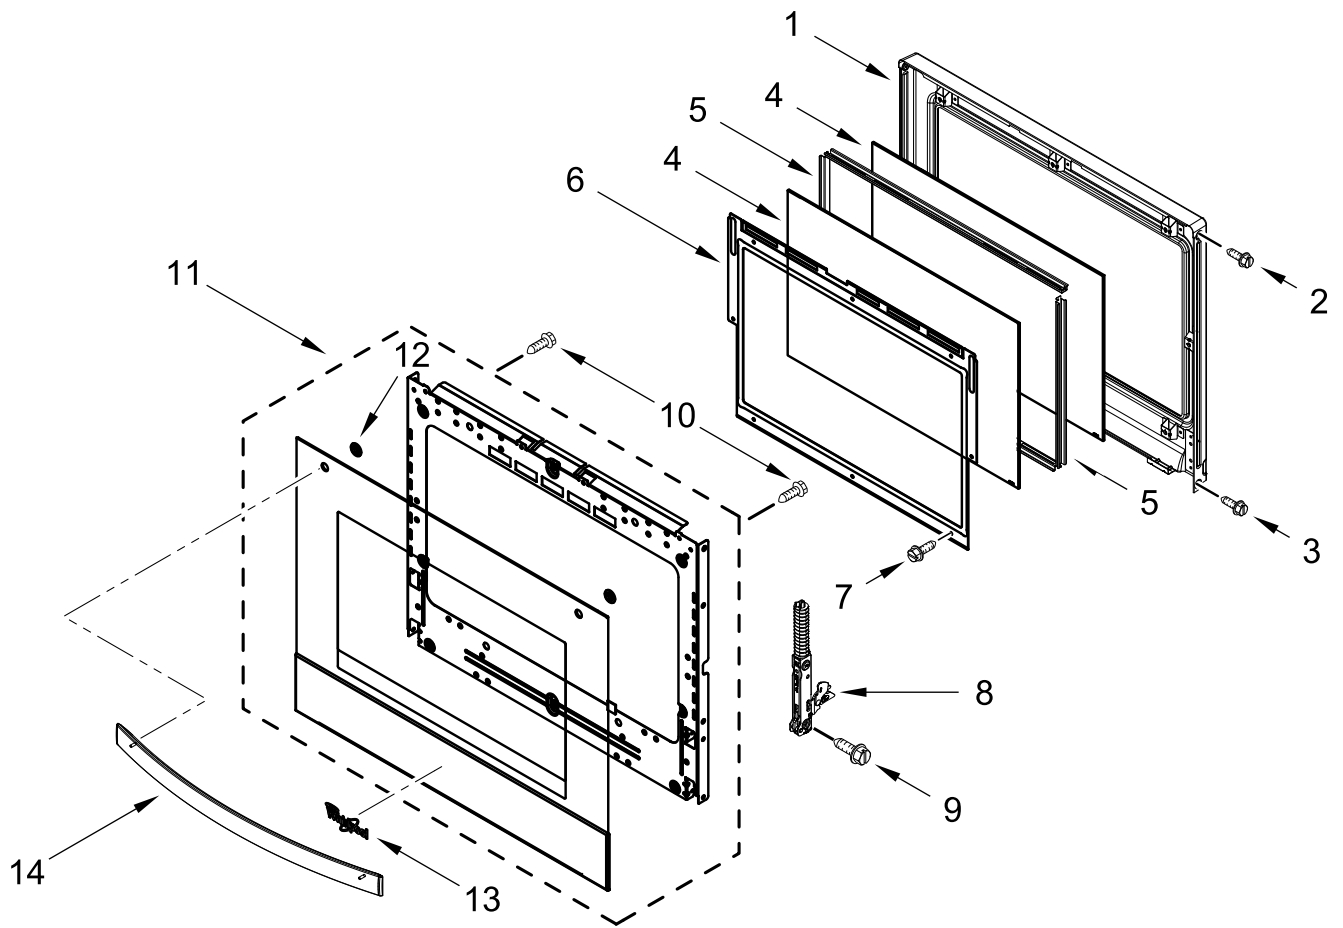

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	9	3196183	Screw	14		Handle, Door
2	7101P375-60	Screw	10	W11317731	Screw (Black)		W11532518	Black
3	W11290045	Screw	11		Outer Door Assembly		W11660149	White
4	W10618107	Glass, Inner		W11499217	Black		W11532517	Stainless
5	W11302730	Spacer, Air Divider		W11499219	White			
6	W11174095	Retainer, Air Divider Glass		W11499218	Stainless			
7	7101P426-60	Screw	12	W10319024	Washer, Door			
8	W11394143	Hinge, Door (Left)	13	W10884775	Badge			
	W11394144	Hinge, Door (Right)						
 
# INTERNAL OVEN PARTS

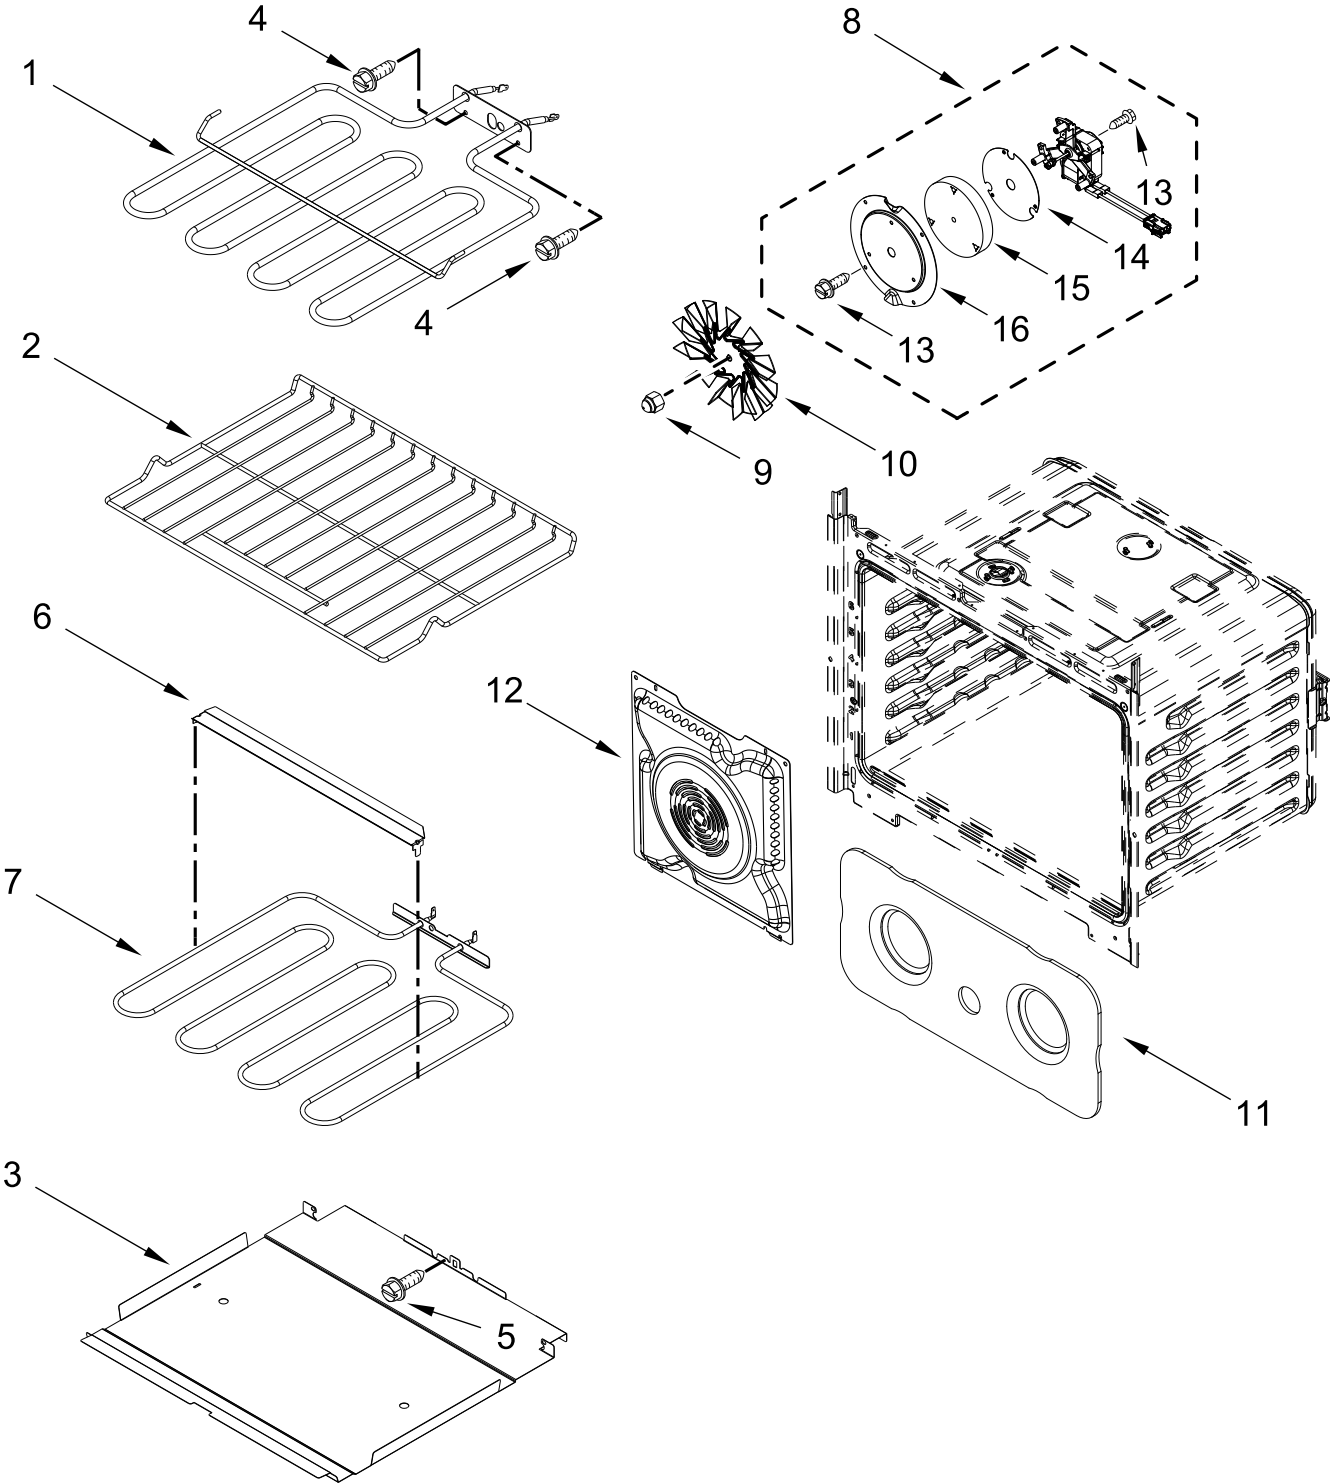




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W11398058	Convect Motor Assembly	15	W11251716	Insulation, Convect Motor
2	W11122597	Rack, Oven	9	W11433702	Nut, Acorn (LH)	16	W11398057	Cover, Convect Plate
3	W10318198	Tray, Hidden Bake	10	W11425715	Blade, Fan			
4	7101P434-60	Screw	11	W11489860	Plate, Ring Element			
5	7101P426-60	Screw	12	W10359278	Baffle, Convection			
6	W10282957	Crossbar, Hidden Bake Tray	13	W10720084	Screw			
7	W11292248	Element, Bake	14	W11251715	Plate, Convect Motor			

 
# MICROWAVE DOOR PARTS

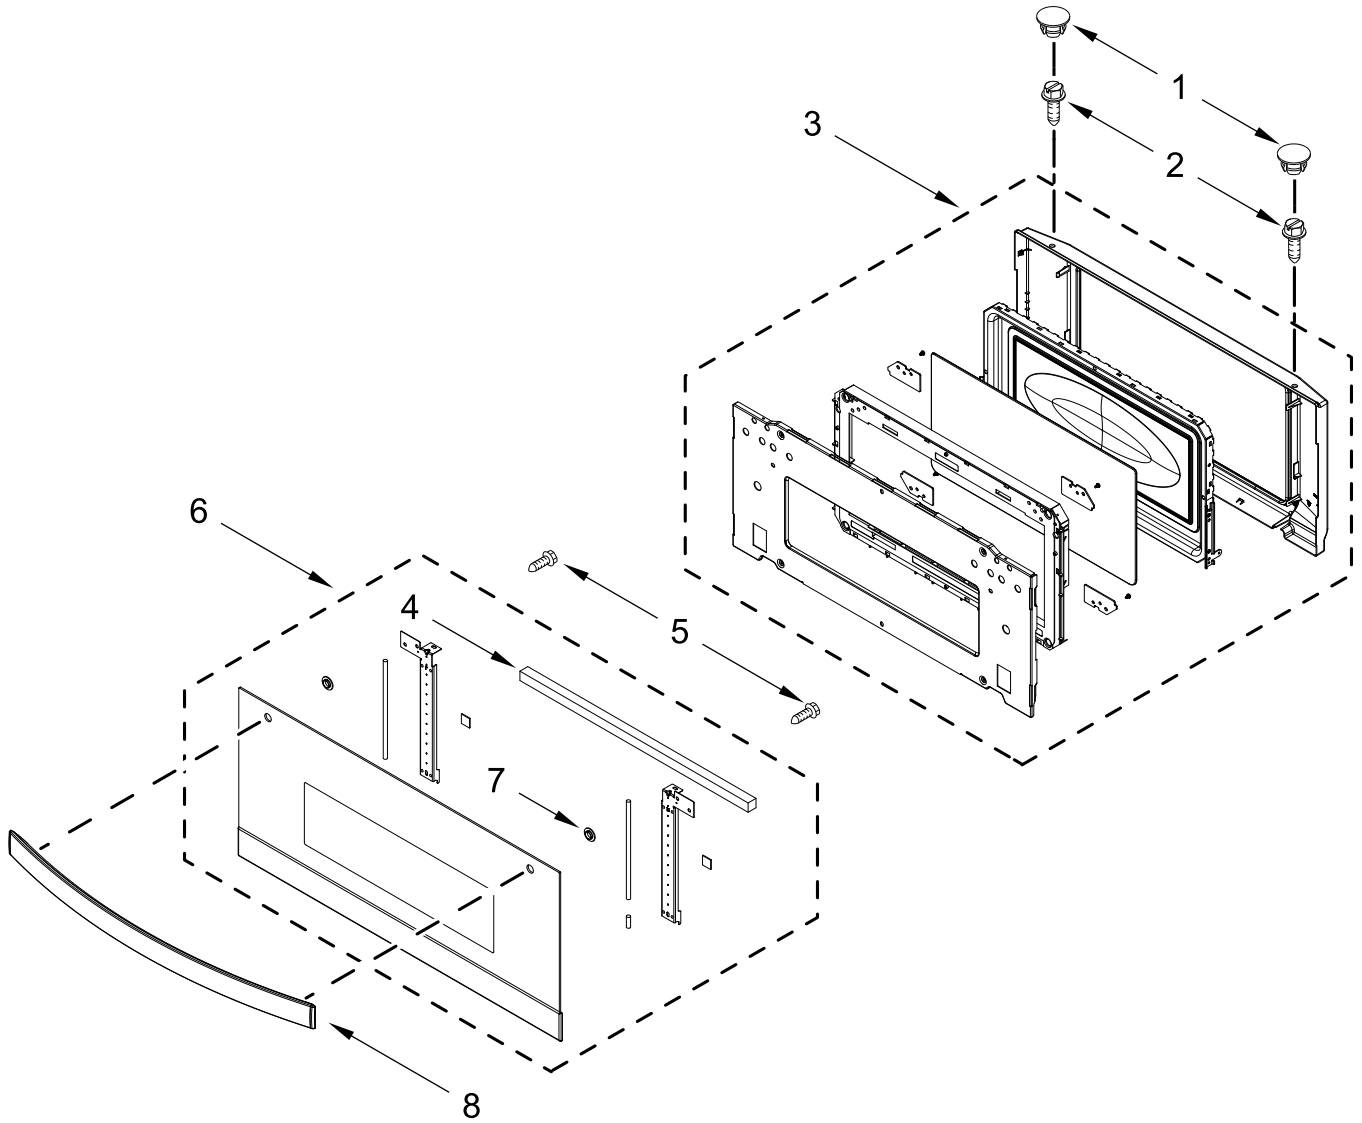

# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Outer Door Assembly	8		Handle, Door
2	7101P338-60	Screw		W11500261	Black		W11532518	Black
3	W11639555	Inner Door Assembly		W11500263	White		W11660149	White
4	W10359769	Foam, Door Handle		W11500262	Stainless		W11532517	Stainless
5	W11317731	Screw (Black)	7	W10319024	Washer, Door			








 
# CABINET AND STIRRER PARTS

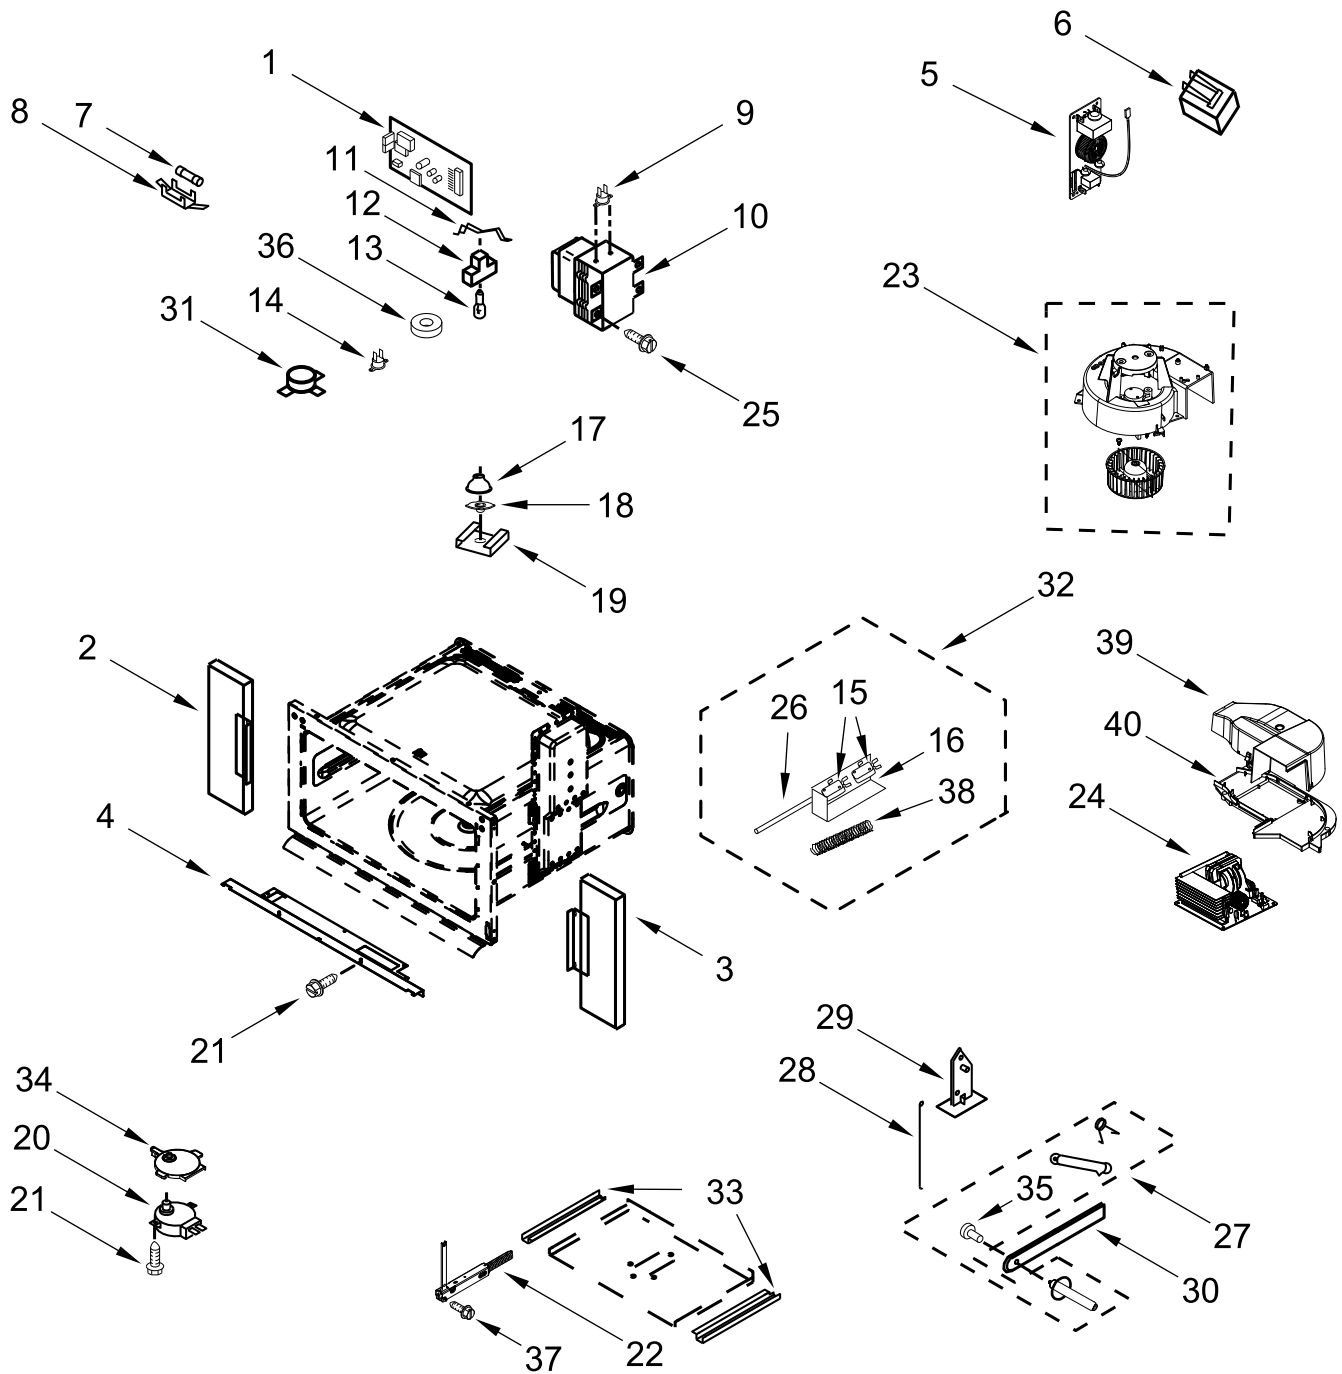

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	15	461967848881	Switch	31	W10460457	Sensor, Humidity
2	461967017491	Trim, Side (Left)	16	W10876593	Holder, Switch	32	W10358241	Assembly, Interlock Switch
3	461967017481	Trim, Side (Right)	17	423107022541	Reflector	33	461967008461	Support, Bottom
4	W11334716	Vent, Top Microwave	18	423107720491	Lens, Lamp	34	461967753742	Adapter, Turntable Motor
5	W11505129	Filter, Noise	19	W11440819	Clip, Spring	35	461967510191	Bushing
6	461967848621	Transformer, Light (20V)	20	461967848971	Motor, Turntable	36	W10769147	Sealing, Lamp
7	241908600053	Fuse	21	461967825321	Screw	37	461967825781	Screw (Shoulder)
8	4375231	Block, Fuse	22	W11131527	Hinge, Door	38	423107570871	Spring, Release Rod
9	461967846741	Thermostat, Magnetron	23	W11131760	Cooling Fan Assembly	39	W11591019	Housing, Upper Inverter
10	W11504545	Magnetron	24	W11504539	Inverter	40	W11591018	Housing, Lower Inverter
11	W10465869	Spring, Lamp	25	461967825971	Screw			
12	W10490593	Holder, Lamp	26	461967750464	Rod, Push			
13	W10795595	Lamp, Halogen	27	W10128850	Assembly, Sliding Arm			
14	W10389447	Thermostat	28	461967570351	Spring, Torsion			
			29	461967750494	Support			
			30	W11213889	Arm, Sliding			

        
# TOP VENTING PARTS

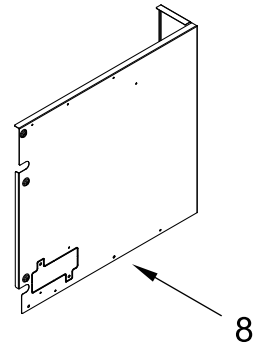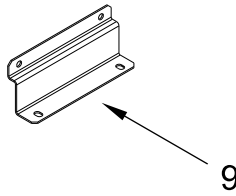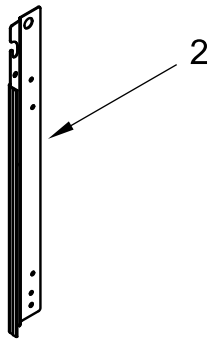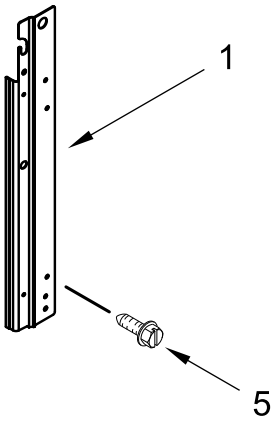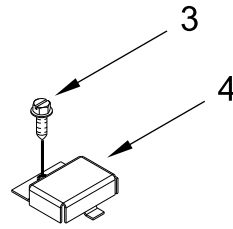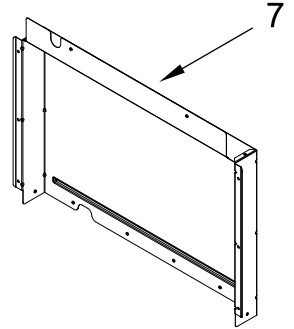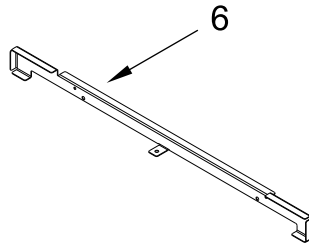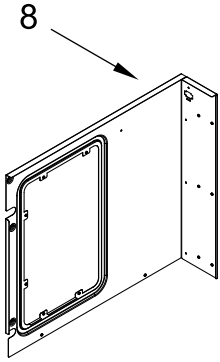

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11627410	Siderail, Combo (Left)	5	7101P633-60	Screw (Black)	8	W11171909	Side, Combo Chassis (Left)
2	W11627411	Siderail, Combo (Right)	6	W10283022	Support, Crossbar		W11171919	Side, Combo Chassis (Right)
3	7101P426-60	Screw	7	W11171004	Cover, Combo Chassis Back Duct	9	W10283024	Side, Bracket
4	8285593	Cover, Connector						
 
# INTERNAL MICROWAVE PARTS

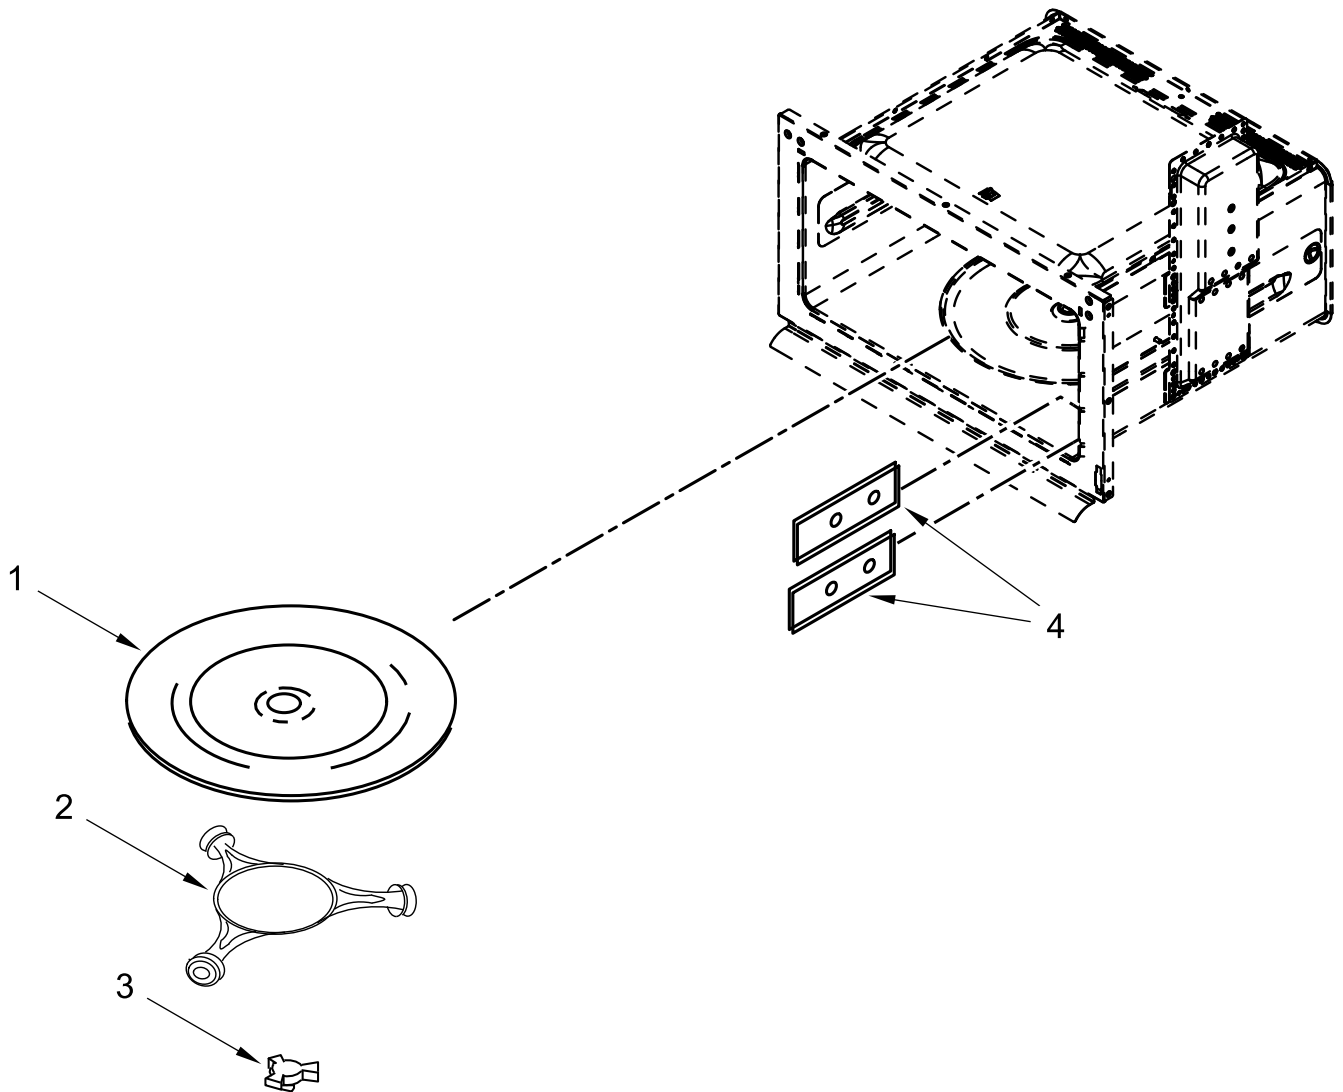



# INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	3	W10545578	Drive, Turntable
2	W10367316	Ring, Turntable	4	461967451001	Plate, Cover

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic Miscellaneous
	4448950	Screw, Door Installation
		ACCESSORY PARTS
		Vent, Deflector
	W11594553	Black
	W11551866	Stainless Trim, Tall Vent
	W11570325	Black
	W11570323	Stainless Trim, Bottom Vent
	W11570321	Stainless