




**GAS COOKTOP**

**MODELS:**

WCGK5030PW00 (White)


# COOKTOP, BURNER AND GRATE PARTS

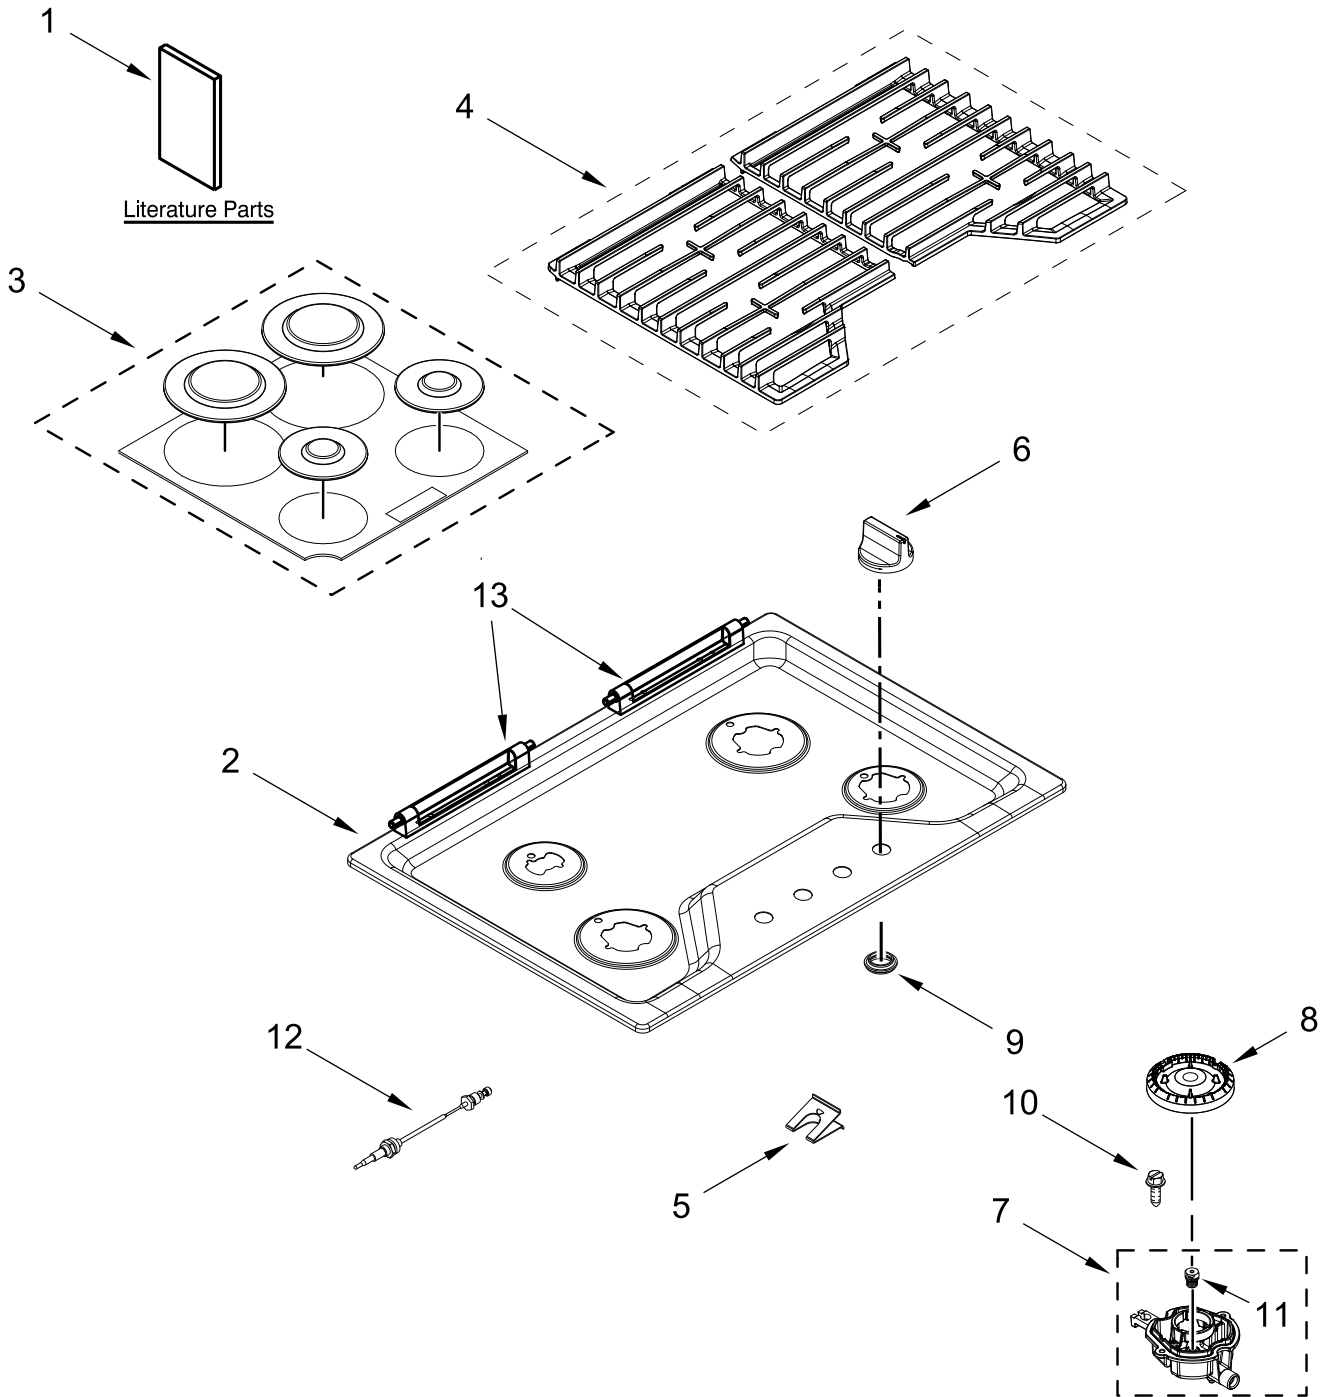

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11352193	Flame Spreader (Left Front and Right Rear)	13		Hinge, Grate (Not Serviced)
	W11613935	Owner's Manual						
	W11635589	Quick Start Guide						
2		Cooktop		W11352197	Flame Spreader (Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11591934	White		W11352195	Flame Spreader (Right Front)	W11632720		Harness (Switch), Main
3		Burner Cap Kit				W10878749		Harness, Spark Module
	W11498499	Black (Set of 4)	9		Grommet			
4		Grate Kit		W10625915	Black		3400015	Screw, Grounding
	W11567398	Black (Set of 2)	10	W10758282	Screw	W10392003		Cord, Power
5	W10827923	Electrode, Spring	11	W10723360	Orifice (Left Front)	W10132200		Relief, Strain
6		Knobs, Cooktop					313438	Clip, Harness
	W11576415	White		W11364991	Orifice (Left Rear)	W11573776		LP Conversion Kit
7	W11567145	Holder, Orifice (12K) (Left Front)		W11631338	Orifice (Right Front)	3801F935-51		Bracket, Tie Down
	W11567151	Holder, Orifice (5K) (Left Rear)		W11610057	Orifice (Right Rear)	7101P062-60		Screw (For Tie Down Bracket)
	W11567146	Holder, Orifice (9.1K) (Right Front)	12	W11640975	Wiring, Electrode (440MM)			
	W11567144	Holder, Orifice (18K) (Right Rear)						

# BURNER BOX, GAS VALVES AND SWITCH PARTS

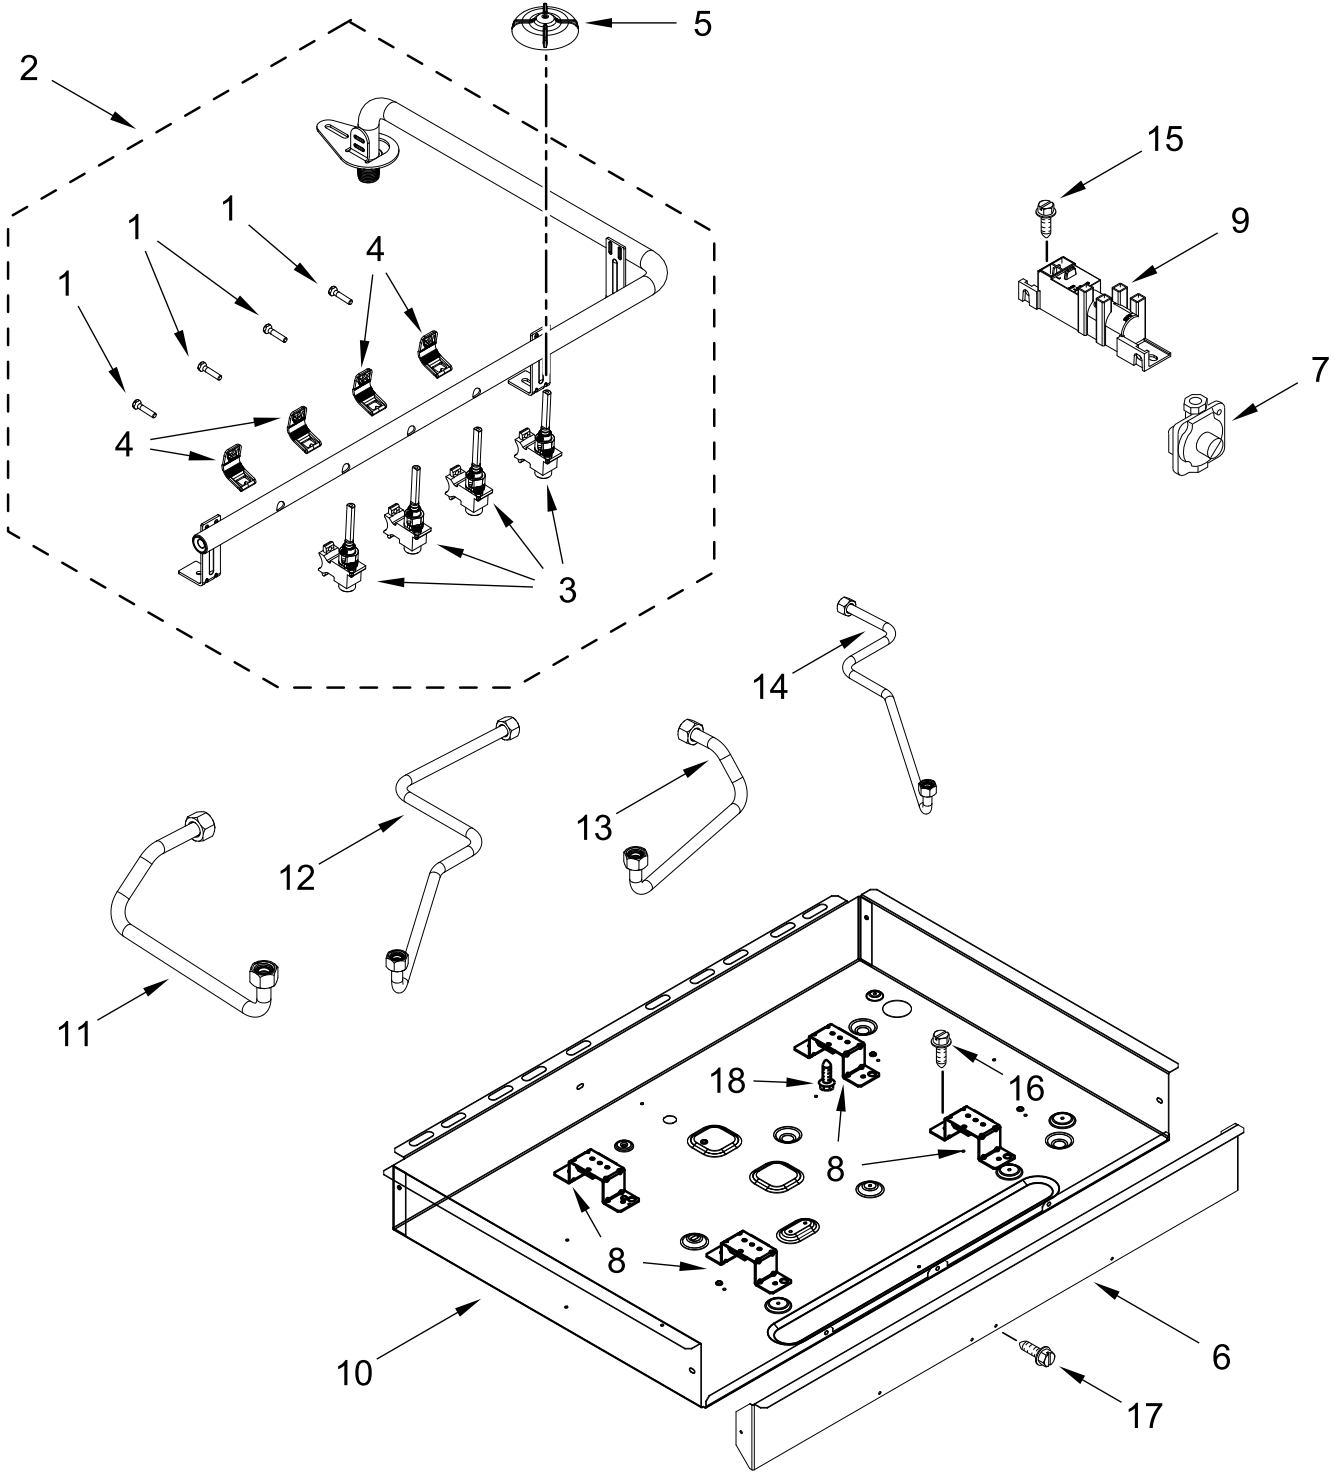

# BURNER BOX, GAS VALVES AND SWITCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10743274	Screw	7	W10449143	Regulator, Pressure	14	W11573971	Tube, Gas (Right Rear)
2	W11573986	Manifold Assembly	8	W11566469	Bracket, Orifice Holder	15	7101P426-60	Screw
3	W11629615	Valve, Single (Left Front and Right Rear)	9	W11349967	Module, Spark	16	W10443110	Screw
	W11629616	Valve, Single (Left Rear)	10		Box, Burner (Not Serviced)	17	3196537	Screw
	W11629617	Valve, Single (Right Front)	11	W11573969	Tube, Gas (Left Front)	18	8286921	Screw, Burner Rail (M4)
4	8287055	Bracket, Single Valve	12	W11573970	Tube, Gas (Left Rear)			OPTIONAL ACCESSORY PART (NOT INCLUDED)
5	W11507167	Seal, Switch Shaft	13	W11573974	Tube, Gas (Right Front)		W10685483	Griddle
6	W11620860	Panel, Front						