




**ELECTRIC RANGE
(Fingerprint Resistant)**

MODELS:

WFE550S0LZ3 (Stainless)

WFE550S0LV3 (Black Stainless)


COOKTOP PARTS

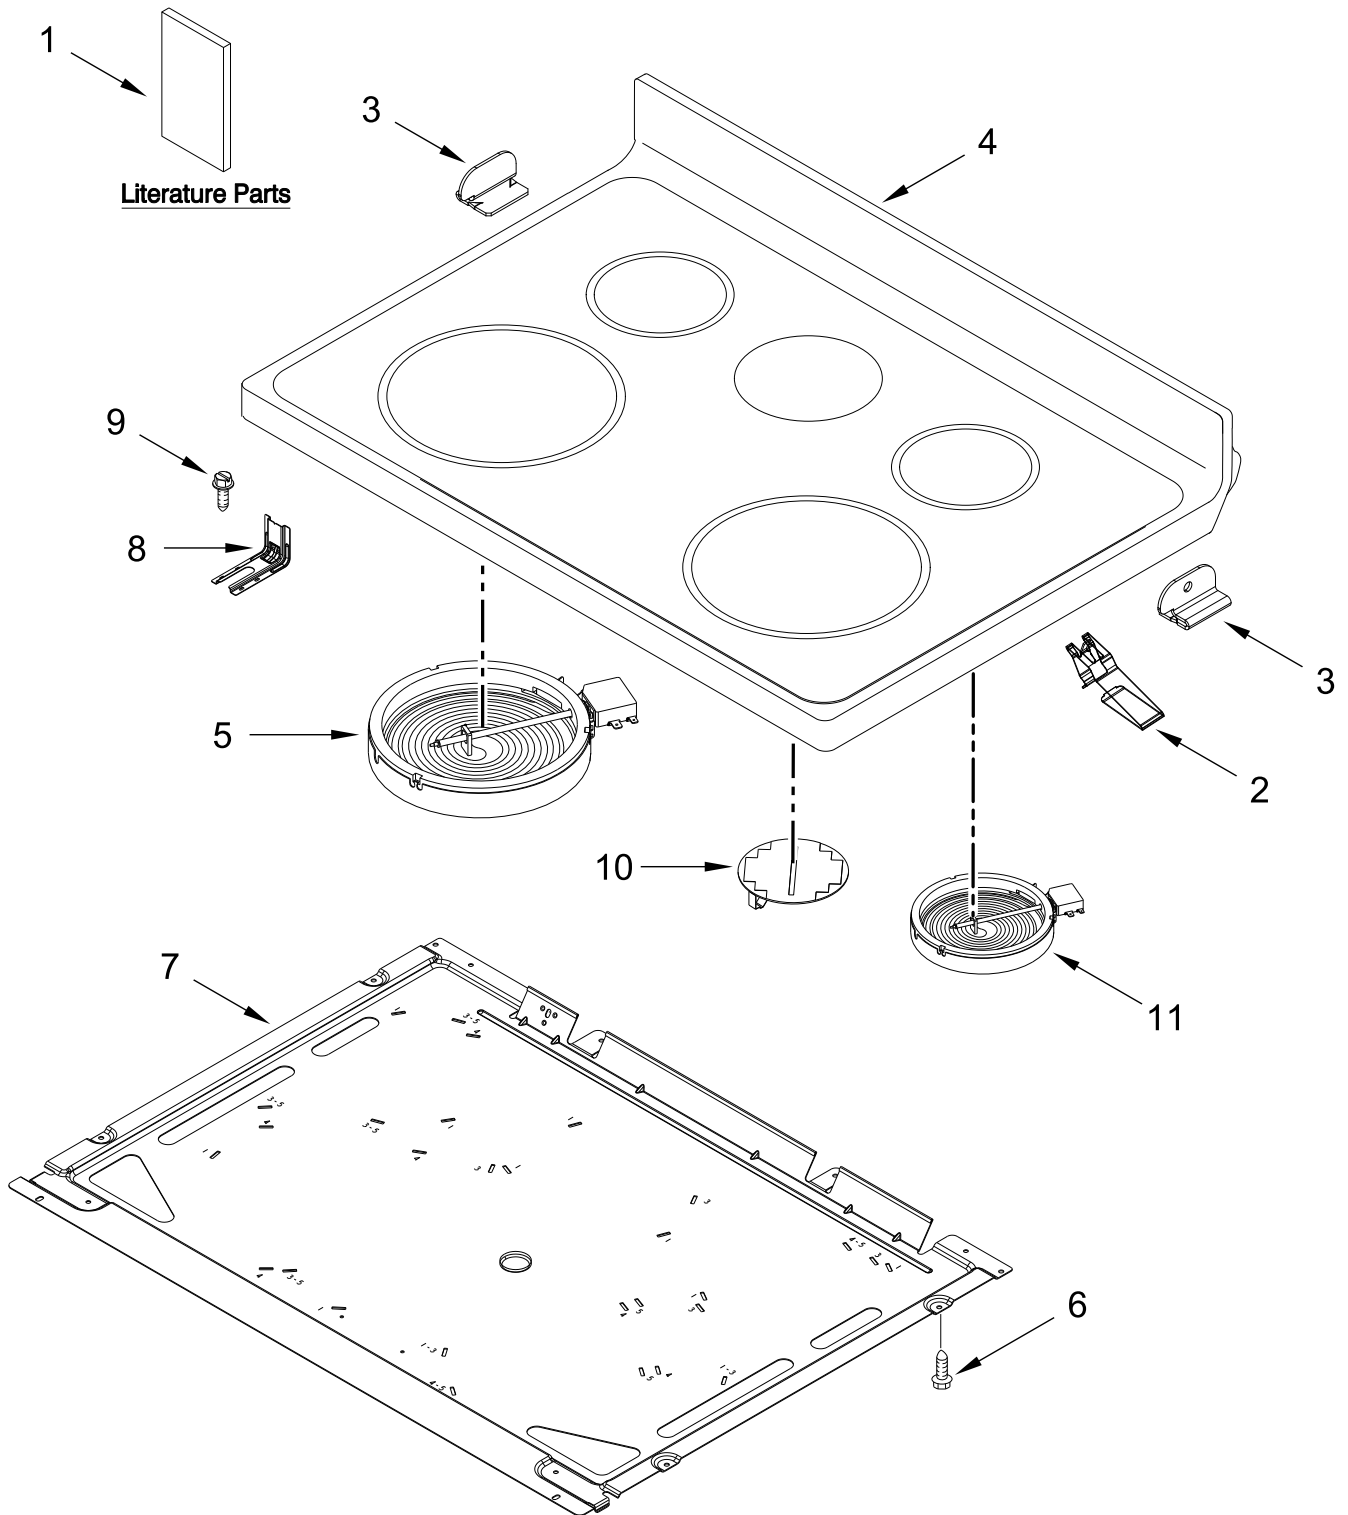

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	11	8273994	Element (1200W)
	W11443025	Owners Manual	7	W10691223	Pan, Radiant Element			(Left Rear, Right Rear)
	W11524742	Quick Start Guide	8	W11379945	Bracket, Anti-Tip			FOLLOWING PARTS NOT ILLUSTRATED
	W11523158	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit		W11452630	Harness, Main
2	W11600012	Spring, Element	10	W11668631	Element, Warm Zone		W11598759	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)			(Center)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)					W11134845	Harness, Cooktop (Right)
4		Cooktop					W11172528	Harness, Hidden Bake
	W11034836	Black					W10183541	Clip, Spring Steel
5	W10711900	Element (3000W) (Left Front)					3196520	Clip, Wire
	W10275048	Element (3000 and 1400W) (Right Front)						


CONTROL PANEL PARTS

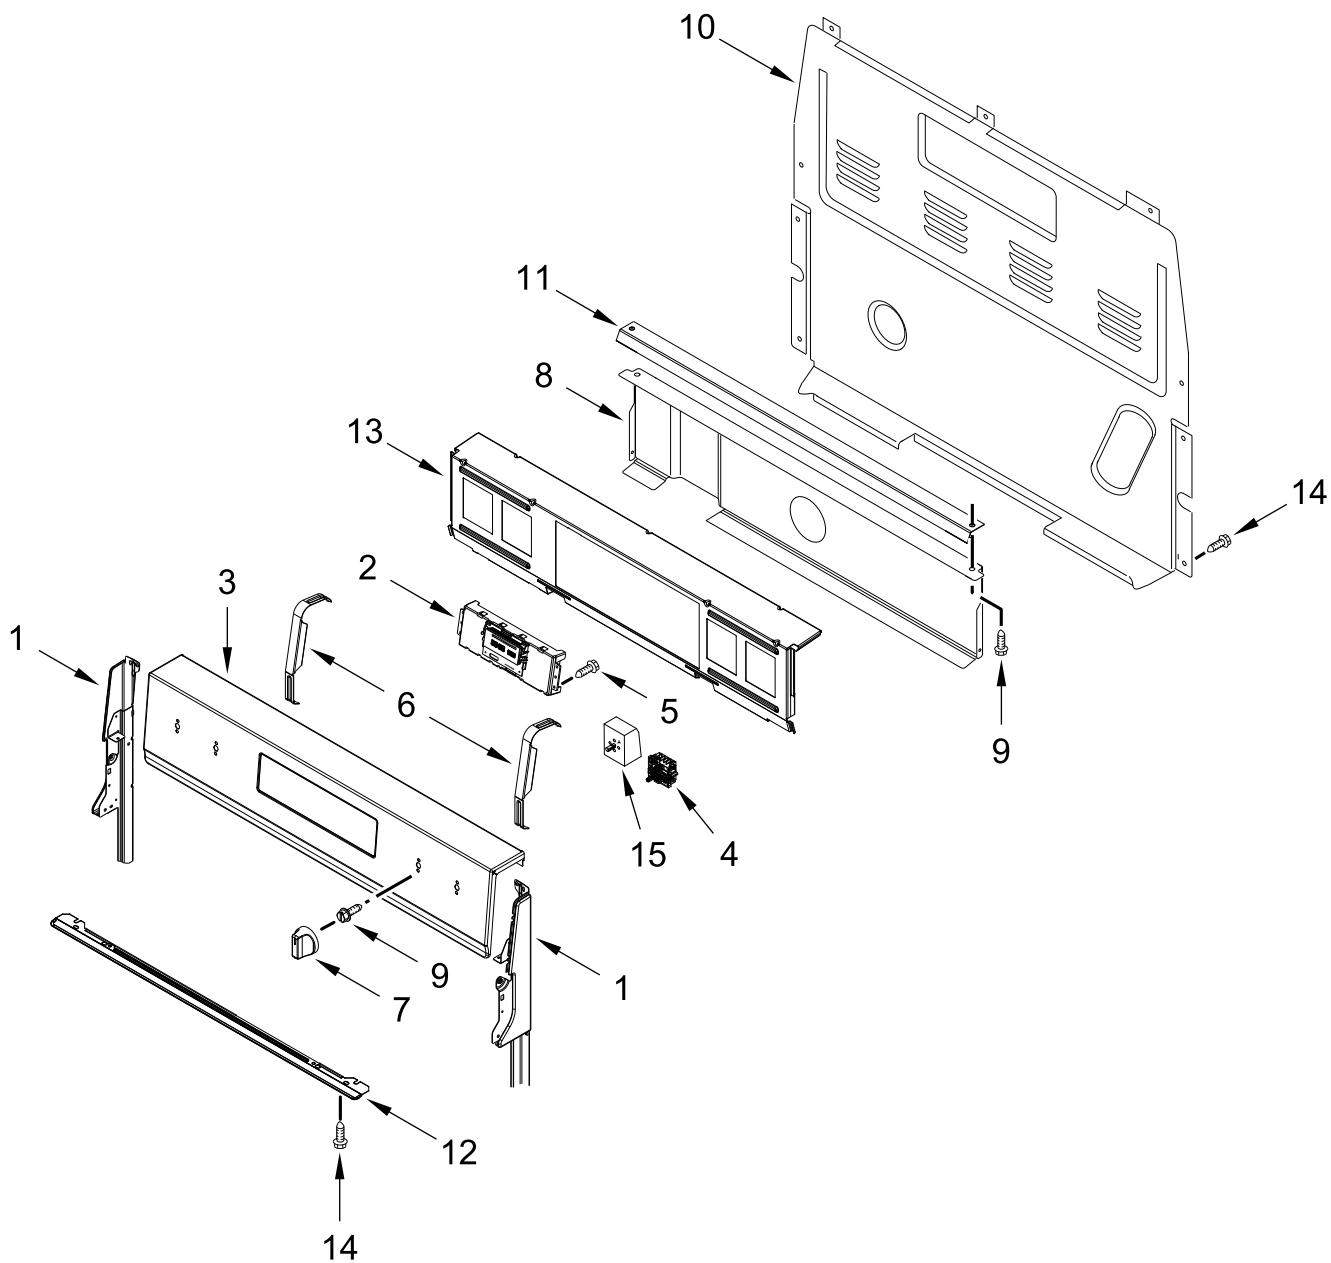

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	10	8272473	Cover, Upper Rear
	W11213290	Black (Left)			(Left Front and Right	11	W10525121	Bracket, Console
	W11213292	Black (Right)			Front)			Mounting
2		Control, Electronic (LCX)	5	3196178	Screw	12		Bracket, Eye Brow
	W11527158	Black	6	W10856361	Bracket, Control		W11051312	Black
3		Panel, Console	7		Knob	13	W10901802	Panel, Backer
	W11089993	Stainless		W11022717	Stainless	14	3196169	Screw
	W11089994	Black Stainless		W11027166	Black Stainless	15	3148951	Switch, Infinite
			8	W10134247	Shield, Heat			(Right Rear and Left
			9	3400882	Screw			Rear)


CHASSIS PARTS

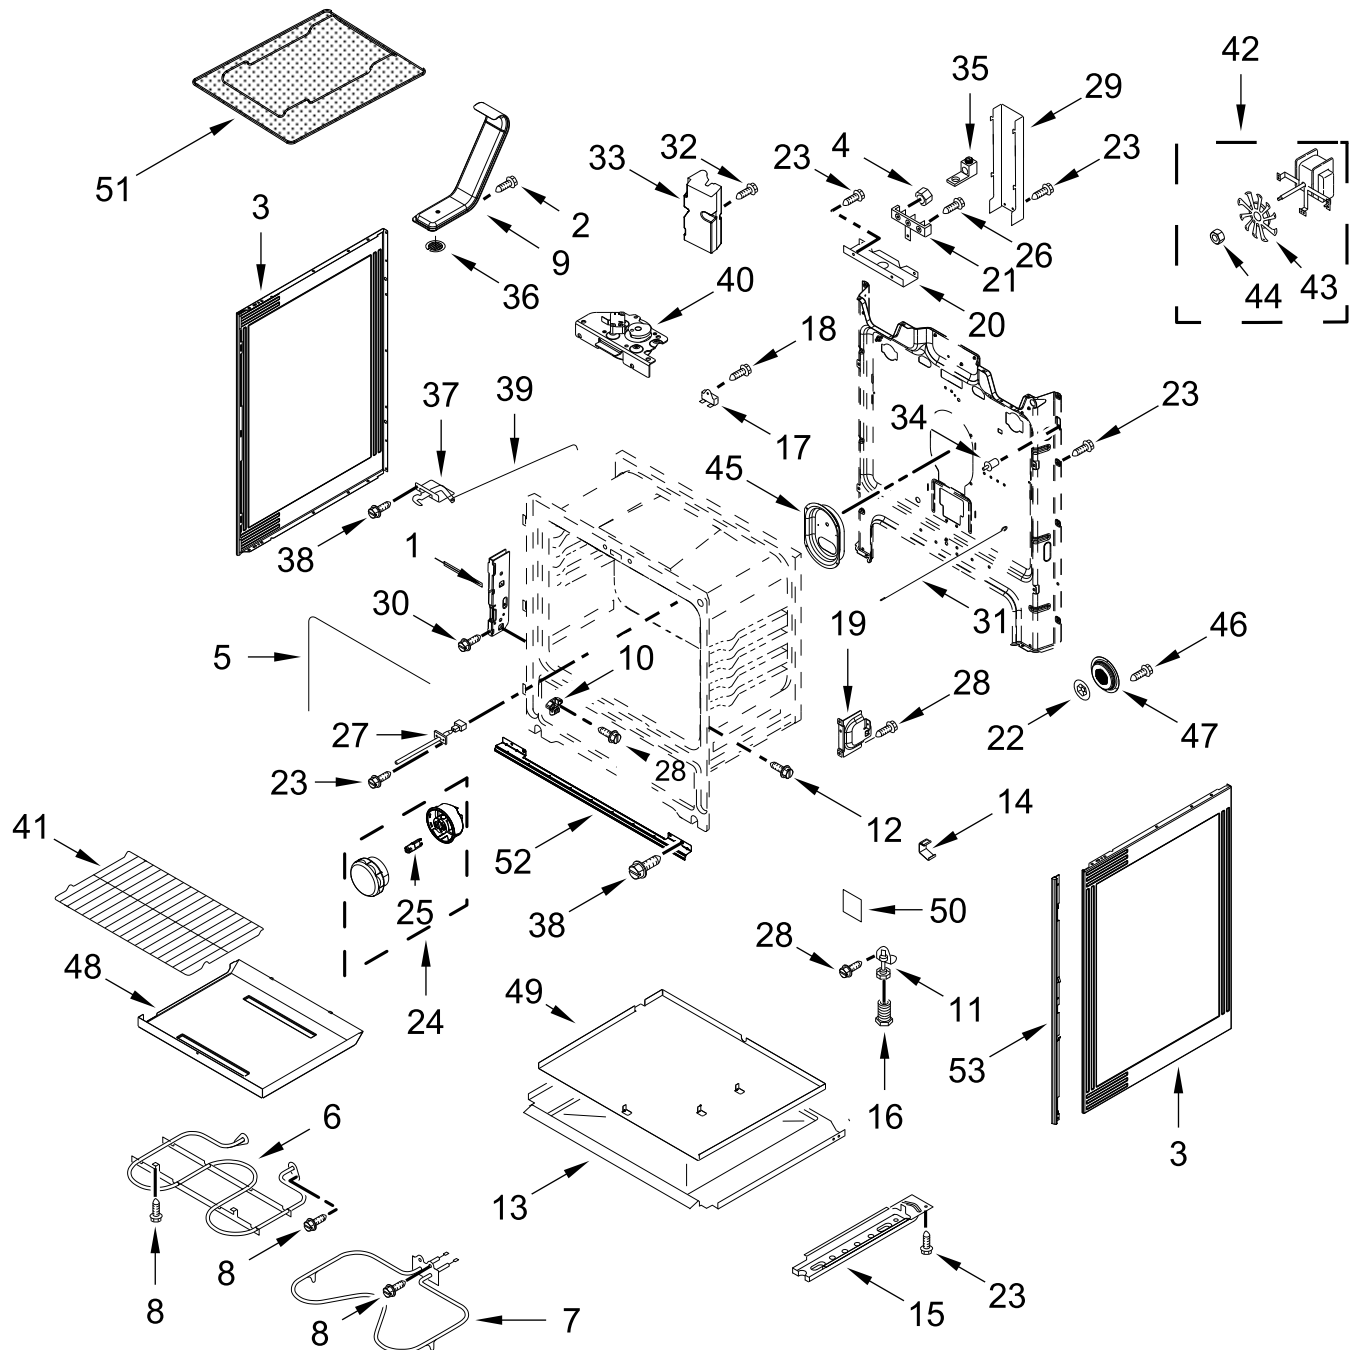

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	21	W10245259	Block, Terminal	42	W11403617	Fan, Convection
2	3196154	Screw	22	3400968	Nut	43	W11425715	Blade, Fan
3		Panel, Side	23	3196178	Screw	44	W11433702	Nut, Acorn (LH)
	W10162245	Black	24	W11634772	Light Assembly	45	W10134126	Bracket, Fan
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	46	4449809	Screw
5	W11491751	Seal, Door	26	3400016	Screw	47	W10134124	Cover, Conv Fan
6	9757340	Element, Broil	27	W10181986	Sensor, Oven	48	W10183712	Tray, Hidden Bake
7	9755770	Element, Bake	28	3196169	Screw	49	W10134125	Shield, Heat
8	3196174	Screw	29	W10326122	Cover, Terminal Block	50	W10646923	Card, Insulator
9	W10134285	Tube, Vent	30	W10031780	Screw	51	W11661815	Basket, Airfry
10	W10674705	Glide, Drawer Front	31	9757239	Rod, Door Switch	52	W11464547	Bracket, Front Frame
11	W10341186	Front Foot Assembly	32	W11034869	Screw	53	W11510560	Barrier Rail, Rubber (Left and Right)
12	W10067840	Screw	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
13	W10134121	Tray, Insulation	34	W11511828	Switch, Door			
14	W10137382	Clip, Panel	35	W10281322	Kit, Bare Wire Adapter Block	W10774939		Insulation, Wrap
15	W10390008	Base Rail Assembly (Left)	36	W11092984	Screen, Vent	W11127324		Insulation, Back
	W10390007	Base Rail Assembly (Right)	37	9761013	Front Door Latch Assembly	W10333344		Insulation, Flue
16	W10058460	Foot, Leveling	38	3196560	Screw			
17	3196548	Fuse, Thermal	39	W10078380	Rod, Latch			
18	3196172	Screw	40	W10107820	Rear Door Latch Assembly			
19	W10404688	Clip, Oven Support	41	W11173792	Rack, Oven			
20	3186034	Bracket, Service						

DOOR PARTS

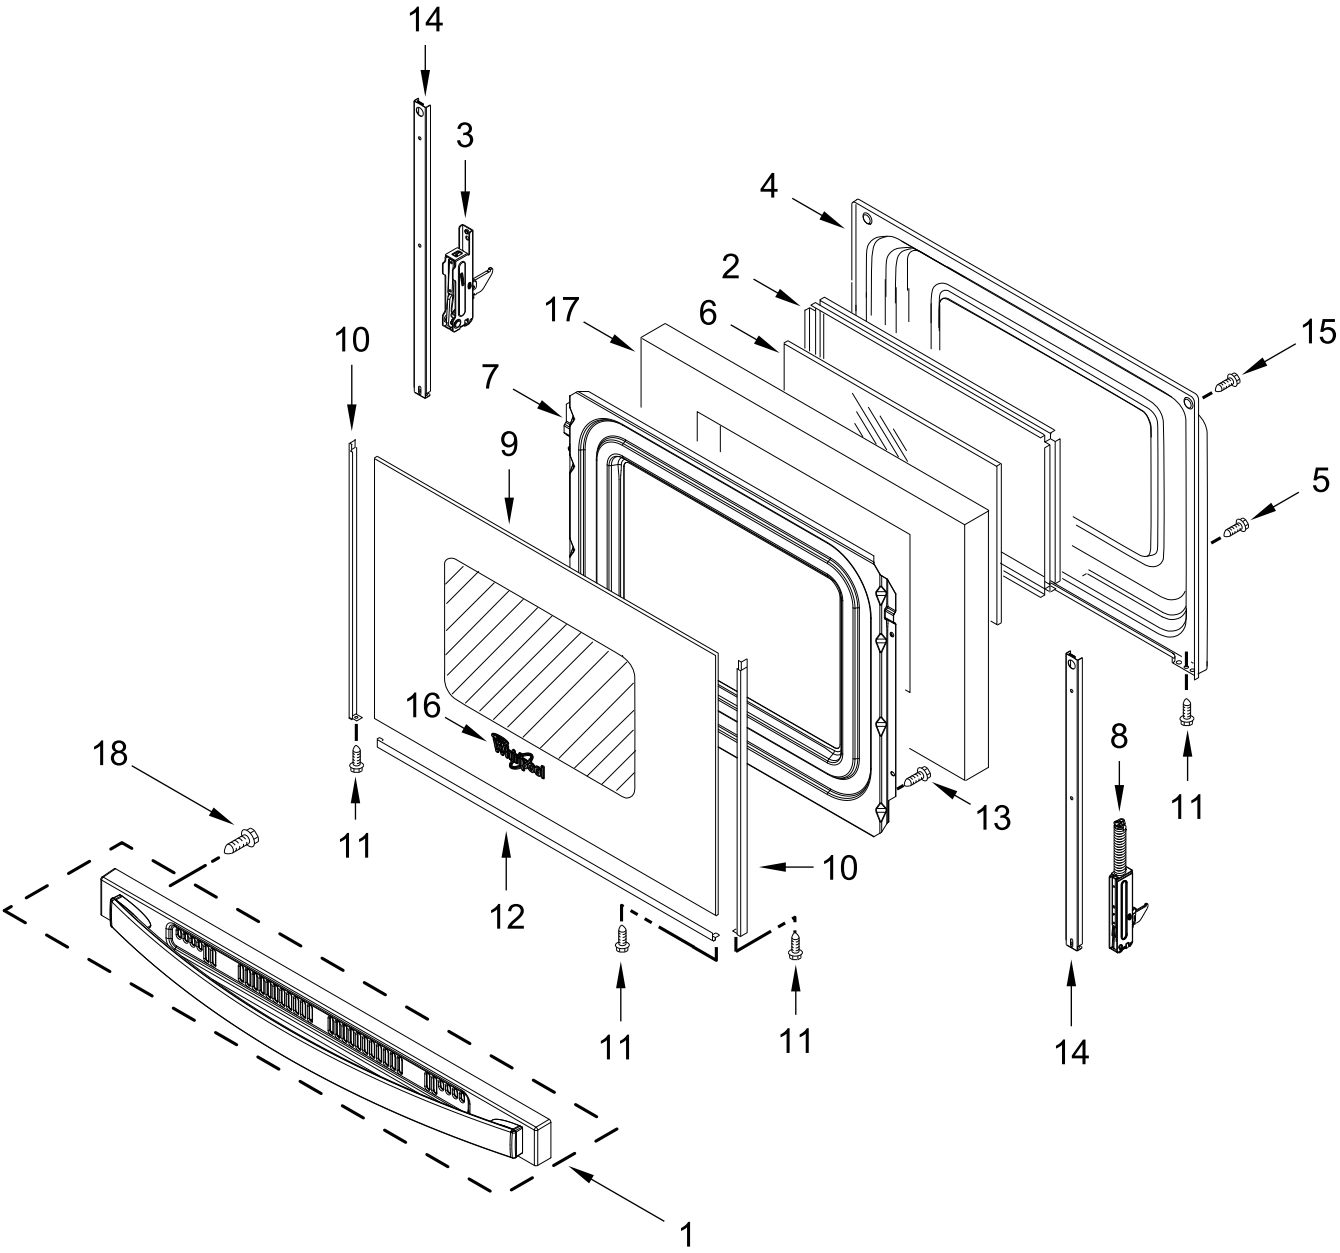


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242950	Stainless
	W11242951	Black Stainless
2	W10316950	Frame, Glass
3	W10299227	Hinge, Door (Passive)
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11380222	Retainer, Insulation
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W11687920	Black
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12		Trim, Lower
	W11444043	Black
13	W10031780	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16	W10884775	Badge
17	W10278991	Insulation, Door Strip
18	W10480830	Screw

DRAWER PARTS

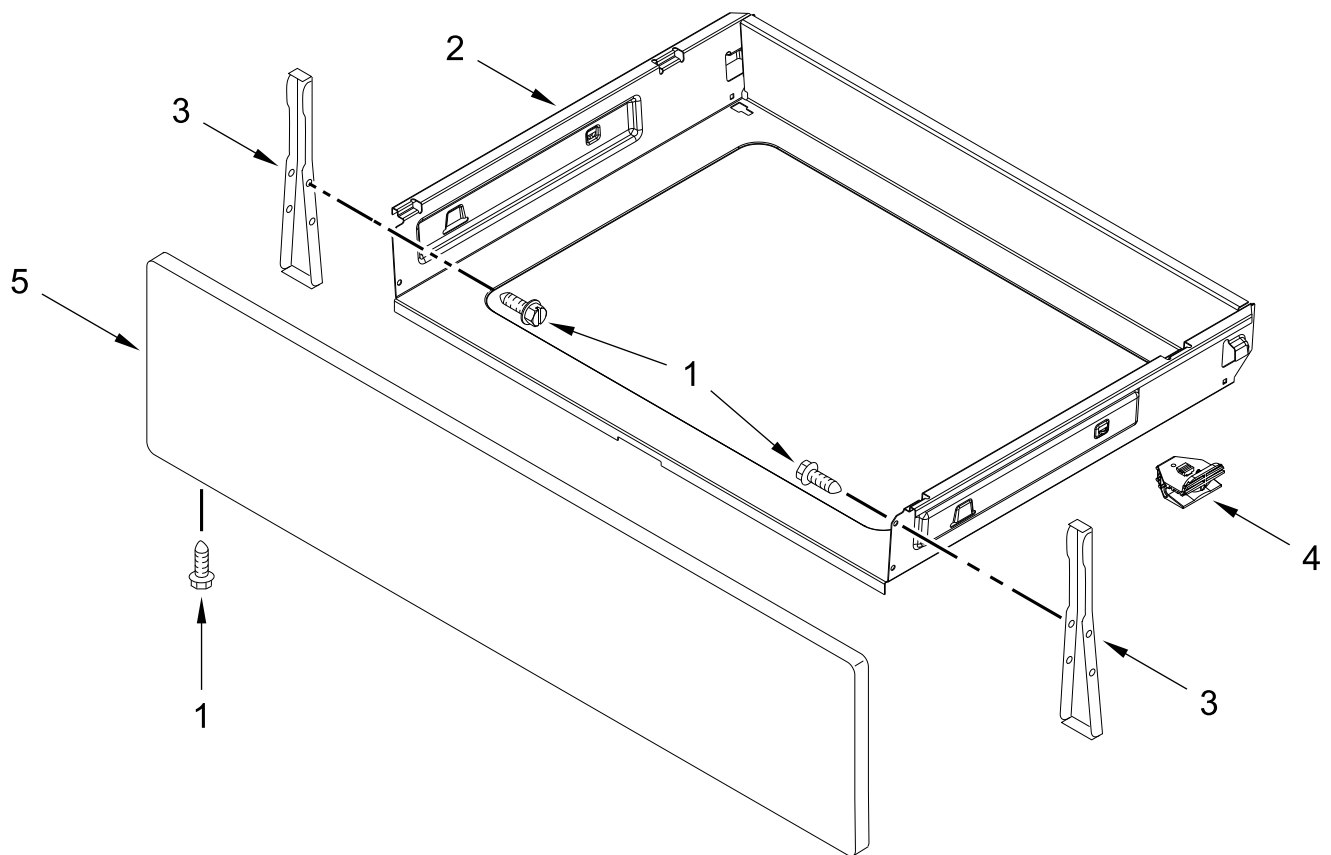

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462910	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11449698	Stainless
	W11449766	Black Stainless

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting