




ELECTRIC RANGE

MODELS:

WFE550S0LW3 (White)


COOKTOP PARTS

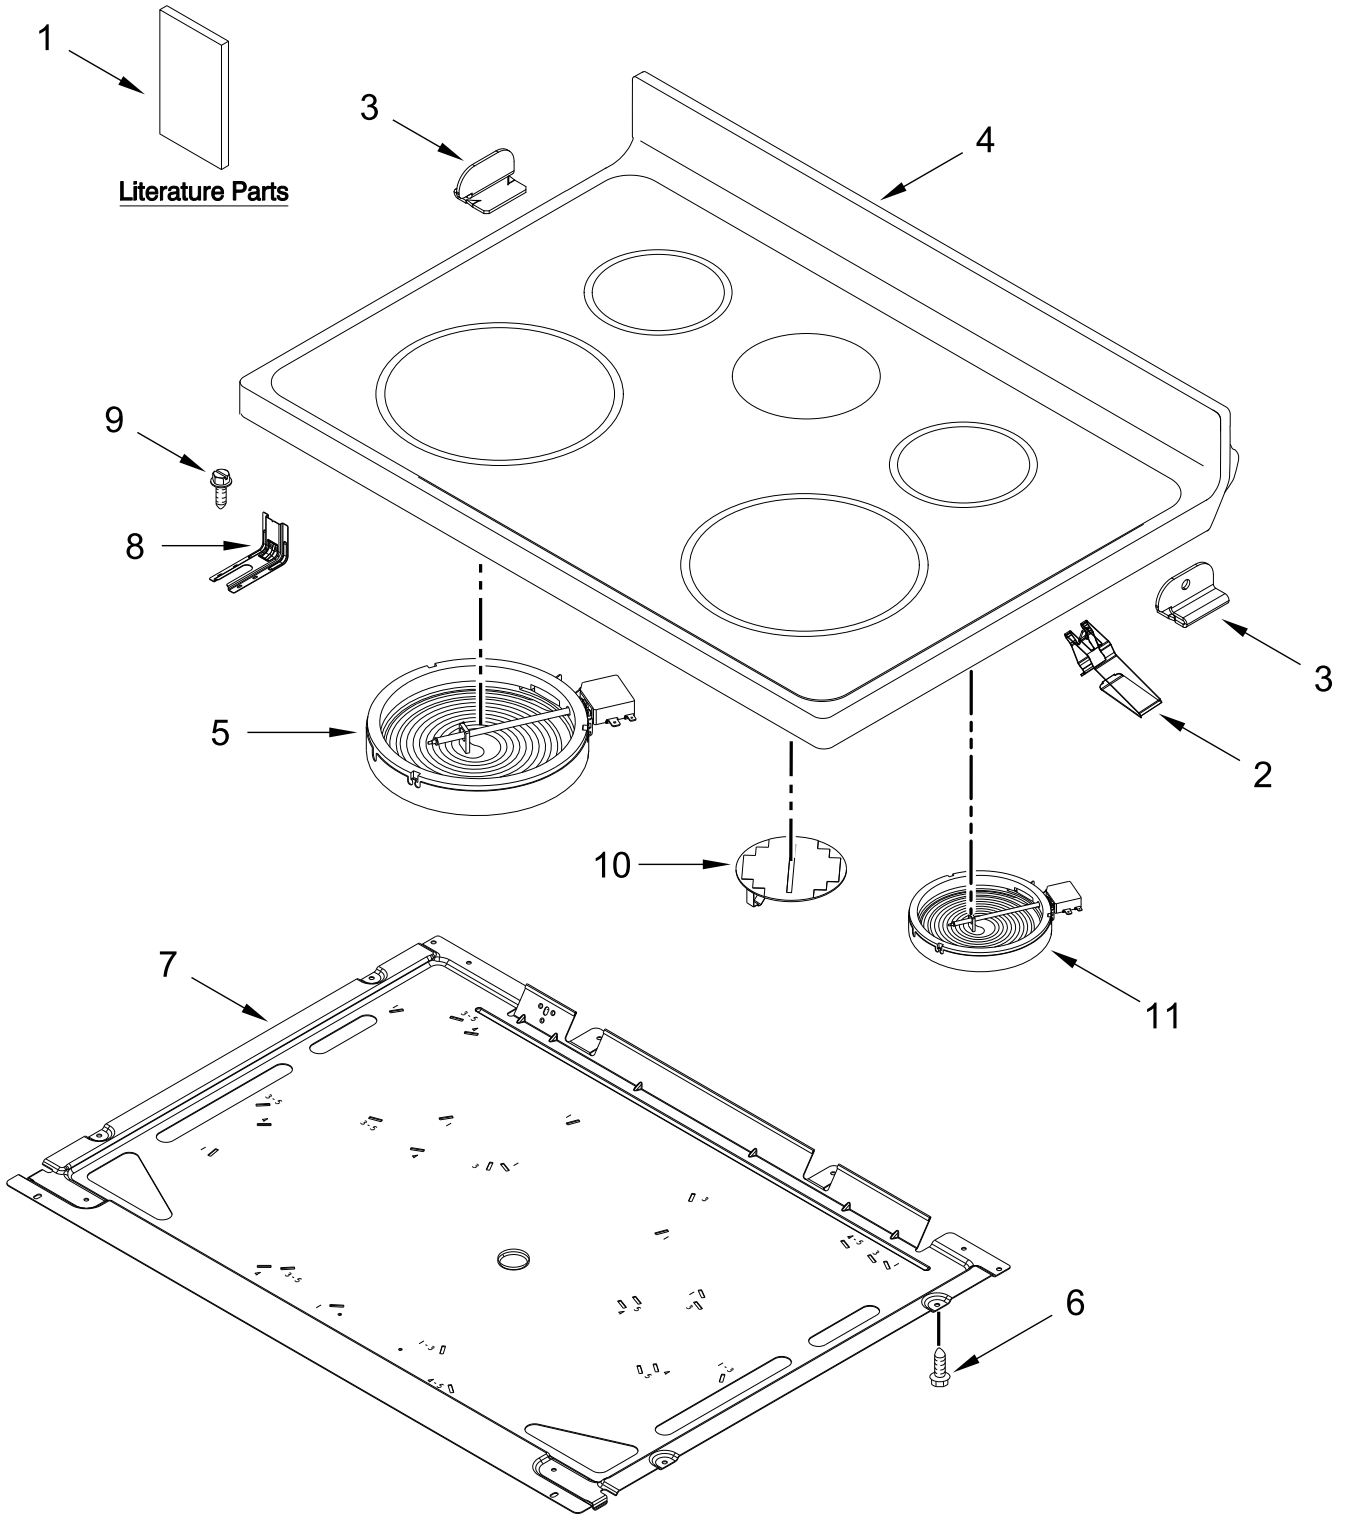

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	11	8273994	Element (1200W)
	W11443025	Owners Manual	7	W10691223	Pan, Radiant Element			(Left Rear, Right Rear)
	W11524742	Quick Start Guide	8	W11379945	Bracket, Anti-Tip			FOLLOWING PARTS NOT ILLUSTRATED
	W11523158	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit	W11452630		Harness, Main
2	W11600012	Spring, Element	10	W11668631	Element, Warm Zone	W11598759		Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)			(Center)	W11134603		Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)				W11134845		Harness, Cooktop (Right)
4		Cooktop				W11172528		Harness, Hidden Bake
	W11034832	White				W10183541		Clip, Spring Steel
5	W10711900	Element (3000W) (Left Front)				3196520		Clip, Wire
	W10275048	Element (3000 and 1400W) (Right Front)						


CONTROL PANEL PARTS

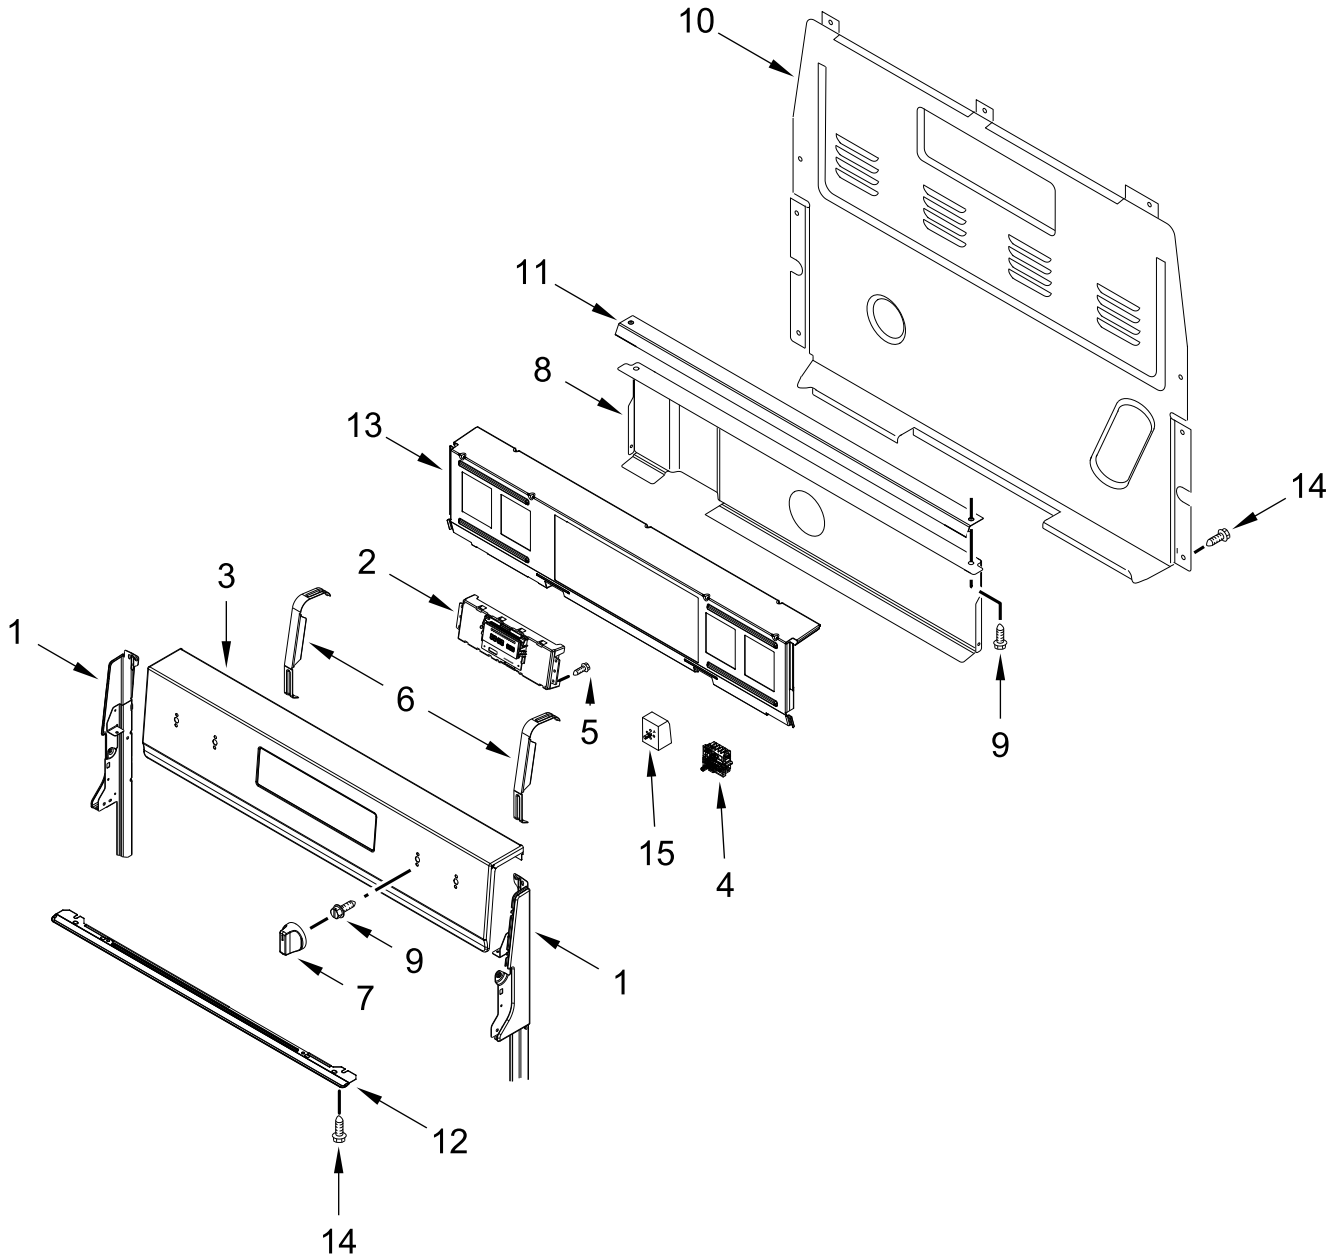

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	6	W10856361	Bracket, Control	15	3148951	Switch, Infinite
	W11213291	White (Left)	7		Knob			(Right Rear and Left Rear)
	W11213293	White (Right)		W11022720	White			
2		Control, Electronic (LCX)	8	W10134247	Shield, Heat			
	W11527158	Black	9	3400882	Screw			
3		Panel, Console	10	8272473	Cover, Upper Rear			
	W11089992	White	11	W10525121	Bracket, Console Mounting			
4	W10434452	Switch, Infinite (Dual)	12		Bracket, Eye Brow			
		(Left Front and Right Front)		W11443963	White			
5	3196178	Screw	13	W10901802	Panel, Backer			
			14	3196169	Screw			


CHASSIS PARTS

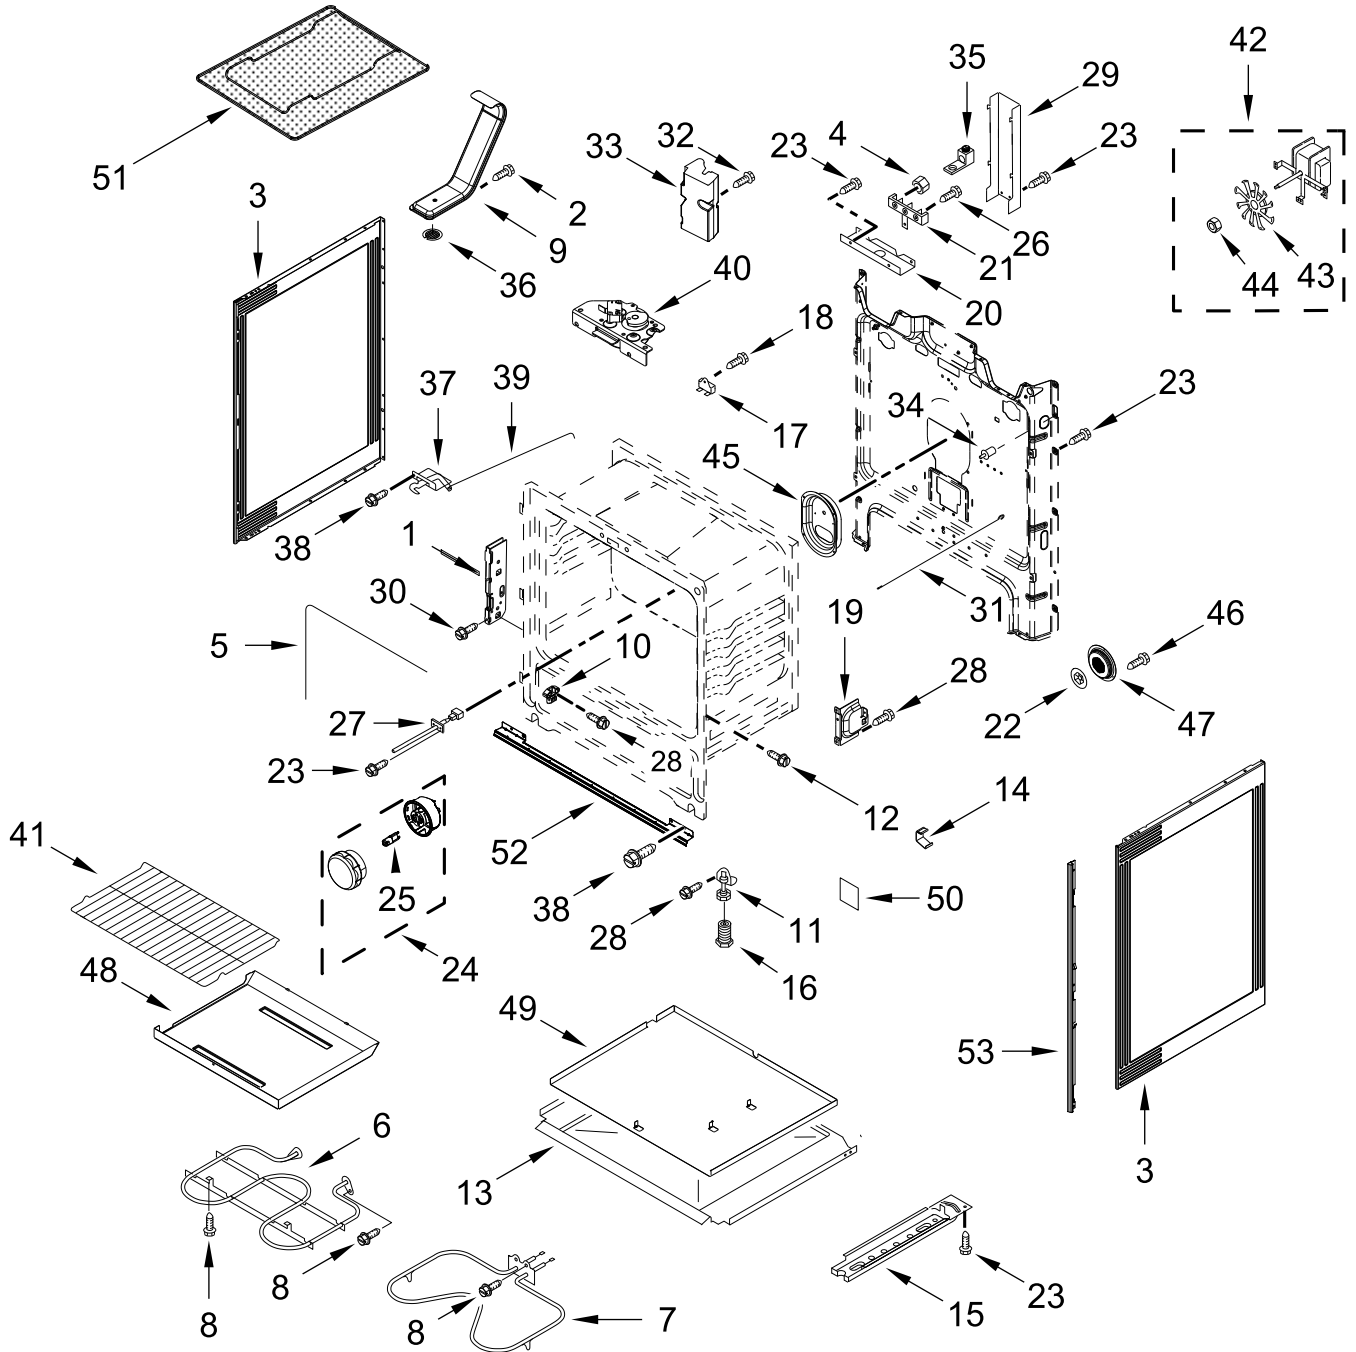

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	21	W10245259	Block, Terminal	42	W11403617	Fan, Convection
2	3196154	Screw	22	3400968	Nut	43	W11425715	Blade, Fan
3		Panel, Side	23	3196178	Screw	44	W11433702	Nut, Acorn (LH)
	W10575396	White	24	W11634772	Light Assembly	45	W10134126	Bracket, Fan
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	46	4449809	Screw
5	W11491751	Seal, Door	26	3400016	Screw	47	W10134124	Cover, Conv Fan
6	9757340	Element, Broil	27	W10181986	Sensor, Oven	48	W10183712	Tray, Hidden Bake
7	9755770	Element, Bake	28	3196169	Screw	49	W10134125	Shield, Heat
8	3196174	Screw	29	W10326122	Cover, Terminal Block	50	W10646923	Card, Insulator
9	W10134285	Tube, Vent	30	W10031780	Screw	51	W11661815	Basket, Airfry
10	W10674705	Glide, Drawer Front	31	9757239	Rod, Door Switch	52	W11464547	Bracket, Front Frame
11	W10341186	Front Foot Assembly	32	W11034869	Screw	53	W11510560	Barrier Rail, Rubber (Left and Right)
12	W10067840	Screw	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
13	W10134121	Tray, Insulation	34	W11511828	Switch, Door			
14	W10137382	Clip, Panel	35	W10281322	Kit, Bare Wire Adapter Block	W10774939		Insulation, Wrap
15	W10390008	Base Rail Assembly (Left)	36	W11092984	Screen, Vent	W11127324		Insulation, Back
	W10390007	Base Rail Assembly (Right)	37	9761013	Front Door Latch Assembly	W10333344		Insulation, Flue
16	W10058460	Foot, Leveling	38	3196560	Screw			
17	3196548	Fuse, Thermal	39	W10078380	Rod, Latch			
18	3196172	Screw	40	W10107820	Rear Door Latch Assembly			
19	W10404688	Clip, Oven Support	41	W11173792	Rack, Oven			
20	3186034	Bracket, Service						


DOOR PARTS

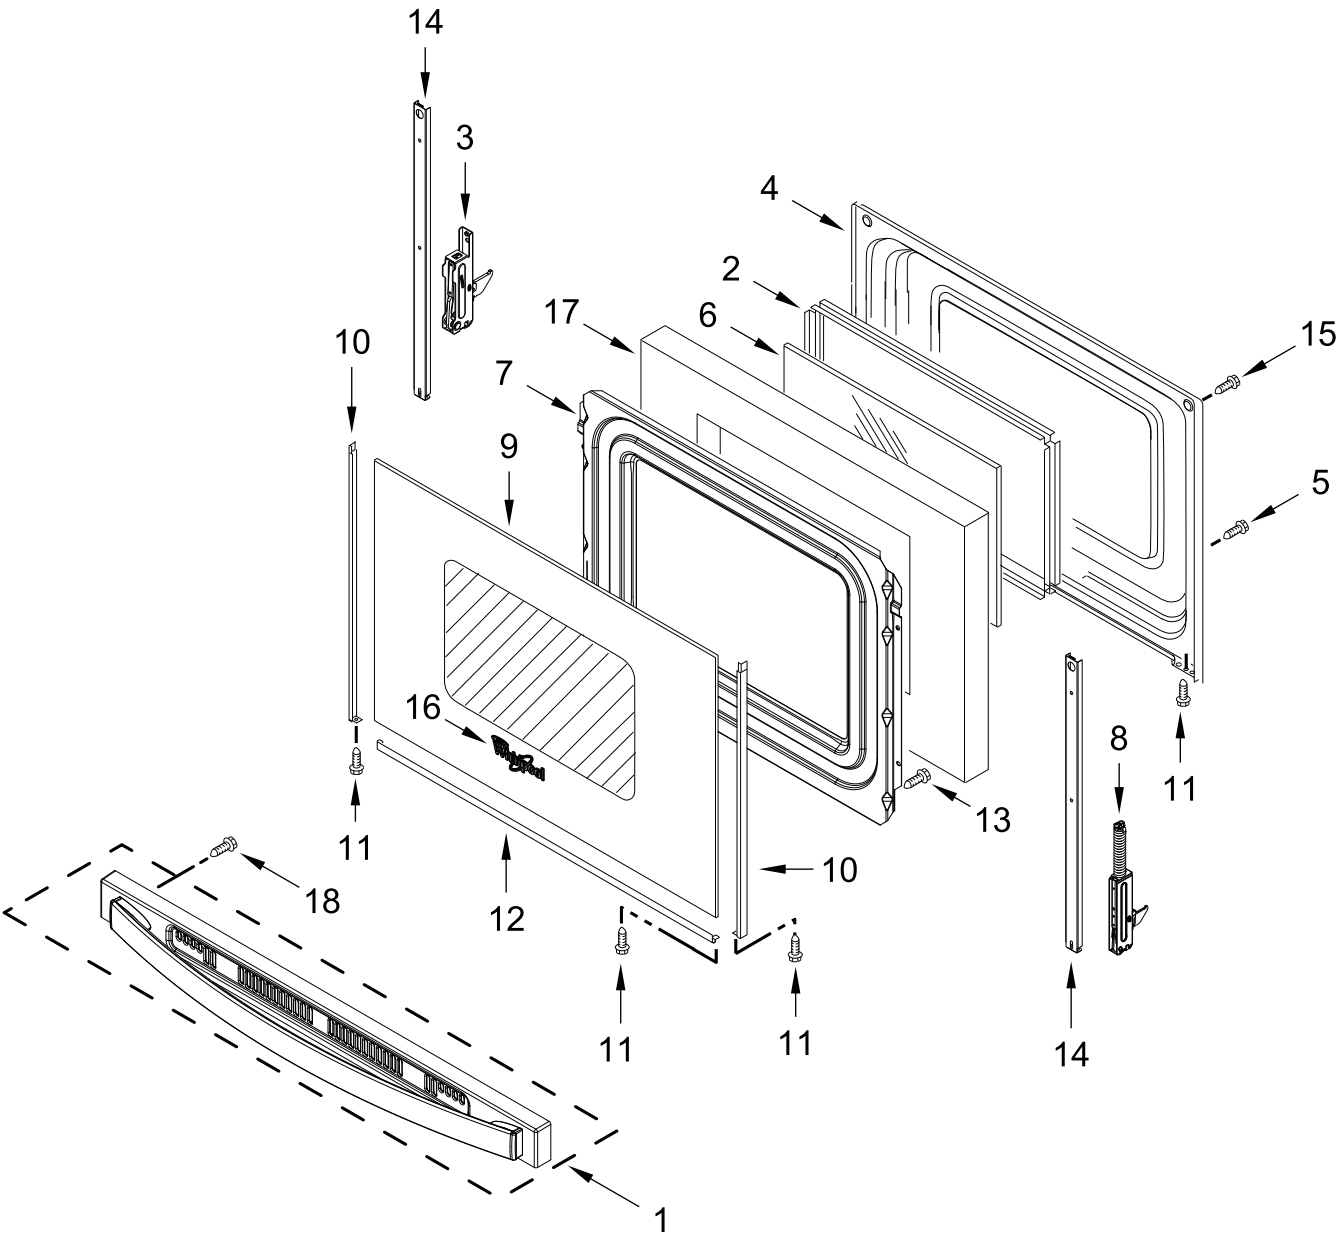

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299226	Hinge, Active	12		Trim, Lower
	W11242947	White	9		Glass Assembly, Outer Door		W11444042	White
2	W10316950	Frame, Glass		W10409945	White	13	W10031780	Screw
3	W10299227	Hinge, Door (Passive)	10		Trim, Side	14	W11379944	Strap, Door
4	9761344	Liner, Door		8523172	White (Left)	15	W10200660	Screw
5	W10031790	Screw		8523166	White (Right)	16	W10884775	Badge
6	9758162	Glass, Inner	11	W10327235	Screw	17	W10278991	Insulation, Door Strip
7	W11380222	Retainer, Insulation				18	3196560	Screw

DRAWER PARTS

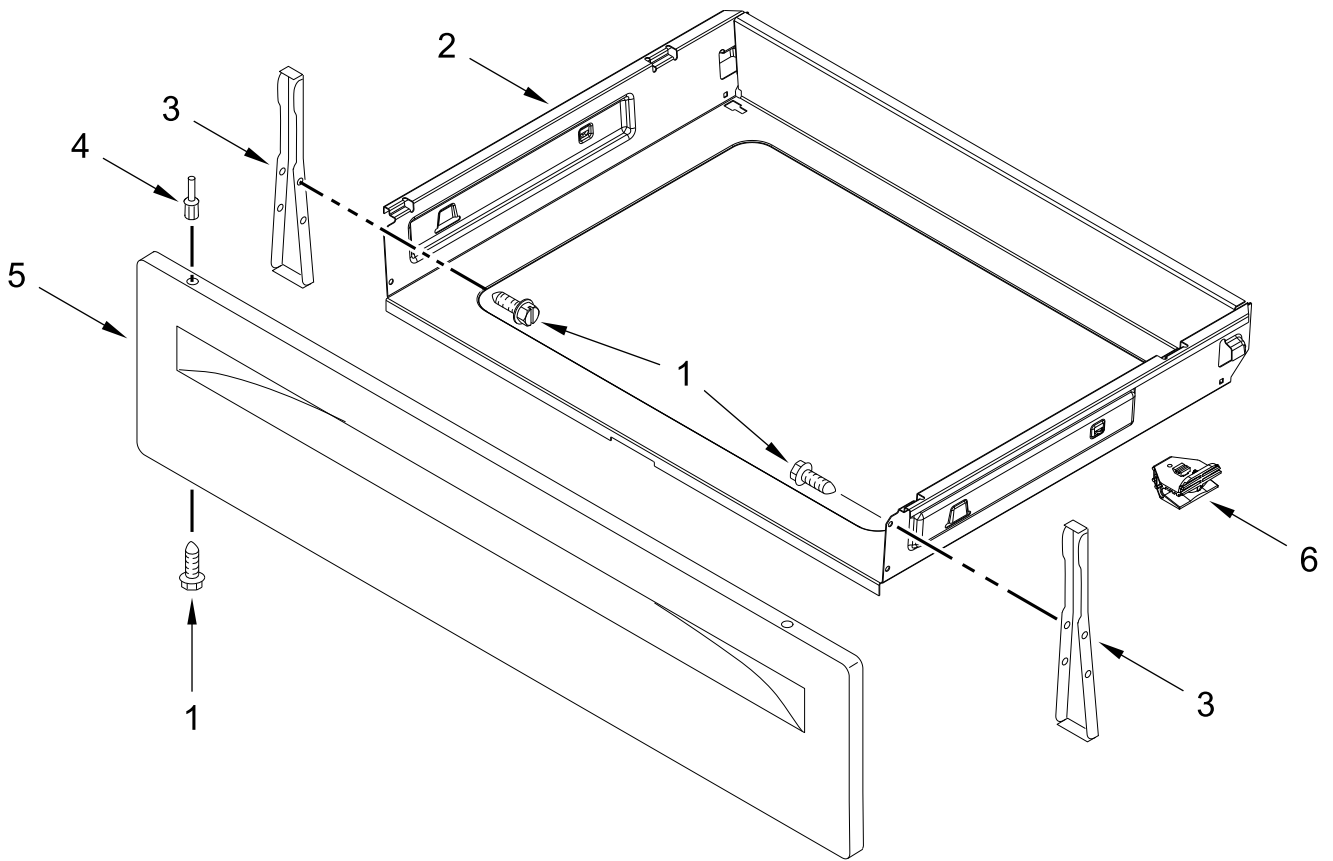

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Rivet, Push
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11123901	White
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting