




ELECTRIC RANGE

MODELS:

MES8800PZ1 (Stainless)


COOKTOP PARTS

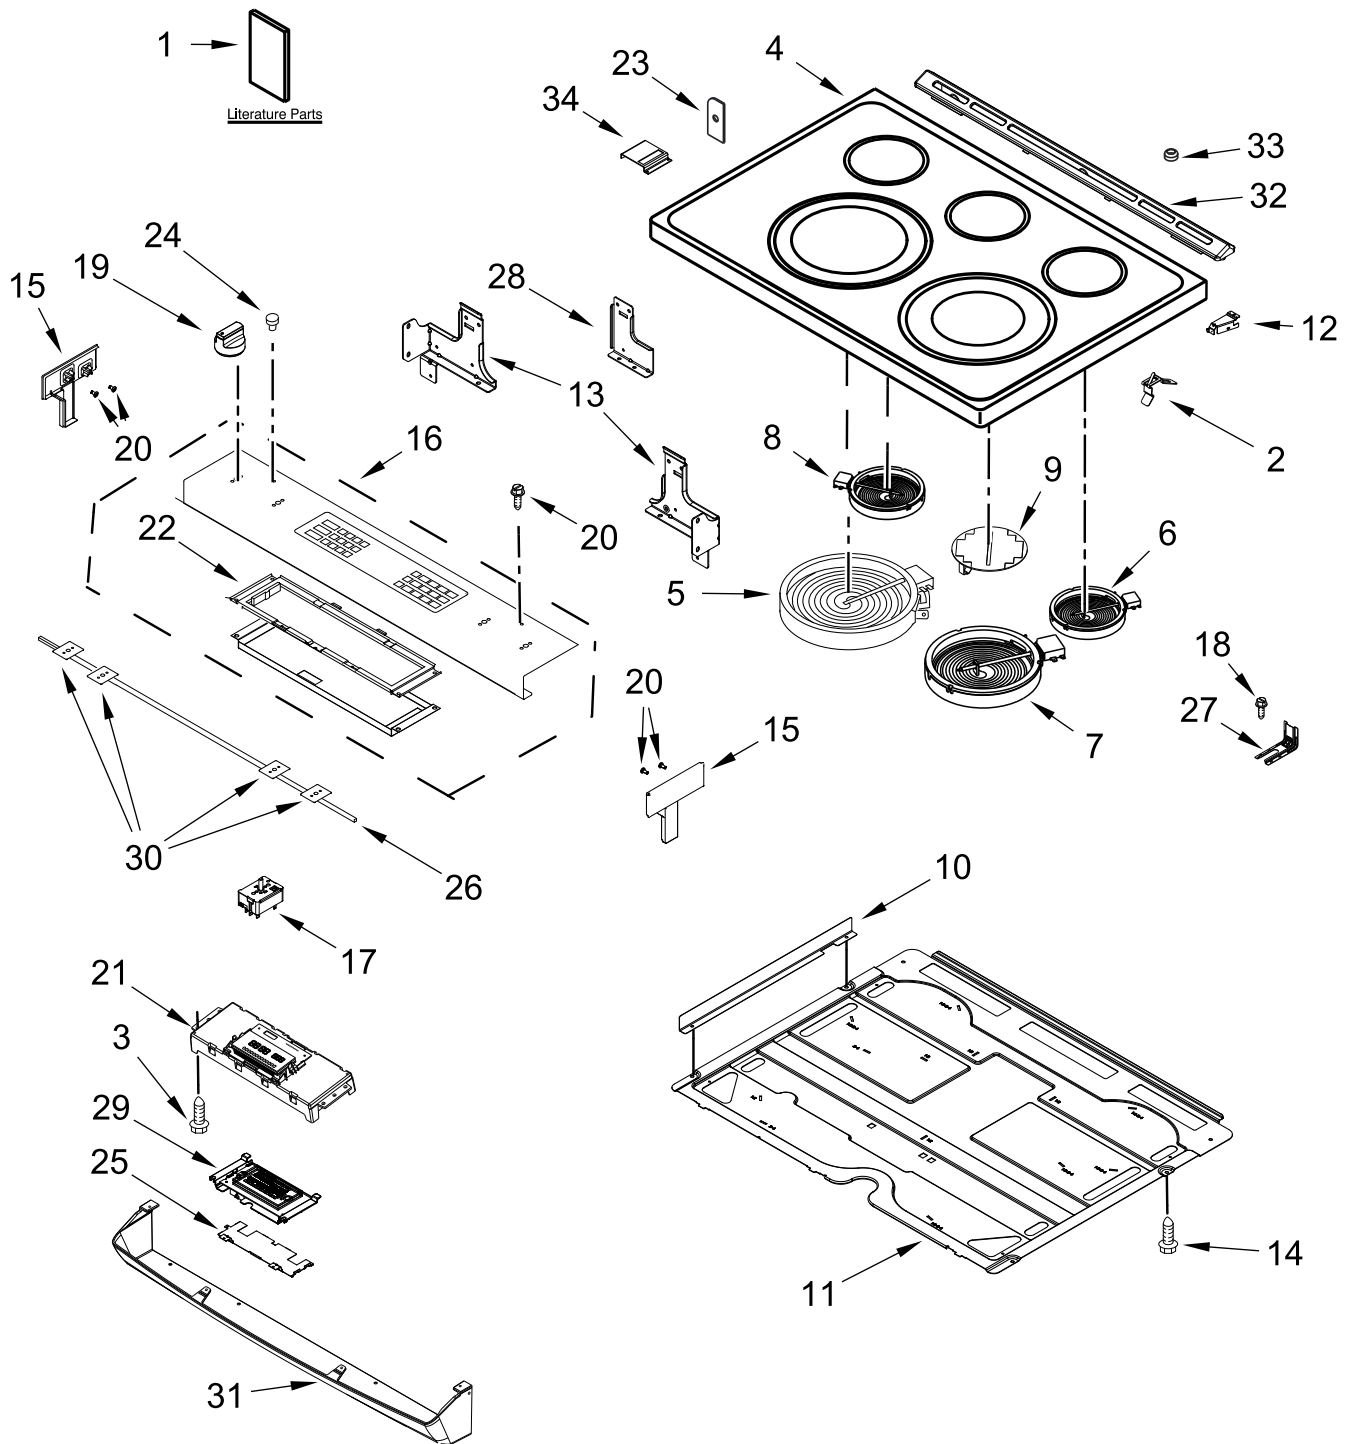

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	3196173	Screw	28	W10598048	Bracket, Console (Center)
	W11634899	Quick Start Guide	15	W10557751	Stainless (Left)	29	W10759326	Display, Assembly
	W11636062	Tech Sheet		W10557754	Stainless (Right)	30	7201P077-60	Gasket, Infinite Switch
	W11632003	Owners Manual	16		Assembly, Console	31		Panel, Lower Console
2	W11600012	Spring, Element		W11562909	Stainless		W10565662	Stainless
3	3196178	Screw	17	W10437092	Switch, Infinite (Left Front)	32		Trim, Vent
4		Cooktop		W10295048	Switch, Infinite (Left Rear)		W10636528	Black
	W10668781	Stainless		W10437094	Switch, Infinite (Right Front)	33	W10664705	Bumper
5	W10275048	Element (3000 and 1400W)		W10578768	Switch, Infinite (Right Rear)	34	W11158783	Shield, Keypad
		(Left Front)						FOLLOWING PARTS NOT ILLUSTRATED
6	W10248261	Element (1200W) (Right Rear)		7101P485-60	Screw, Anti-Tip Kit		W11454497	Harness, Main
7	W10251108	Element (3200W) (Right Front)	18		Knob		W11188430	Harness, Cooktop
8	W10270604	Element (700W) (Left Rear)	19		Stainless		W11207143	Harness, Console
9	W10799048	Element, Warm Zone (Center Rear)	20	9780274	Screw		W10664316	Clip, Harness (Cooktop)
			21	W11626844	Control, Electronic (MRC2)		W10575120	Harness, Keypad
10	W11175271	Bracket, Radiant	22	W10557780	Bracket, Control		W11172426	Harness, Display
11	W10536275	Pan, Radiant	23	W10882900	Gasket			
12	W10162253	Brace, Corner (Left)	24	3196068	Lens, Indicator			
	W10162252	Brace, Corner (Right)	25	W10558372	Bracket, Control			
13	W10289170	Support, Cooktop (Left)	26	W10612719	Gasket, Console and Cooktop			
	W10289169	Support, Cooktop (Right)	27	W11379947	Bracket, Anti-Tip			


CHASSIS PARTS

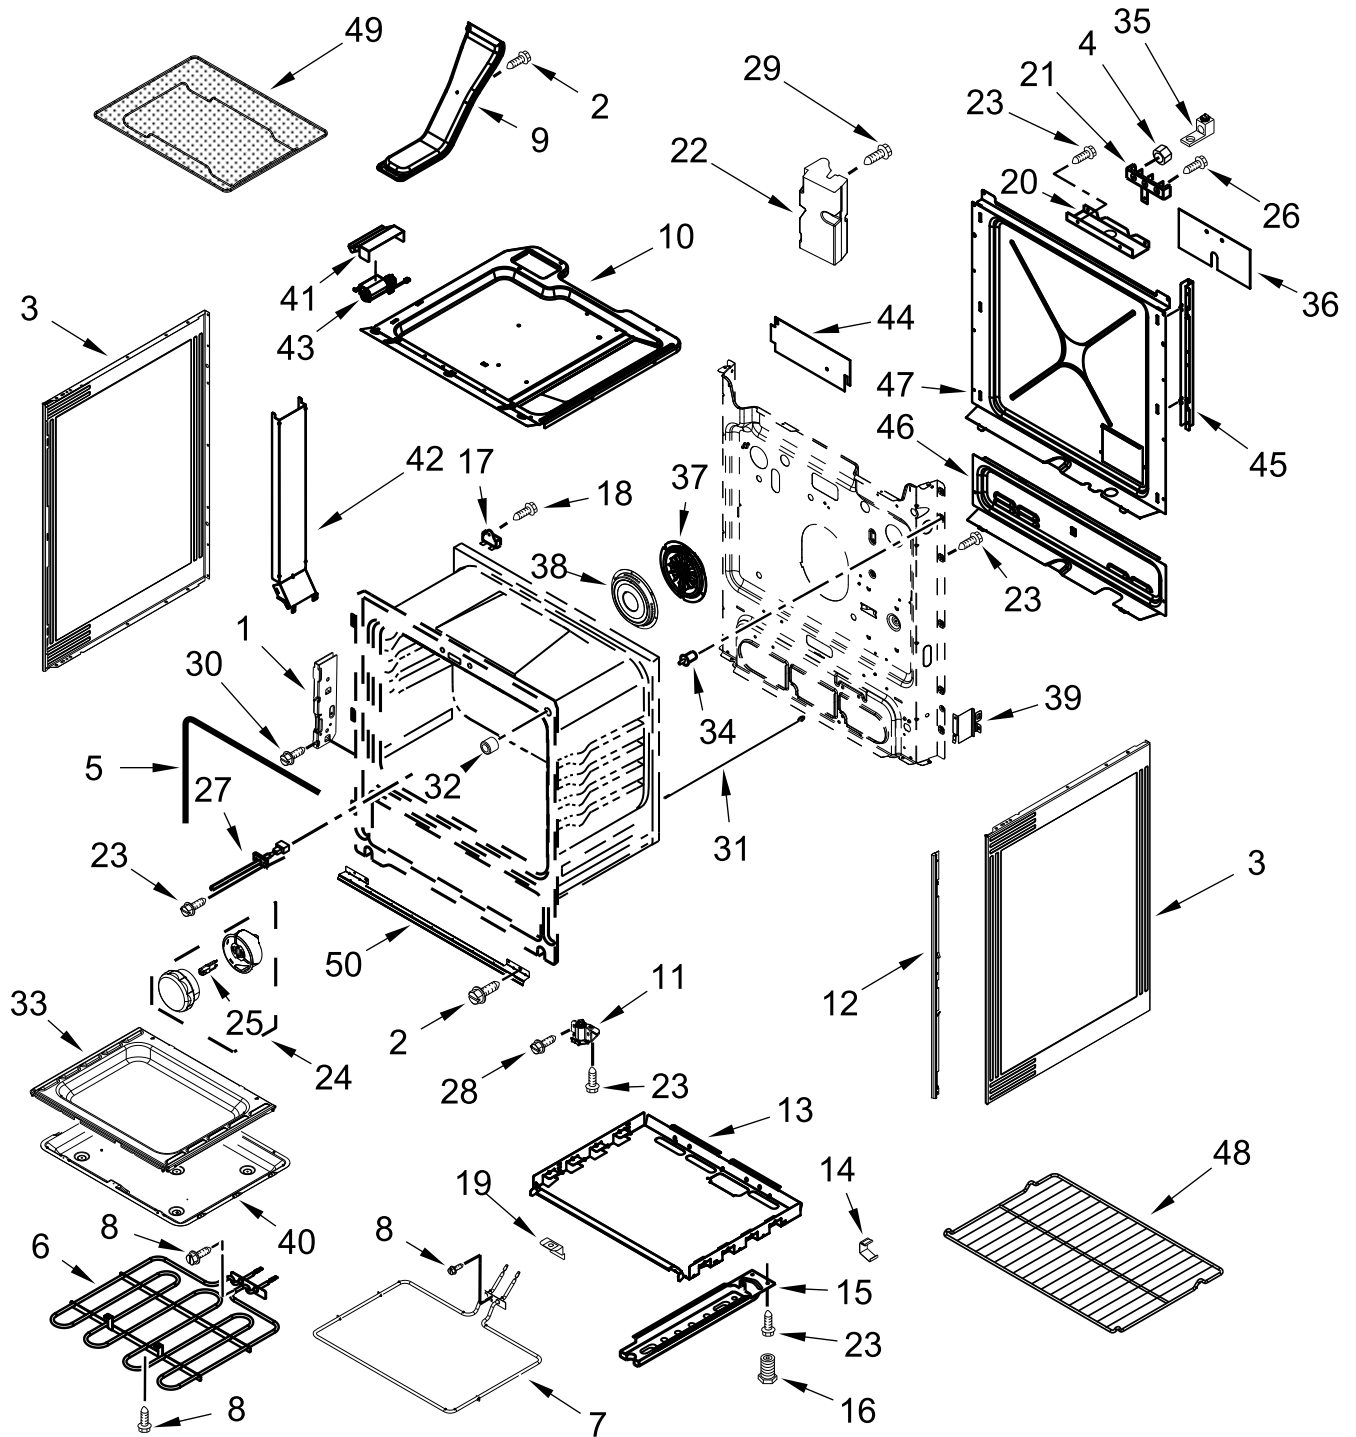

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	3196548	Fuse, Thermal	38	W10346154	Cover, Convection
2	3196560	Screw	18	3196172	Screw	39	W10273002	Bracket, Oven Support
3		Panel, Side	19	W10035900	Support, Oven Bottom	40	W11379357	Bake Pan
	W10162245	Black	20	3186034	Bracket, Service	41	W10162255	Duct, Cover
4	3400029	Nut	21	W10245259	Block, Terminal	42	W10162254	Duct, Cooling
5	W11491752	Gasket, Door	22	W10914589	Counterweight	43	W11467246	Cooling Fan
6	W10544952	Element, Broil	23	3196178	Screw	44	W11117035	Shield, Wire
7	W10774342	Element, Bake	24	W11634772	Light Assembly	45	W10162241	Channel, Rear
8	W10362924	Screw	25	W10571723	Bulb, Halogen 40 Watts	46	W10162248	Cover, Wire
9	W11122085	Assembly, Flue	26	3400016	Screw	47	W11379354	Cover, Back
10	W10289168	Box, Burner SI	27	W10586204	Sensor	48	W10531060	Rack, Oven
11	W10341186	Front Foot Assembly	28	3196169	Screw	49	W11661815	Basket, Airfry
12	W11510561	Barrier Rail, Rubber (Front Left)	29	W11034869	Screw	50	W11620269	Bracket, Front Frame
	W11510562	Barrier Rail, Rubber (Front Right)	30	W10031780	Screw			FOLLOWING PARTS NOT ILLUSTRATED
13	W10541959	Shield, Bake	31	W10273192	Rod, Door Switch		W10289173	Insulation, Wrap
14	W10137382	Clip, Panel	32	9758701	Spacer, Door		W10162240	Insulation, Back
15	W10390008	Base Rail Assembly (Left)	33	W10774446	Bottom, Oven		W10575374	Insulation, Bottom
	W10390007	Base Rail Assembly (Right)	34	W11511828	Switch, Door		4820F015-59	Insulation, Strap
16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block		7111P017-60	Clamp, Wire
			36	W10655441	Shield, Power Cord		3196520	Clip, Wire
			37	W11353926	Convection Assembly			


DOOR PARTS

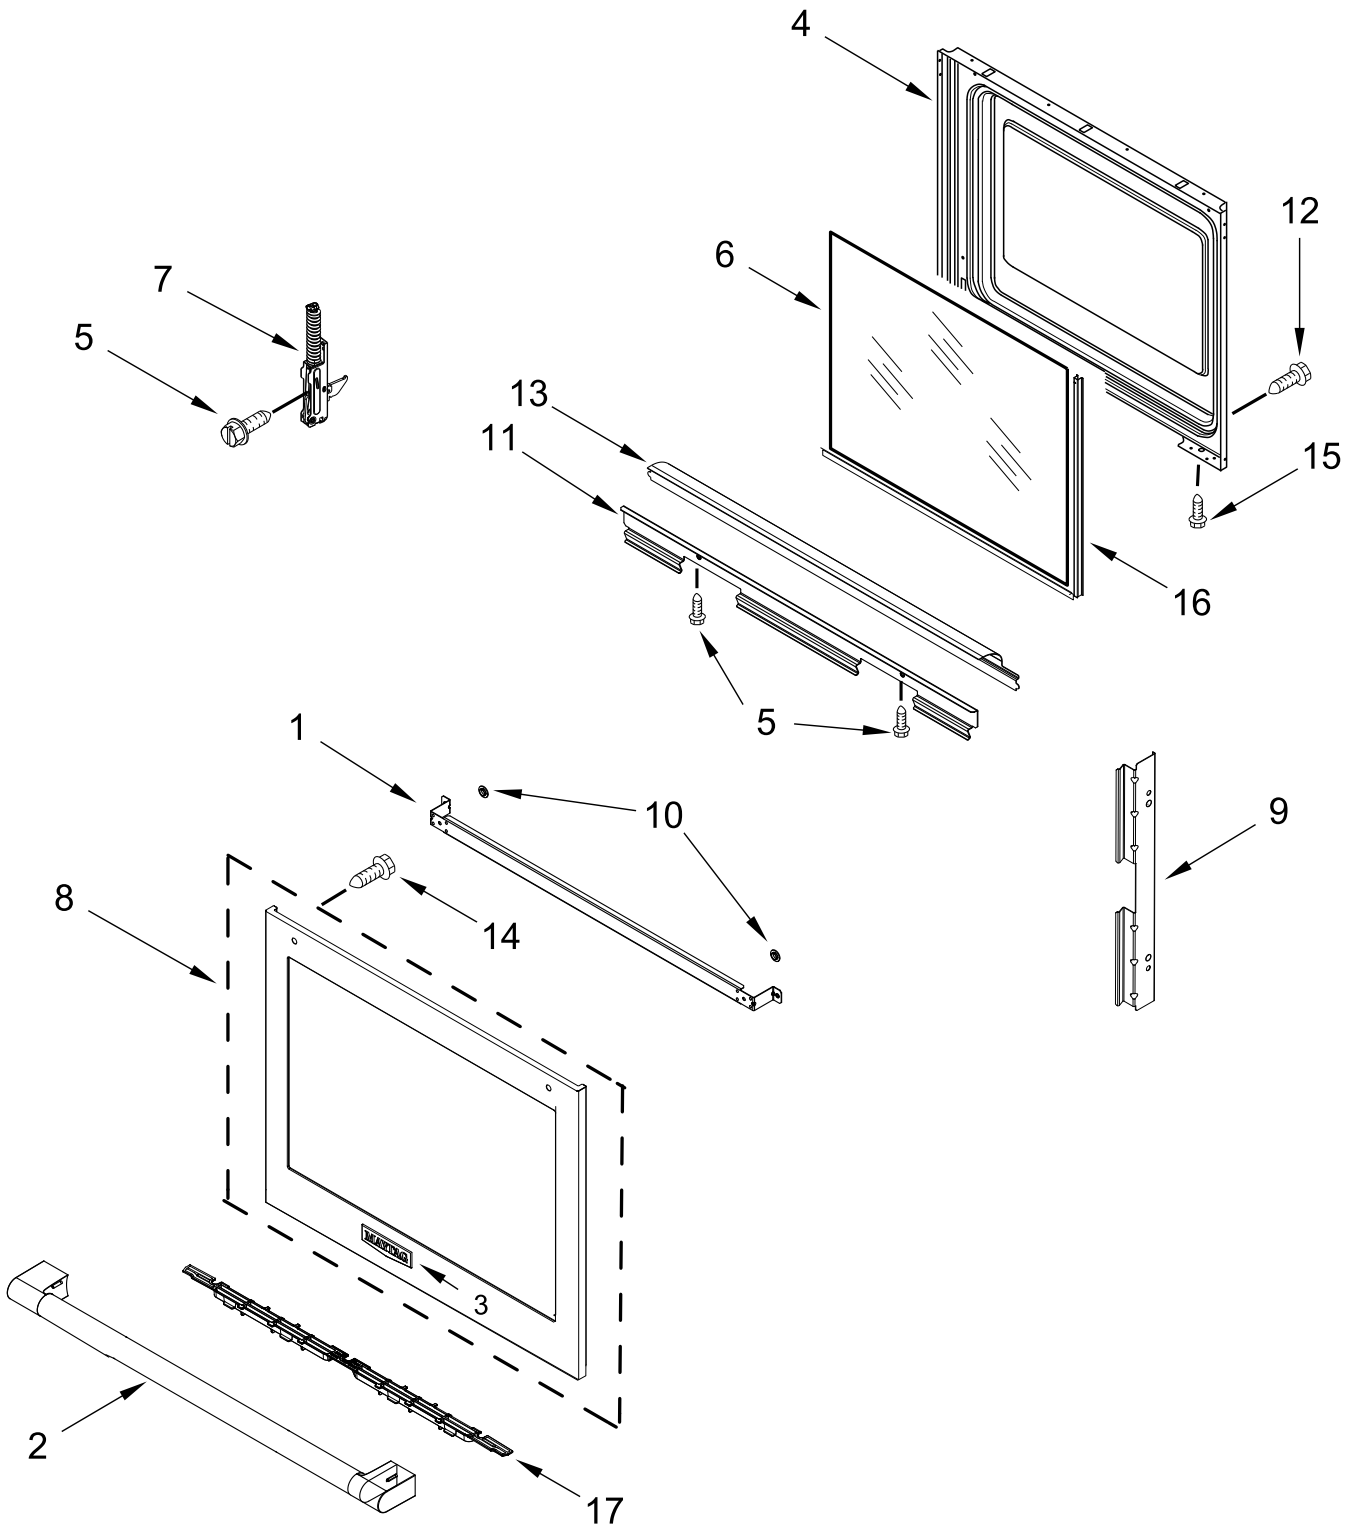

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	7	W11184046	Hinge, Door (Active)	12	W10031790	Screw
2		Assembly, Handle	8		Glass Assembly, Outer Door	13		Scoop, Door
	W11495825	Stainless		W11619008	Stainless		W10613791	Black
3	W11628148	Badge	9	W10813139	Rail, Vertical Support	14	W11091878	Screw
4	W10826568	Liner, Door	10	W10319024	Washer, Door	15	9780274	Screw
5	W10327235	Screw	11	W10813140	Rail, Horizontal Support	16	W11379948	Glass Spacer
6	W11223202	Glass, Inner				17	W11440161	Bottom, Door Cover

DRAWER PARTS

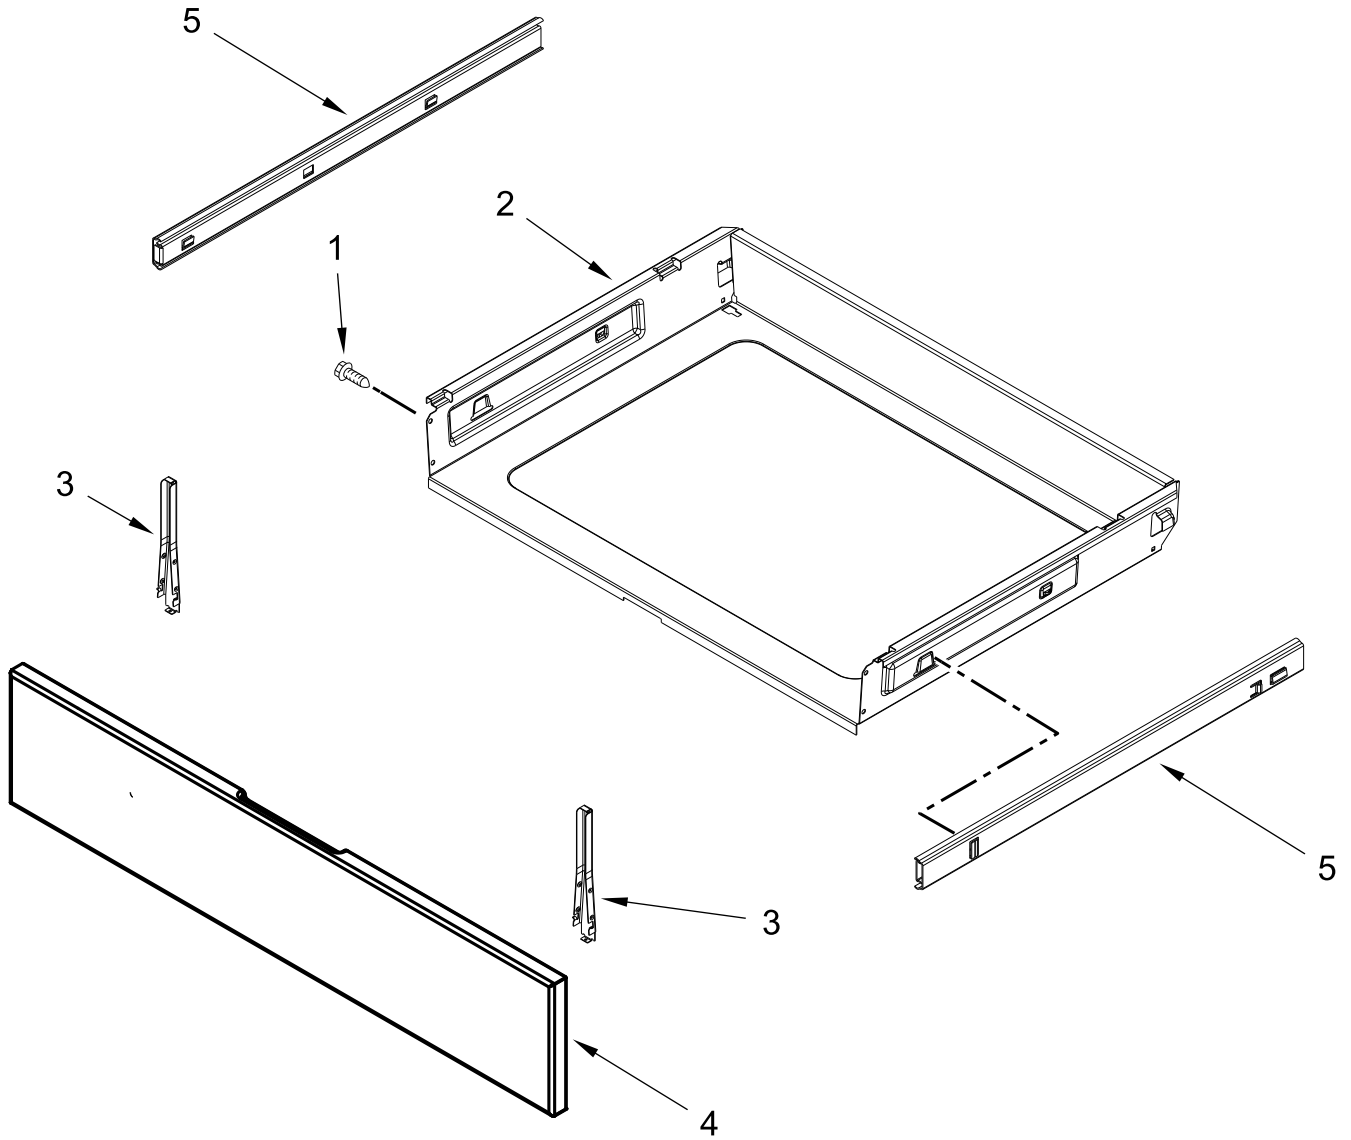

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11091878	Screw
2	W10688022	Drawer, Storage
3	W10318026	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Panel, Drawer Front
	W11449700	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	W10432019	Alt Cleaning Kit
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill Assembly, Trim (Includes Blind Threaded Insert)
	W10675026	Black
	W10675027	White
	W10675028	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)