




ELECTRIC RANGE

MODELS:

WFC150M0JB4 (Black)

WFC150M0JW4 (White)


COOKTOP PARTS

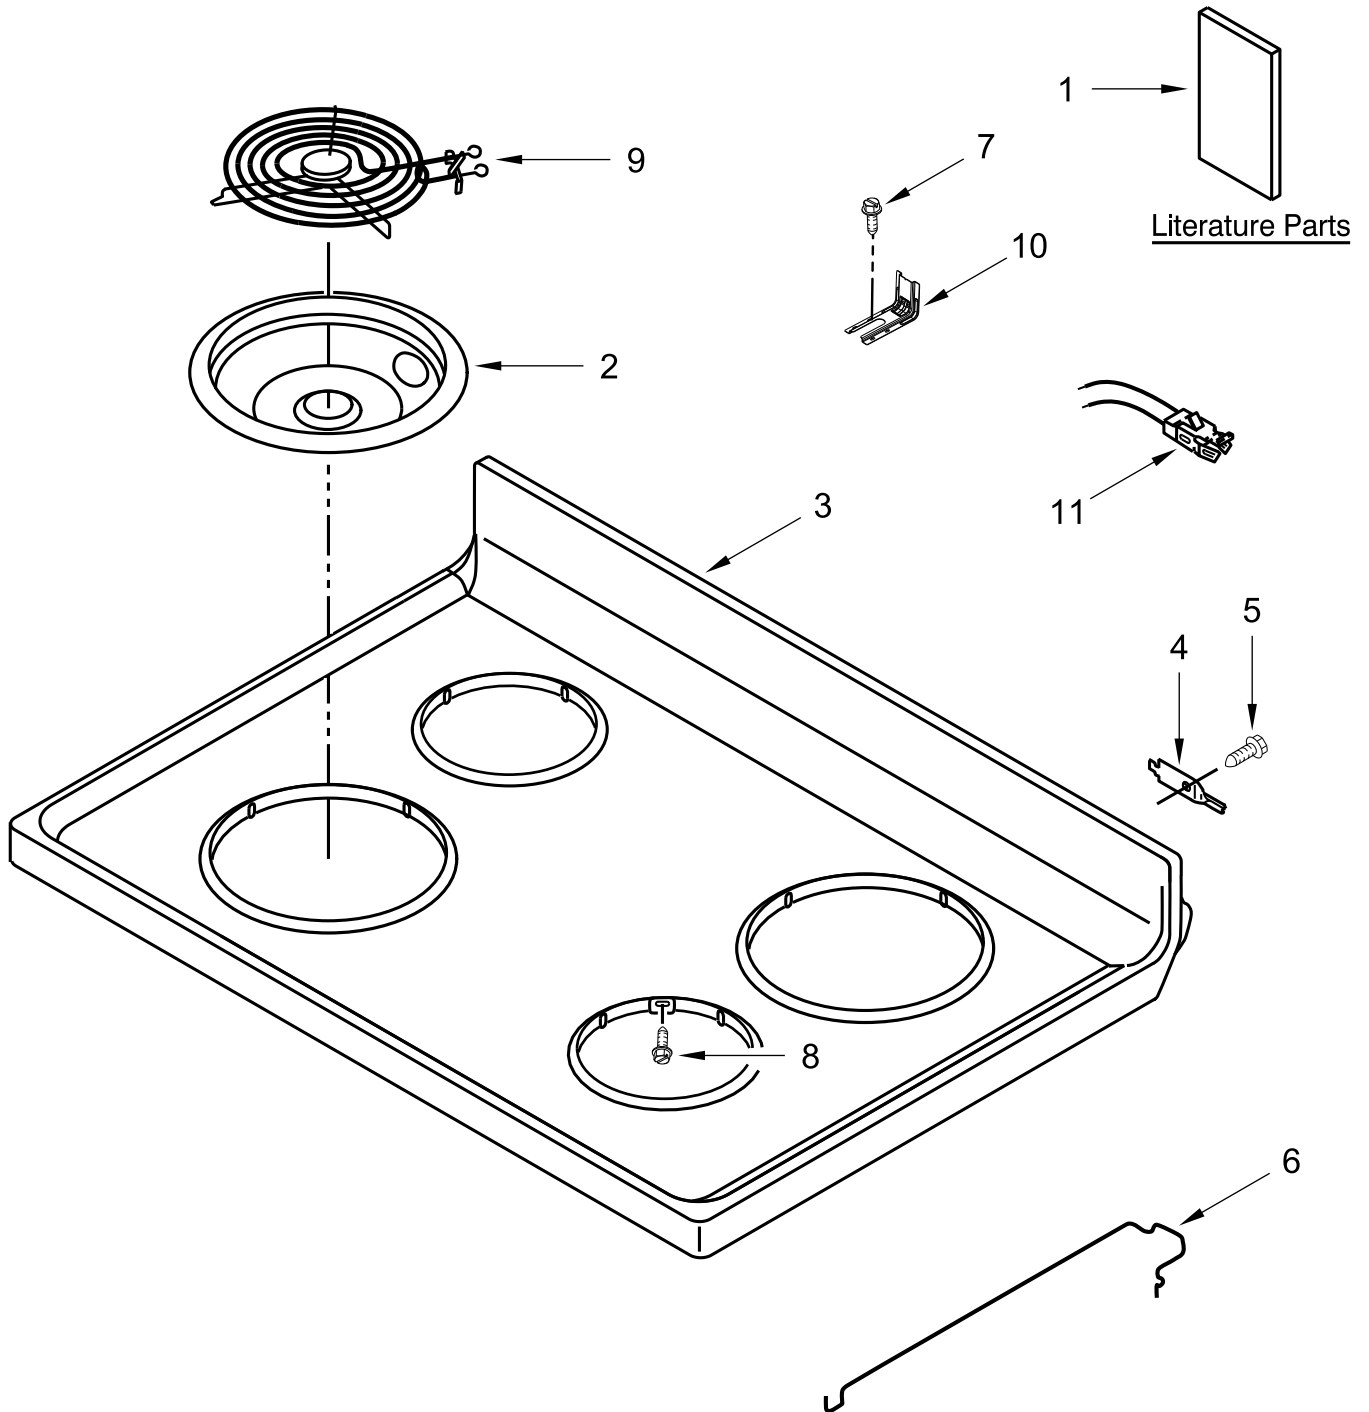

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	3195060	Hinge, Cooktop	11	814399	Receptacle, Element
	W11509595	Owners Manual	5	3196178	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11435582	Quick Start Guide	6	3195812	Rod, Support			
	W11401729	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit		W11452635	Harness, Main
2	W10196406	Bowl, Drip (6 in) (Right Front and Left Rear)	8	3196154	Screw		W11134595	Harness, Cooktop
	W10196405	Bowl, Drip (8 in) (Left Front and Right Rear)	9	W11364018	Element, Coil Heating (1500W) (Right Front and Left Rear)		W10281322	Kit, Bare Wire Adapter Block
				W11364019	Element, Coil Heating (2400W) (Left Front and Right Rear)			
3		Cooktop						
	3186233	Black						
	3186231	White	10	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

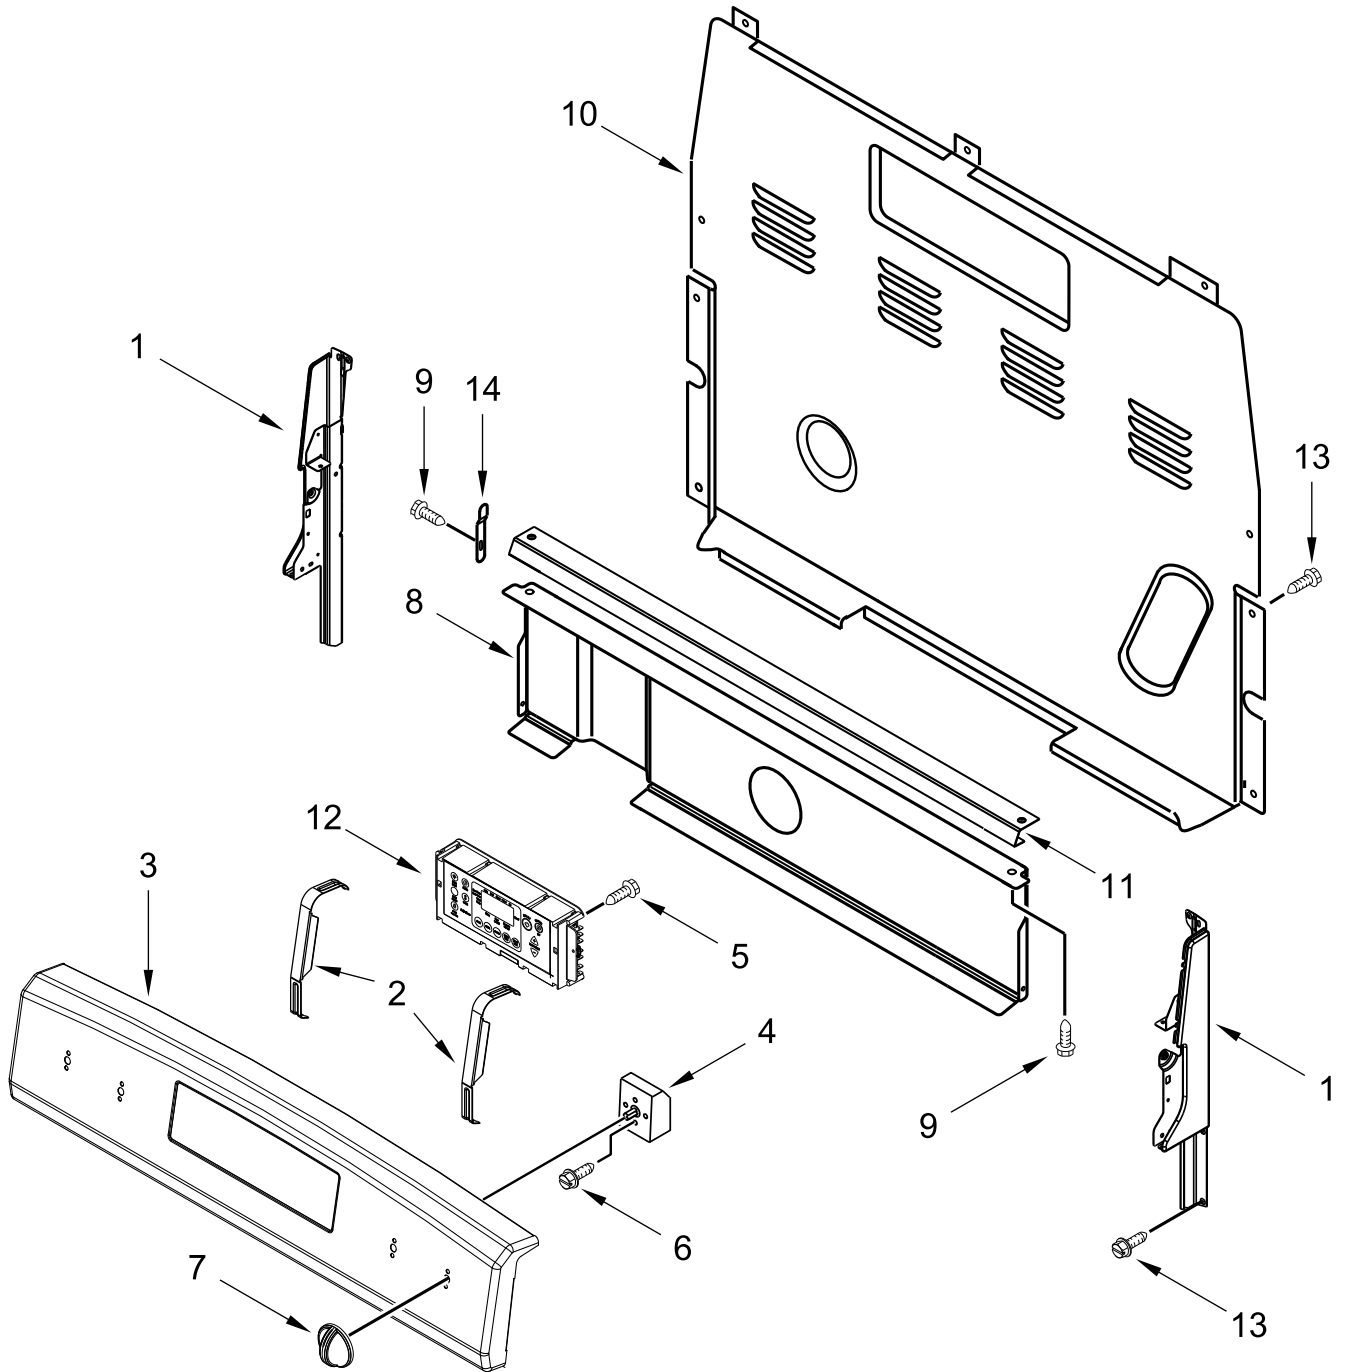

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	9	3196165	Screw
	W11130372	Black (Left)			(Right Front and Left Rear)	10	8272473	Cover, Upper Rear
	W11130379	Black (Right)				11	W10525121	Bracket, Console Mounting
	W11130371	White (Left)				12		Control, Electronic (LCX)
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)			
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11536412	Black
3		Panel, Control					W11536413	White
	W11027440	Black	5	3196169	Screw	13	3196178	Screw
	W11027441	White	6	3400882	Screw	14	3196200	Clip, Spring
			7		Knob, Infinite			
				W11022718	Black			
				W11022720	White			
			8	W10134247	Shield, Heat			


CHASSIS PARTS

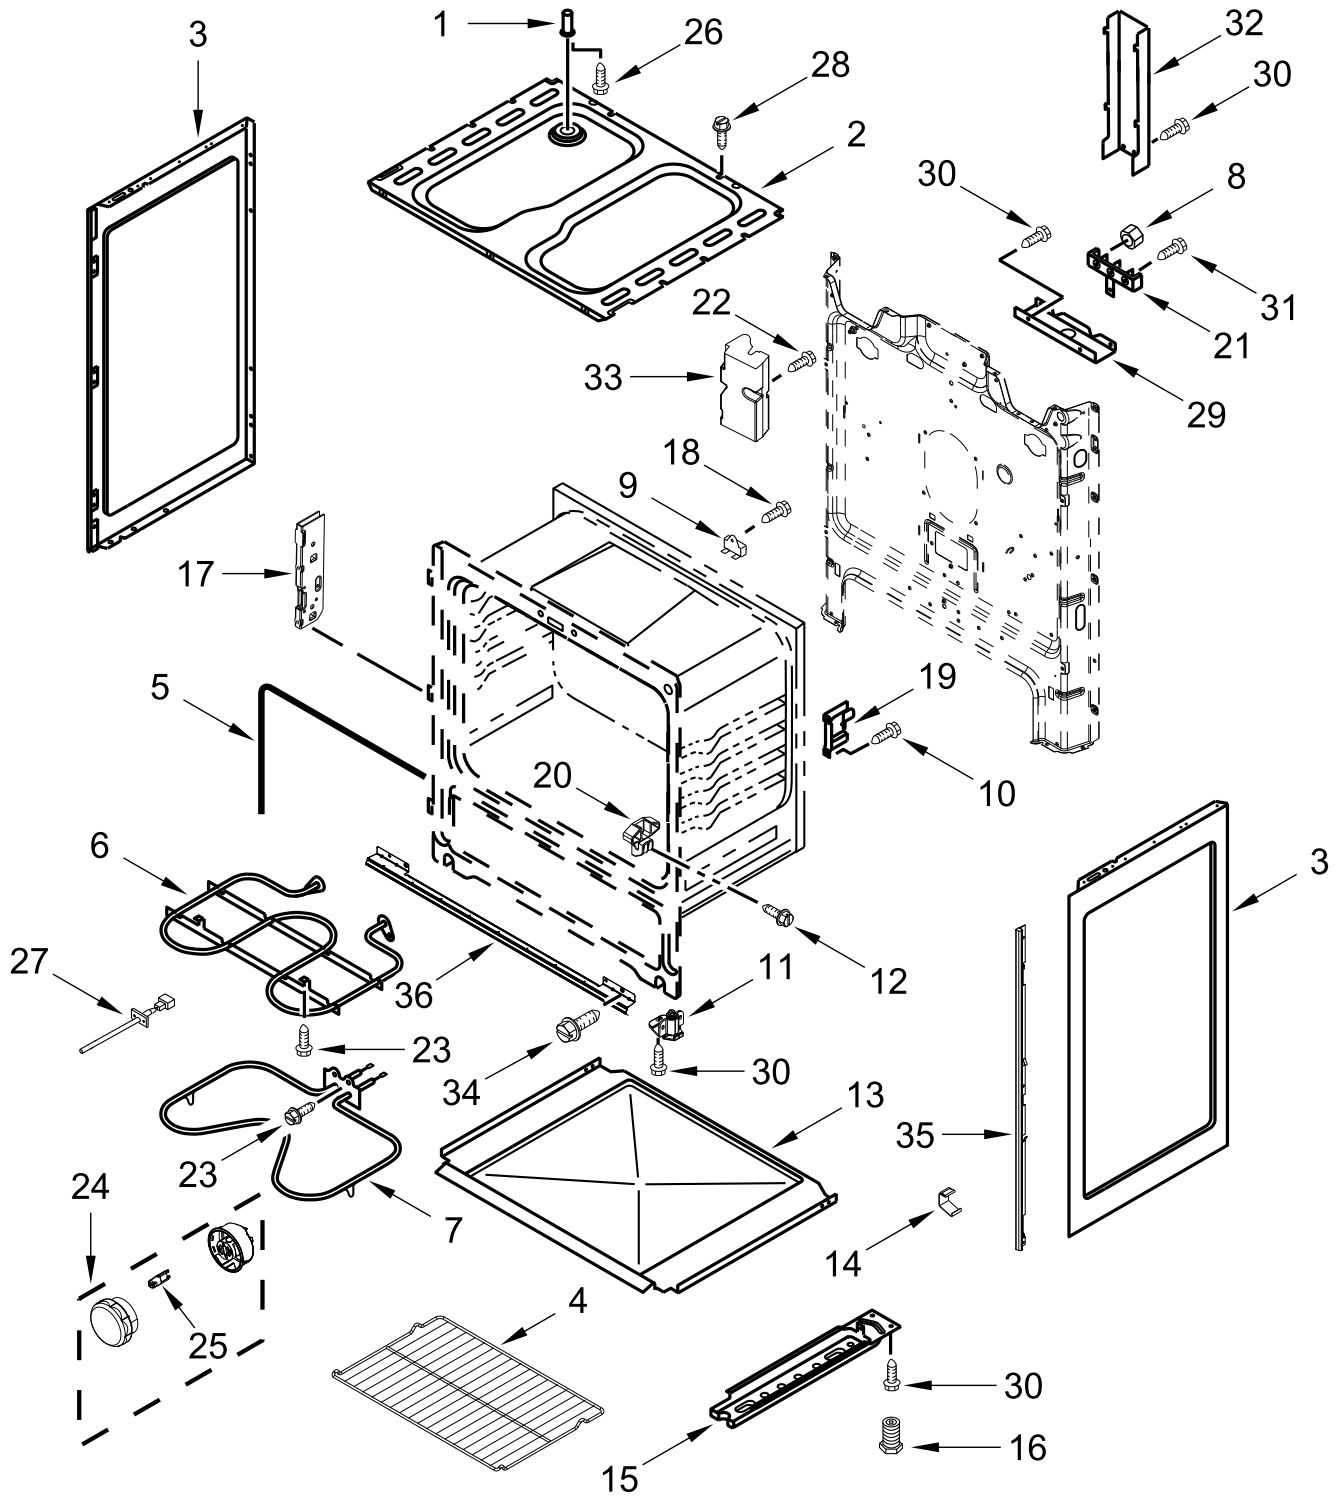

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	28	3196165	Screw
2	W11380208	Box, Burner				29	3186034	Bracket, Service
3		Panel, Side		W10390007	Base Rail Assembly (Right)	30	3196178	Screw
	W10162245	Black				31	3400016	Screw
	W10575396	White	16	W10058460	Foot, Leveling	32	W10326122	Cover, Terminal Block
4	W11173792	Rack, Oven	17	W10289077	Receiver, Hinge	33	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	34	3196560	Screw
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	35	W11510560	Barrier Rail, Rubber (Left and Right)
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	36	W11464547	Bracket, Front Frame
8	3400029	Nut	21	W10245259	Block, Terminal			
9	3196548	Fuse, Thermal	22	W11034869	Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	3196169	Screw	23	3196174	Screw			
11	W10341186	Front Foot Assembly	24	W11634772	Light Assembly	8273263		Insulation, Wrap
12	W10067840	Screw	25	W10571723	Bulb, Halogen 40 Watts	8272611		Insulation, Back
13	8054068	Retainer, Insulation	26	3196567	Screw			
14	W10137382	Clip, Panel	27	W10181986	Sensor, Oven			


DOOR PARTS

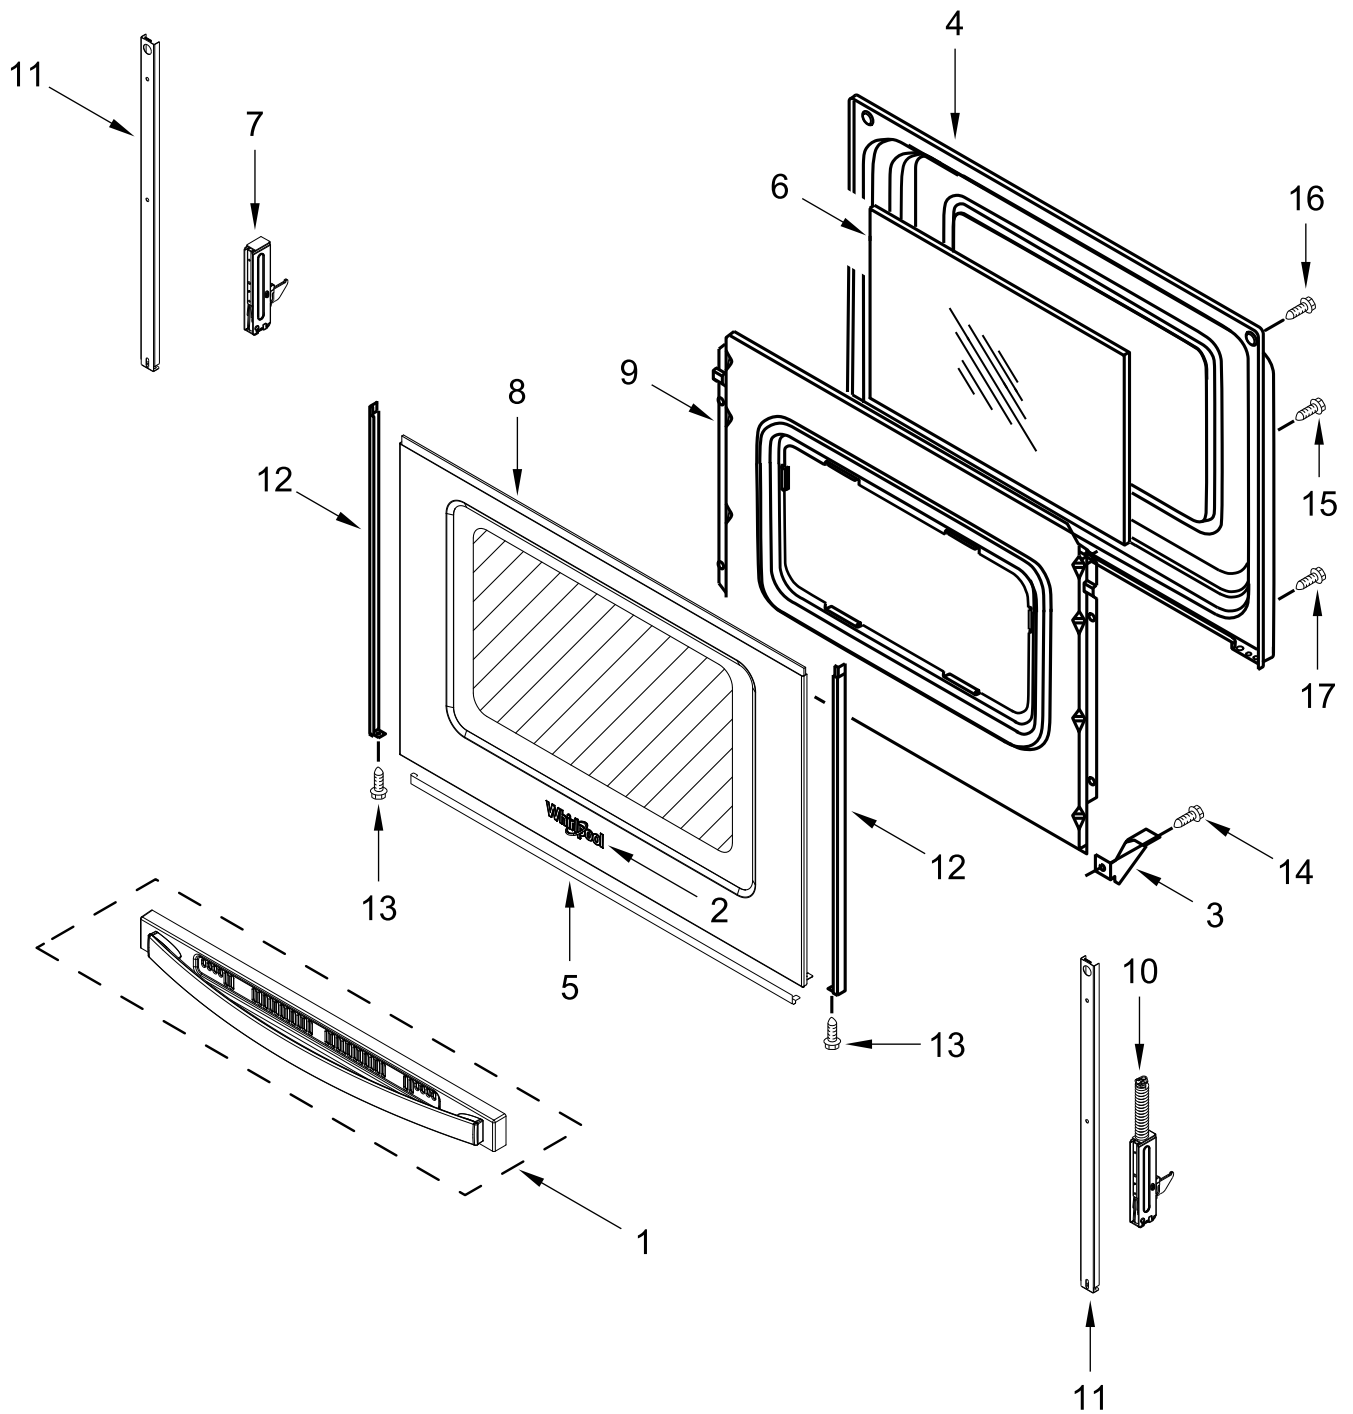

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8		Glass, Outer Door	13	W10327235	Screw
	W11242949	Black		W10409946	Black	14	3196165	Screw
	W11242947	White		W10409945	White	15	W10031790	Screw
2	W10884775	Badge	9	W11380221	Retainer, Insulation	16	W10200660	Screw
3	W10137382	Clip, Panel	10	W10299225	Hinge, Active	17	W10031780	Screw
4	9761344	Liner, Door	11	W11379944	Strap, Door			
5		Trim, Lower Door	12		Trim, Side			
	W11444043	Black		W10746436	Black (Left)			
	W11444042	White		W10746435	Black (Right)			
6	W11367326	Glass, Inner		8523172	White (Left)			
7	W10299227	Hinge, Door (Passive)		8523166	White (Right)			

DRAWER PARTS

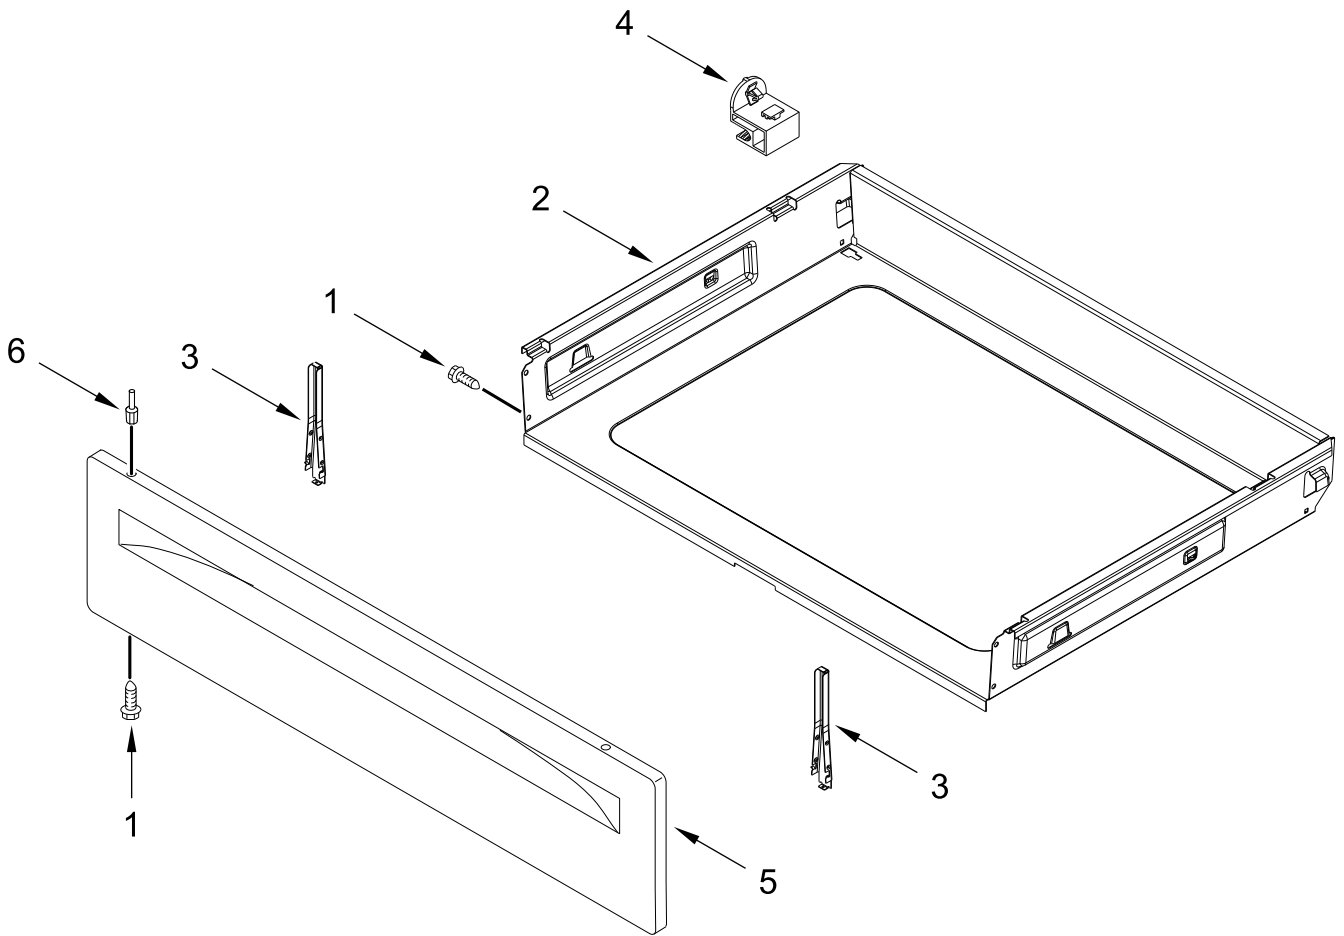

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid