




Dishwasher

MODELS:

JDAF5924RL0 (Stainless Steel)


DOOR AND PANEL PARTS

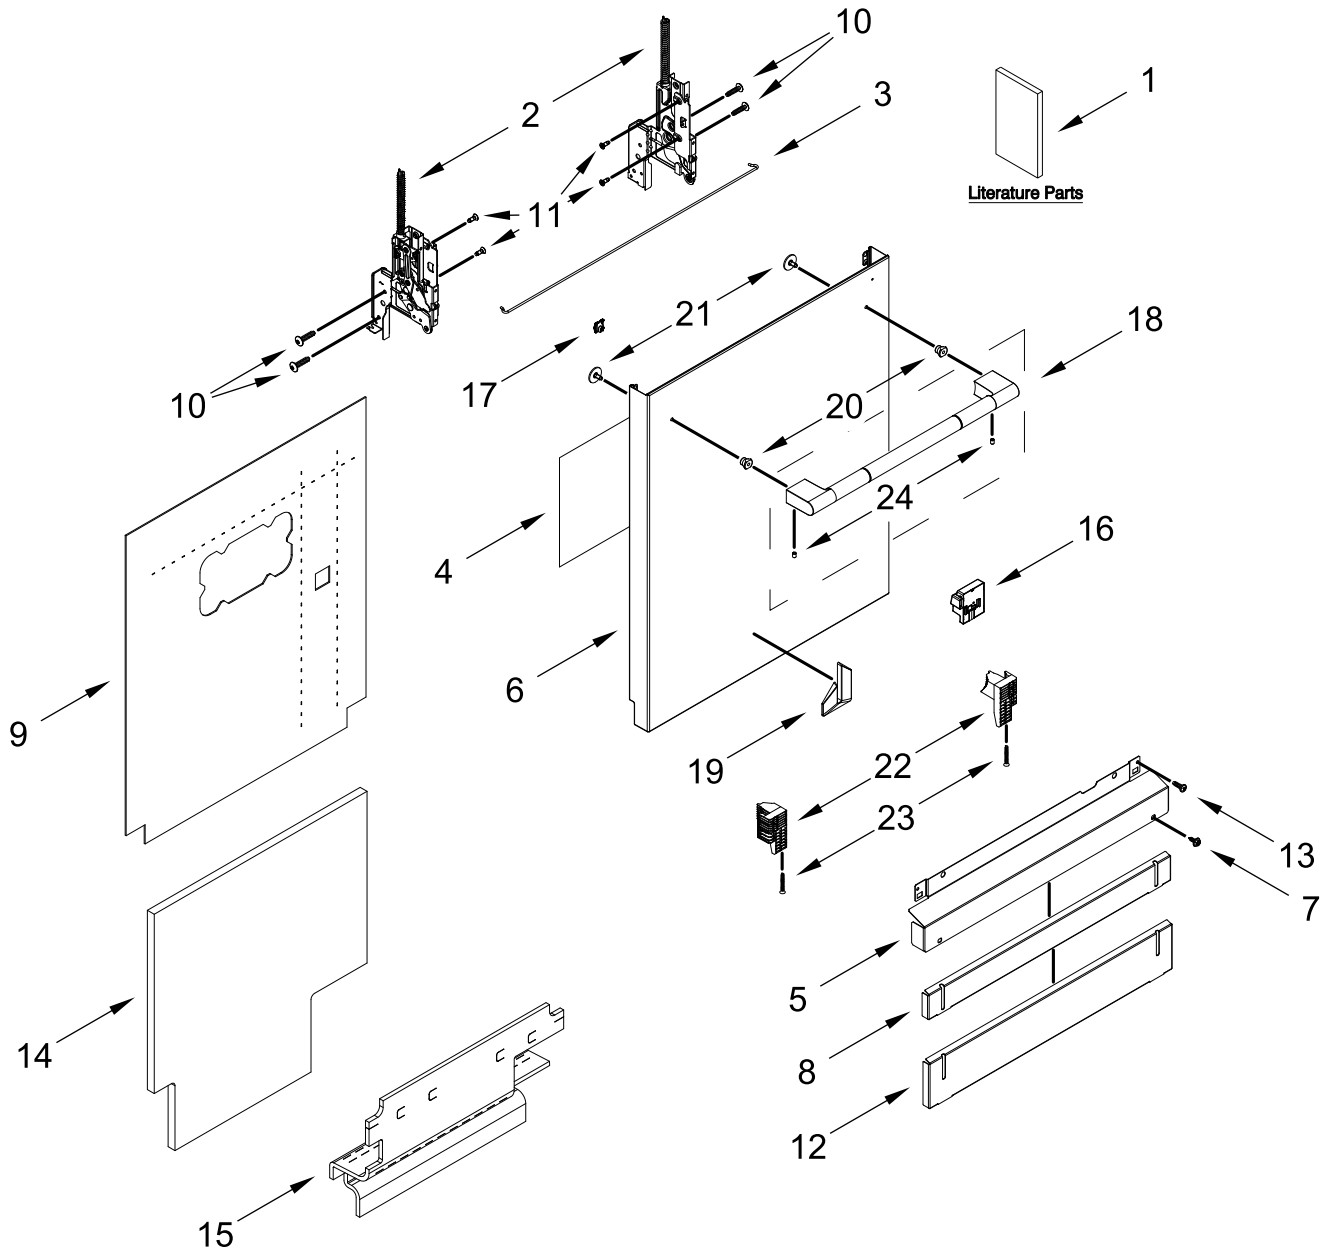

DOOR AND PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11625159	Panel, 2" Adjustable (Black)	20	W11049903	Stud, Mounting
	W11589935	Owners Manual				21	W10316572	Screw
	W11645479	Energy Guide	9	W11564603	Insulation, Inner Door	22	W11545526	Support, Door (Left)
	W11663923	Tech Sheet	10	W10942031	Screw		W11545528	Support, Door (Right)
2		Arm, Hinge	11	W10941985	Screw	23	W11381263	Screw
	W11673858	Left Hand	12	W11625156	Panel, 4" Adjustable (Black)	24	W10687133	Set Screw
	W11673857	Right Hand						
3	W11126789	Cross Brace, Door	13	W10942053	Screw			
4	W11641124	Insulation, Front Panel	14	W11575172	Insulation, Door			
5	W11625157	Panel, Main Access (Black)	15	W11609389	Insulation, Long Tub Lip			
6		Front Panel (Includes 4, 17, 19, 20, 21, 22, 23 & 24)	16	W11540965	Display, Floor			
	W11545423	Stainless	17	W11634283	Nut, Barrel			
			18	W11213316	Handle (Stainless)			
7	302868	Screw (Black)	19		Nameplate			
				W11238657	Stainless			


CONTROL PANEL AND INNER DOOR PARTS

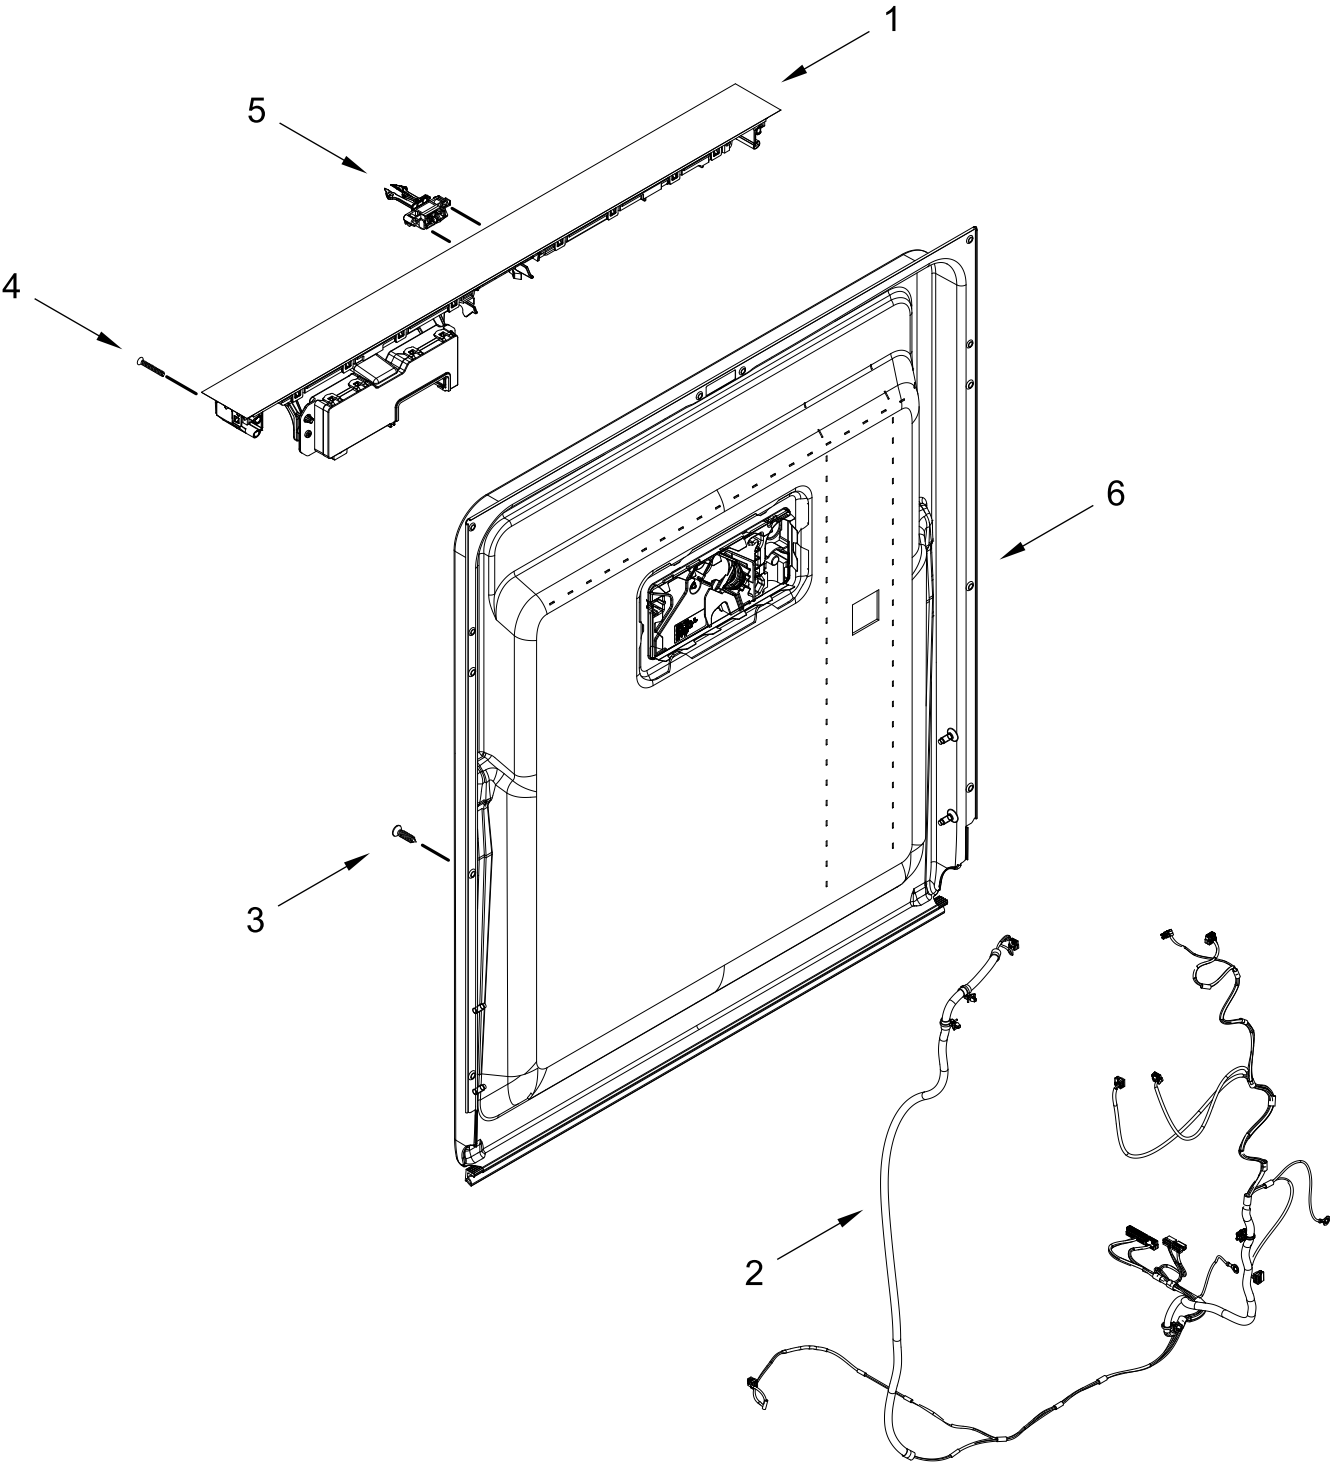

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10941960	Screw	5	W11091934	Latch Assembly (Includes Switch)
	W11524112	Black	4	W11381263	Screw	6	W11715716	Inner Door Assembly (Includes Soap Dispenser)
2	W11592240	Wiring Harness, Inner Door						


TUB AND FRAME PARTS

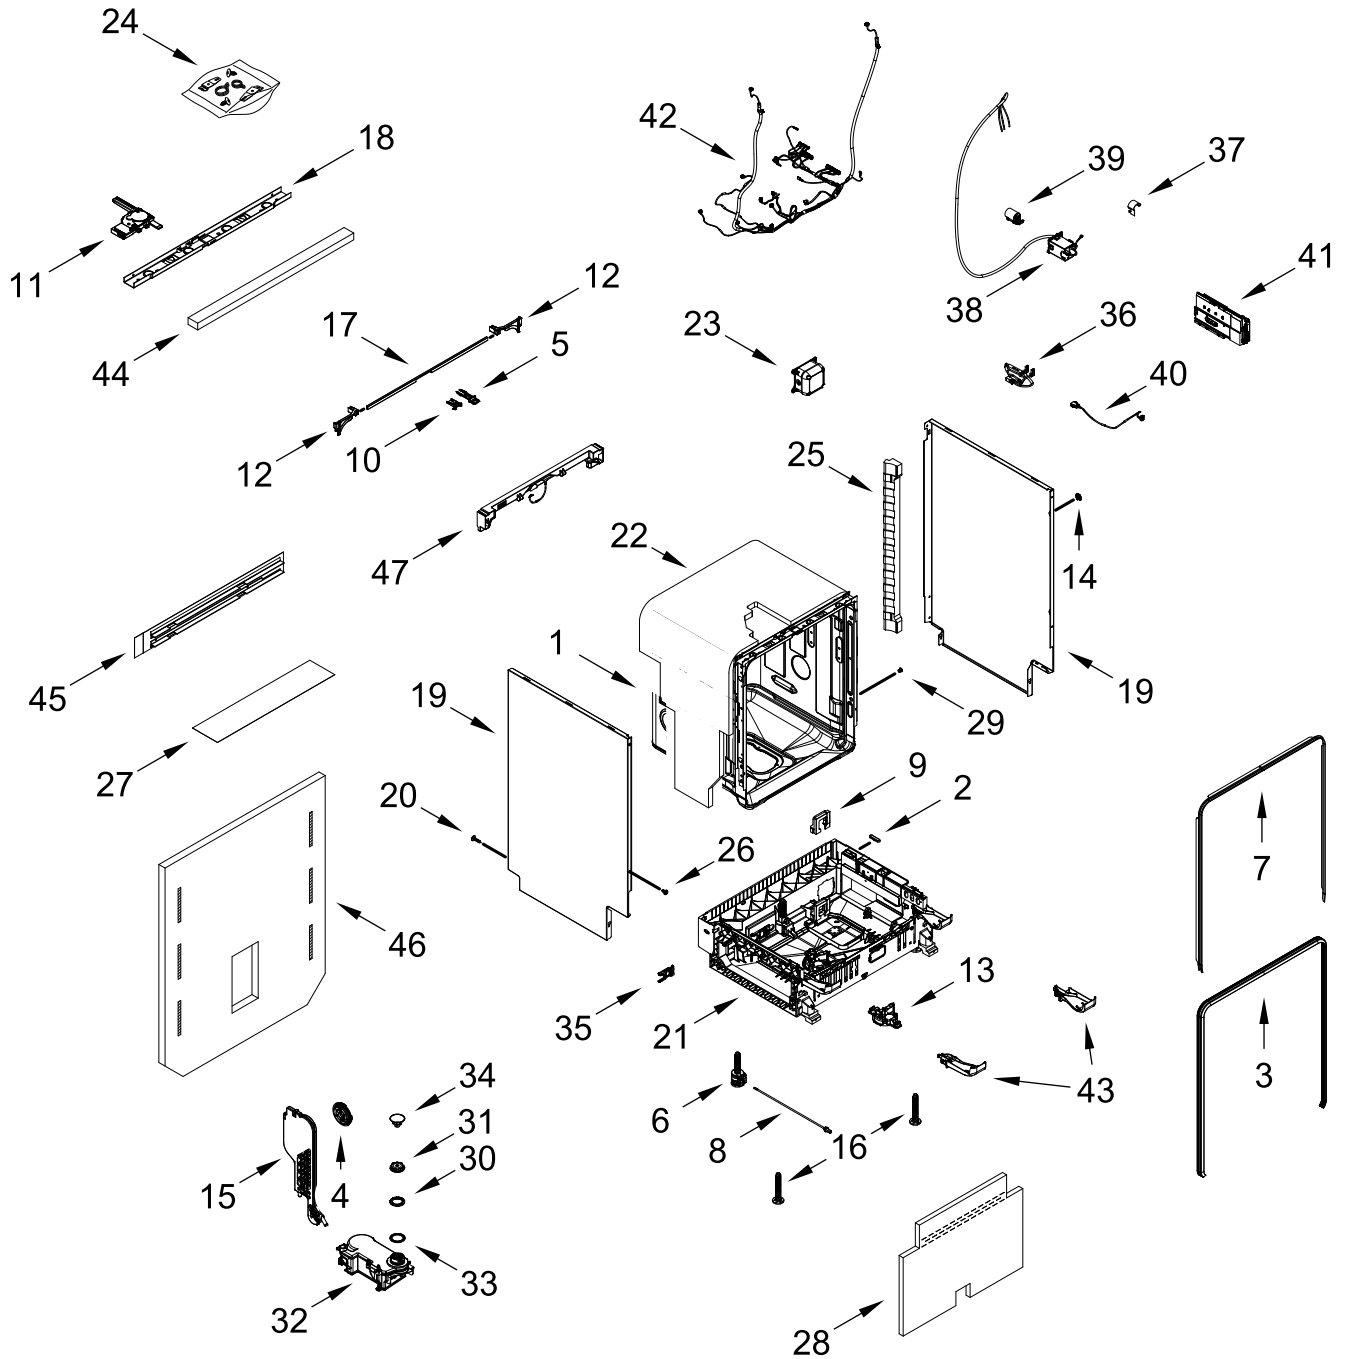

TUB AND FRAME PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Tub (Not Serviced)	17	W11317036	Cover, Top	34	W11509486	Funnel, Salt
2	W11671752	Pad, Tub Support	18	W11306174	Crossbar, Front Frame	35	W11686061	Plate, In/Out Hoses
3	W11658880	Gasket, Tub	19	W11355600	Side Panel (Left)	36	W11545951	Jumper, RFI to Control
4	W11236521	Nut, Air Break		W11355598	Side Panel (Right)	37	W10943118	Spring, Grounding
5	W11314779	Strike, Latch	20	W10986499	Screw	38	W11578108	Power Cord Assembly
6	W11316238	Assembly, Leveling Leg (Rear)	21	W11690567	Assembly, Base	39	W11418782	Filter, RFI
7	W11554391	Retainer, Tub Gasket	22	W11564606	Shield, Tub Sound	40	W11646878	Jumper Harness, Service Port
8	W11325471	Rod, Foot Adjustment (Rear)	23	W11643567	Assembly, Junction Box	41	W11561211	Control, Electronic
9	W11668893	Holder, Damper	24	W11696041	Miscellaneous Parts Bag	42	W11609316	Wiring Harness, Main
10	W11317043	Cover, Door Opening	25	W11525808	Spacer, Side Panel	43	W11684708	Channel, Overflow (Left)
11	W11590760	Assembly, Door Opening	26	W11350847	Screw		W11684709	Channel, Overflow (Right)
12	W11316692	Cover, Tub Corner (Left)	27	W11676404	Strip, Anti-Condensation	44	W11676843	Foam, Crossbar
	W11316688	Cover, Tub Corner (Right)	28	W11626034	Insulation, Floor	45	W11673775	Kit, Side Cover Installation
13	W11602936	Float Switch	29	W11656505	Button, Tub	46	W11600452	Insulation, Back
14	W11321022	Plug, Tub	30	W11227921	Nut, Softner	47	W11664579	Crossbar, Upper Rear
15	W11568183	Air Break	31	W11227934	Cap, Salt			
16	W11325130	Leg, Leveling (Front)	32	W11546882	Softener, Water			
			33	W11224085	Seal, Softener			


PUMP, WASHARM AND MOTOR PARTS

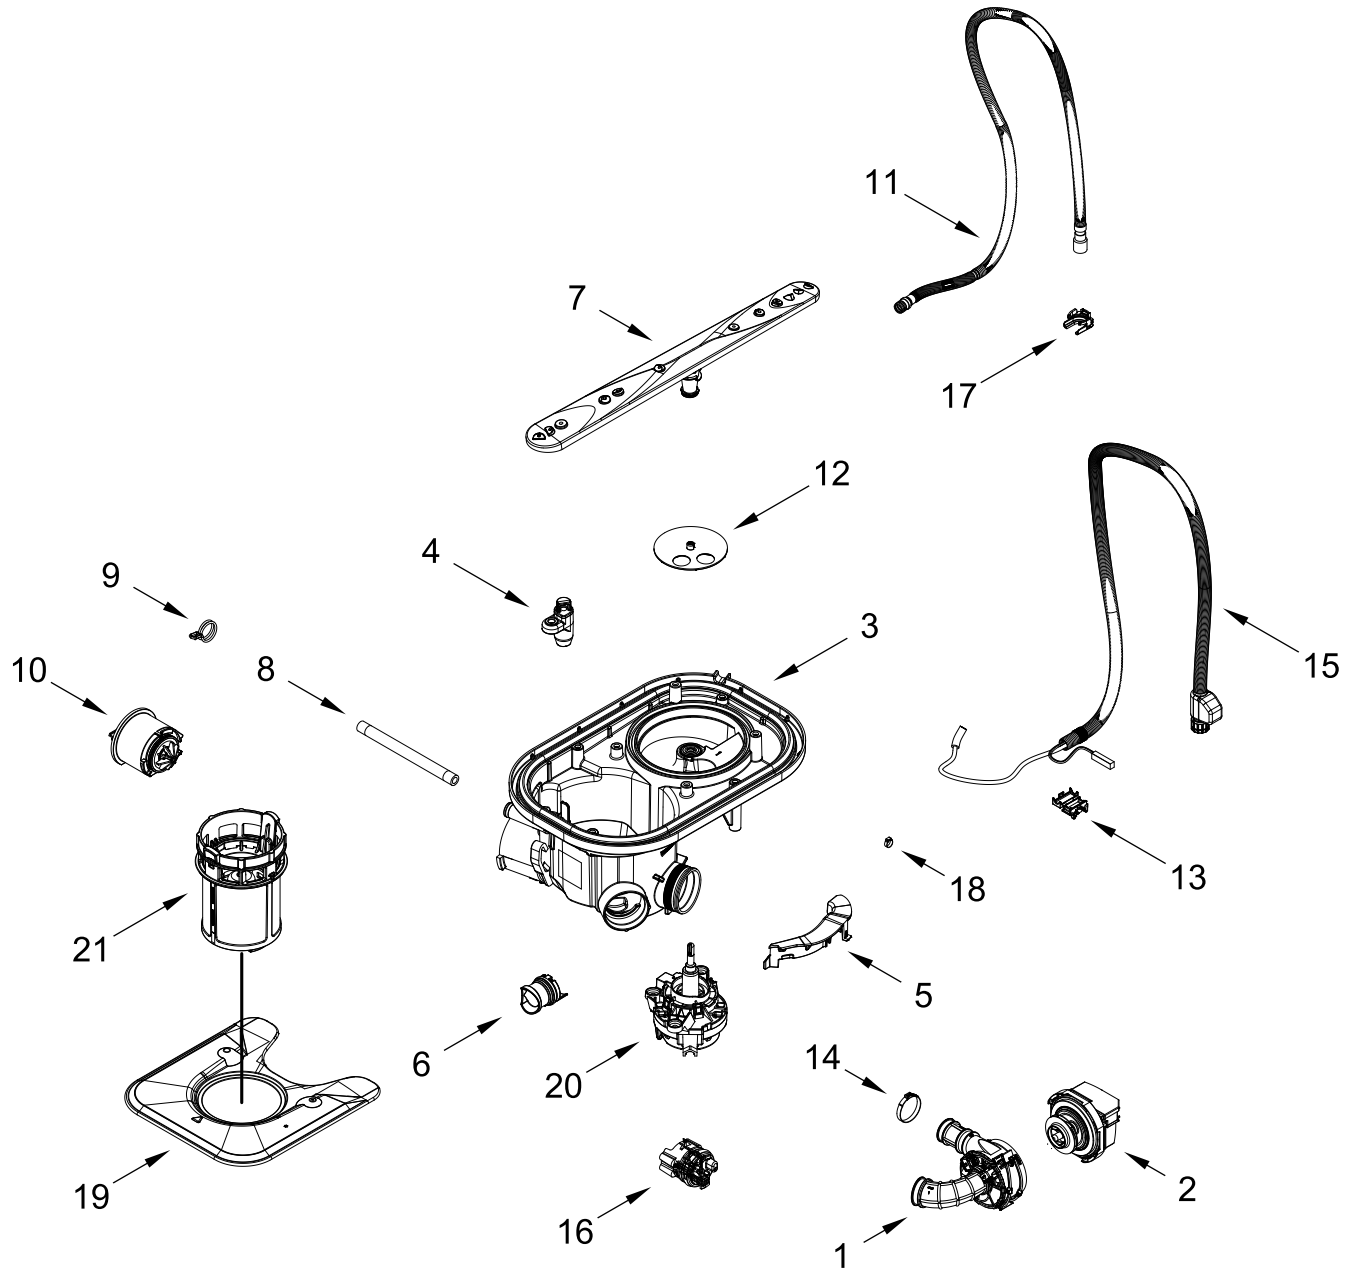

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11630727	Heater, Pump	9	W10096851	Clamp, Hose	18	W11015323	Clamp, Hose
2	W11630725	Motor, Pump	10	W11631981	Motor, Drain	19	W11445183	Grate
3	W11560668	Sump (includes Seal and Diverter)	11	W11586395	Hose, Drain	20	W11543924	Diverter Valve Motor
4	W11559823	Drain Vent Assembly	12	W11175586	Disc, Diverter	21	W11559846	Filter
5	W11560657	Diffuser, Inlet	13	W10942827	Housing, Connector			
6	W11560834	Check Valve, Drain	14	W11122851	Clamp, Hose			
7	W11528063	Wash Arm Assembly	15	W11551555	Hose, Inlet			
8	W11008962	Hose, Pump Inlet	16	W11126174	Indicator, Optical Wash			
			17	W11626817	Clip, Hose			


UPPER WASH AND RINSE PARTS

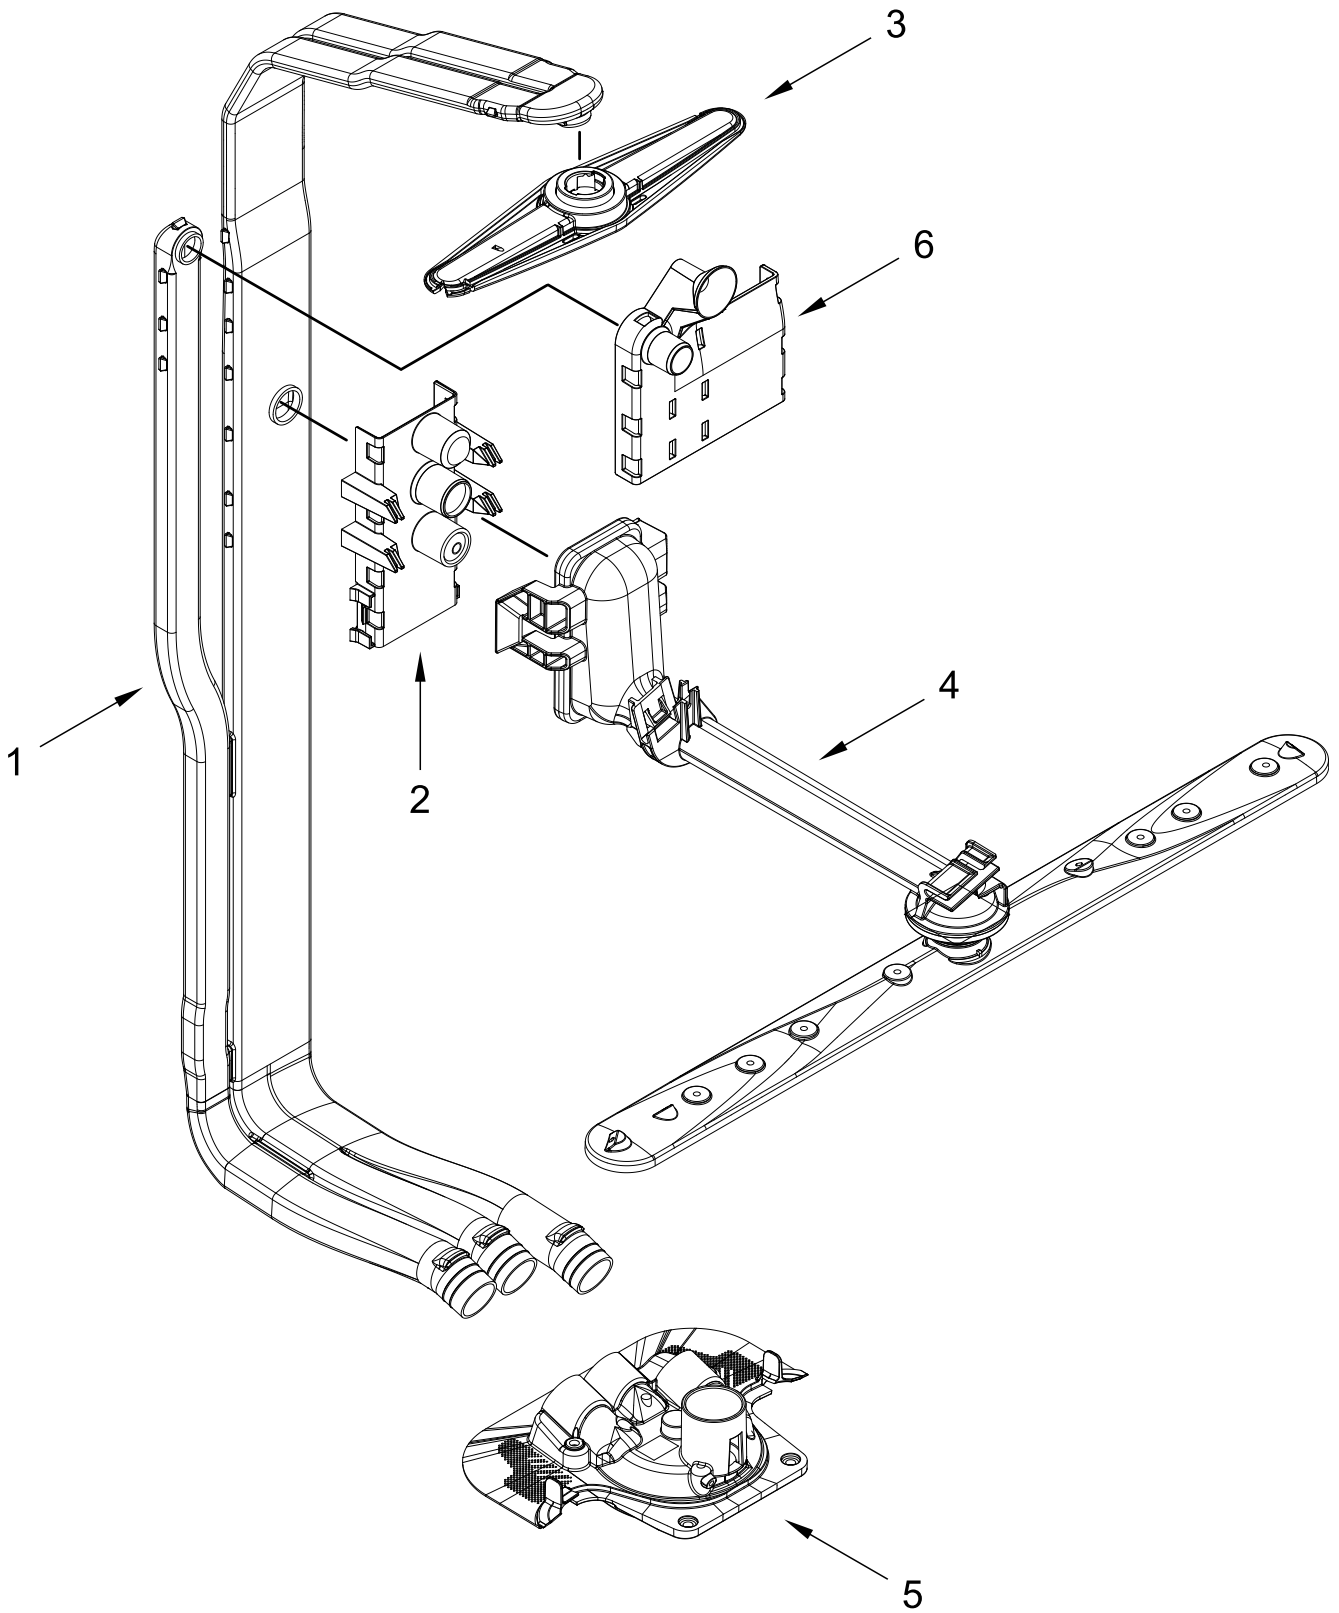

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11668592	Feed Tube Assembly	3	W11522201	Sprayarm, Third Level	5	W11602499	Cover, Diverter
2	W11522213	Retainer, Docking (2nd Level)	4	W11680190	Upper Sprayarm Assembly	6	W11221214	Retainer, Docking (3rd Level)


UPPER RACK AND TRACK PARTS

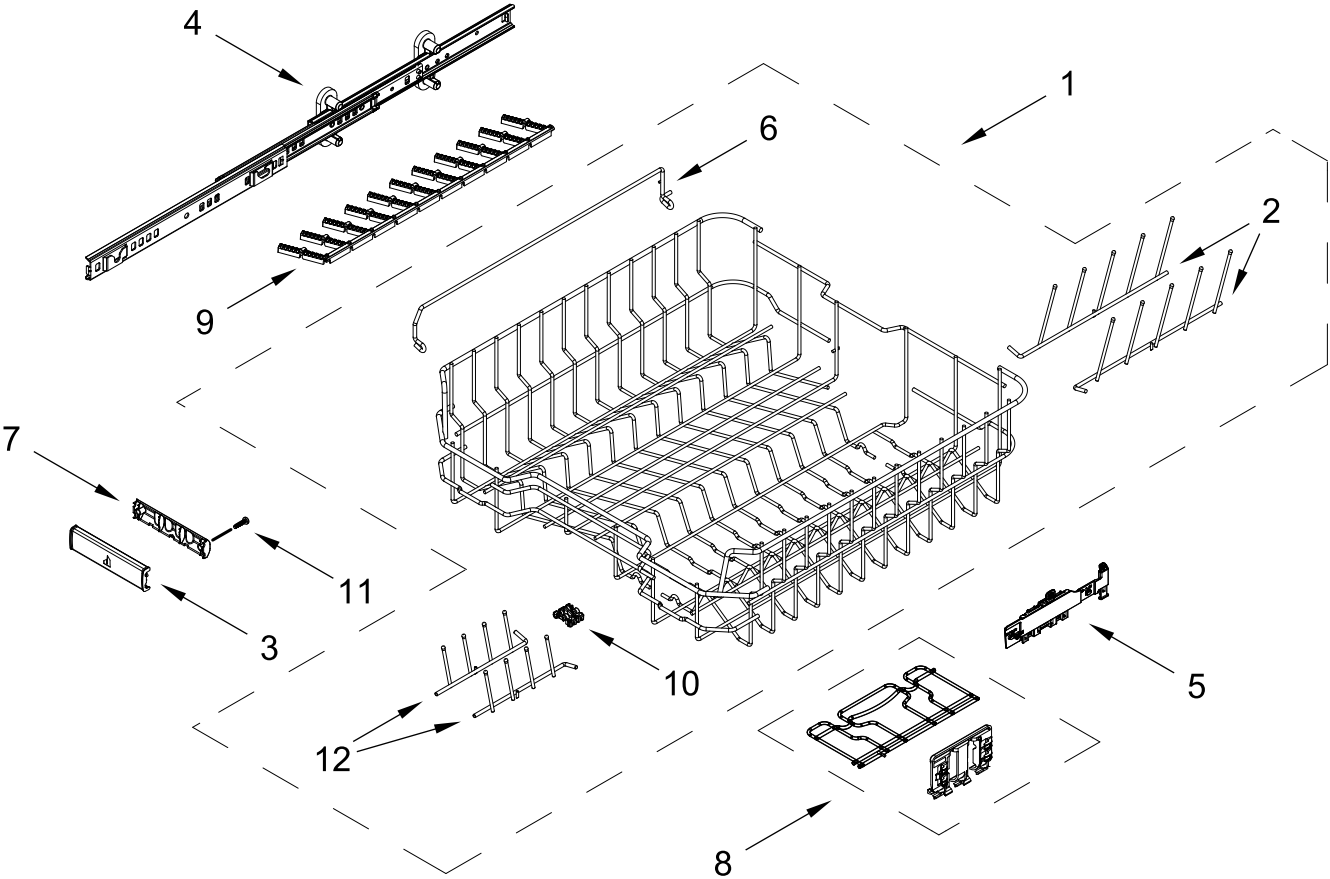

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11534669	Dishrack, Upper	5	W11548662	Adjustment Assembly (Left)	10	W11315981	Clip, Tine Row
2	W11534673	Tine Row, Back (Left)		W11548661	Adjustment Assembly (Right)	11	W11337336	Screw
	W11534678	Tine Row, Back (Right)				12	W11521627	Tine Row, Front (Left)
3	W11590244	Handle, Front	6	W11521643	Support, Tine Row		W11521631	Tine Row, Front (Right)
4	W11549966	Assembly, Track & Mount (Left)	7	W11590236	Handle, Rear			
	W11549967	Assembly, Track & Mount (Right)	8	W11618606	Assembly, Cupshelf			
			9	W11538488	Tine Row, Fold Down			


LOWER RACK PARTS

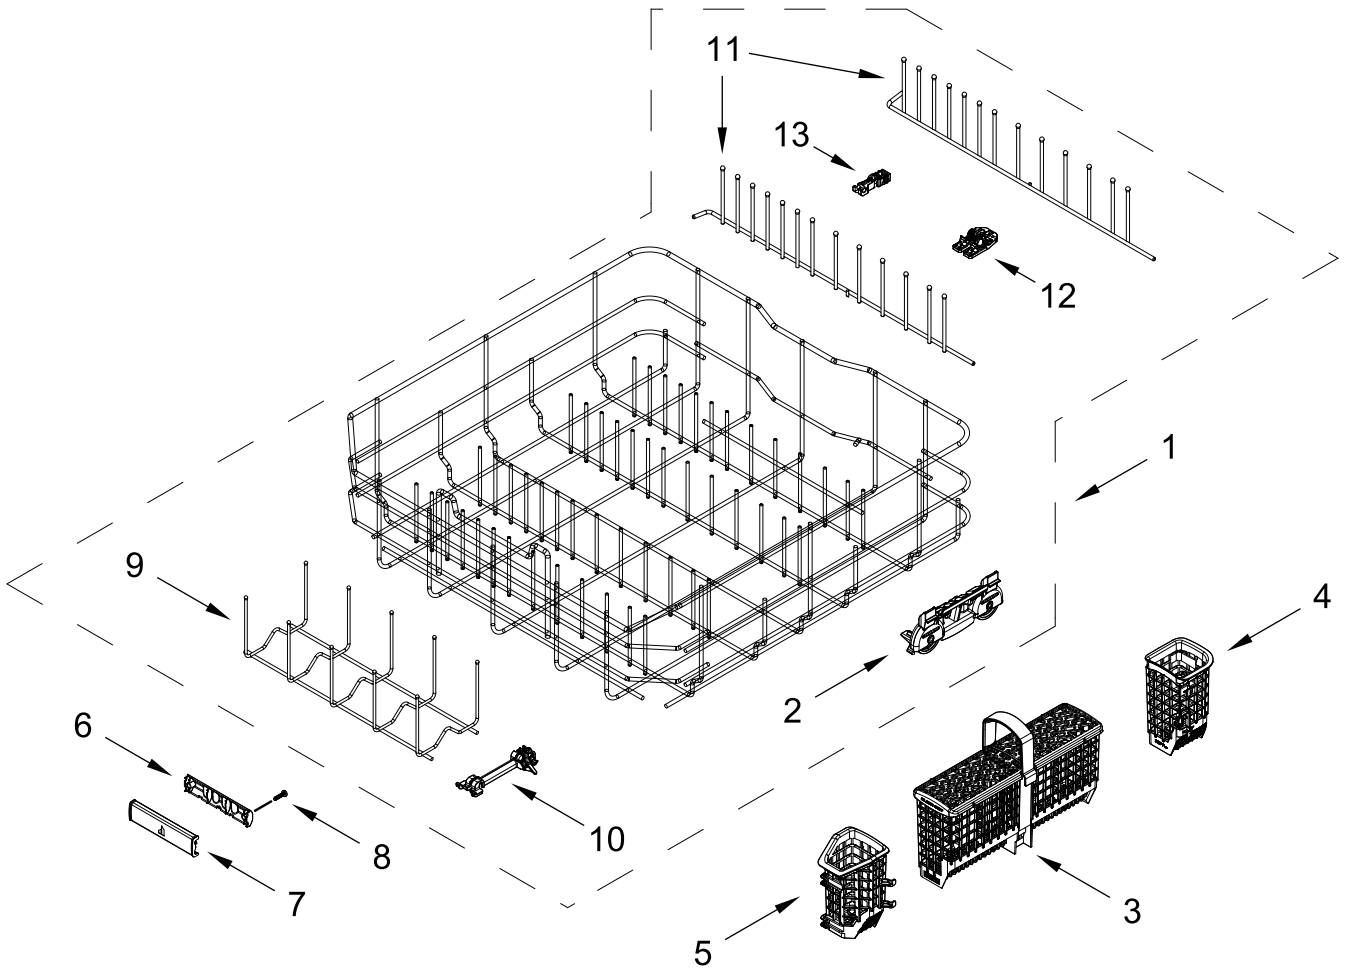

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11544445	Dishrack, Lower	6	W11590236	Handle, Rear	11	W11544443	Tine, Folddown (Rear)
2	W11543650	Wheel & Transport Assembly	7	W11590243	Handle, Front		W11523467	Tine, Folddown (Front)
3	W11634640	Silverware Basket Assembly	8	W11337336	Screw	12	W11545635	Clip, Positioning
4	W11634637	Utensil Basket (Rear)	9	W11523499	Sliding Tine, Bowl	13	W11545636	Clip, Retainer
5	W11634635	Utensil Basket (Front)	10	W11523448	Clip, Sliding Tine			

THIRD LEVEL RACK AND TRACK PARTS

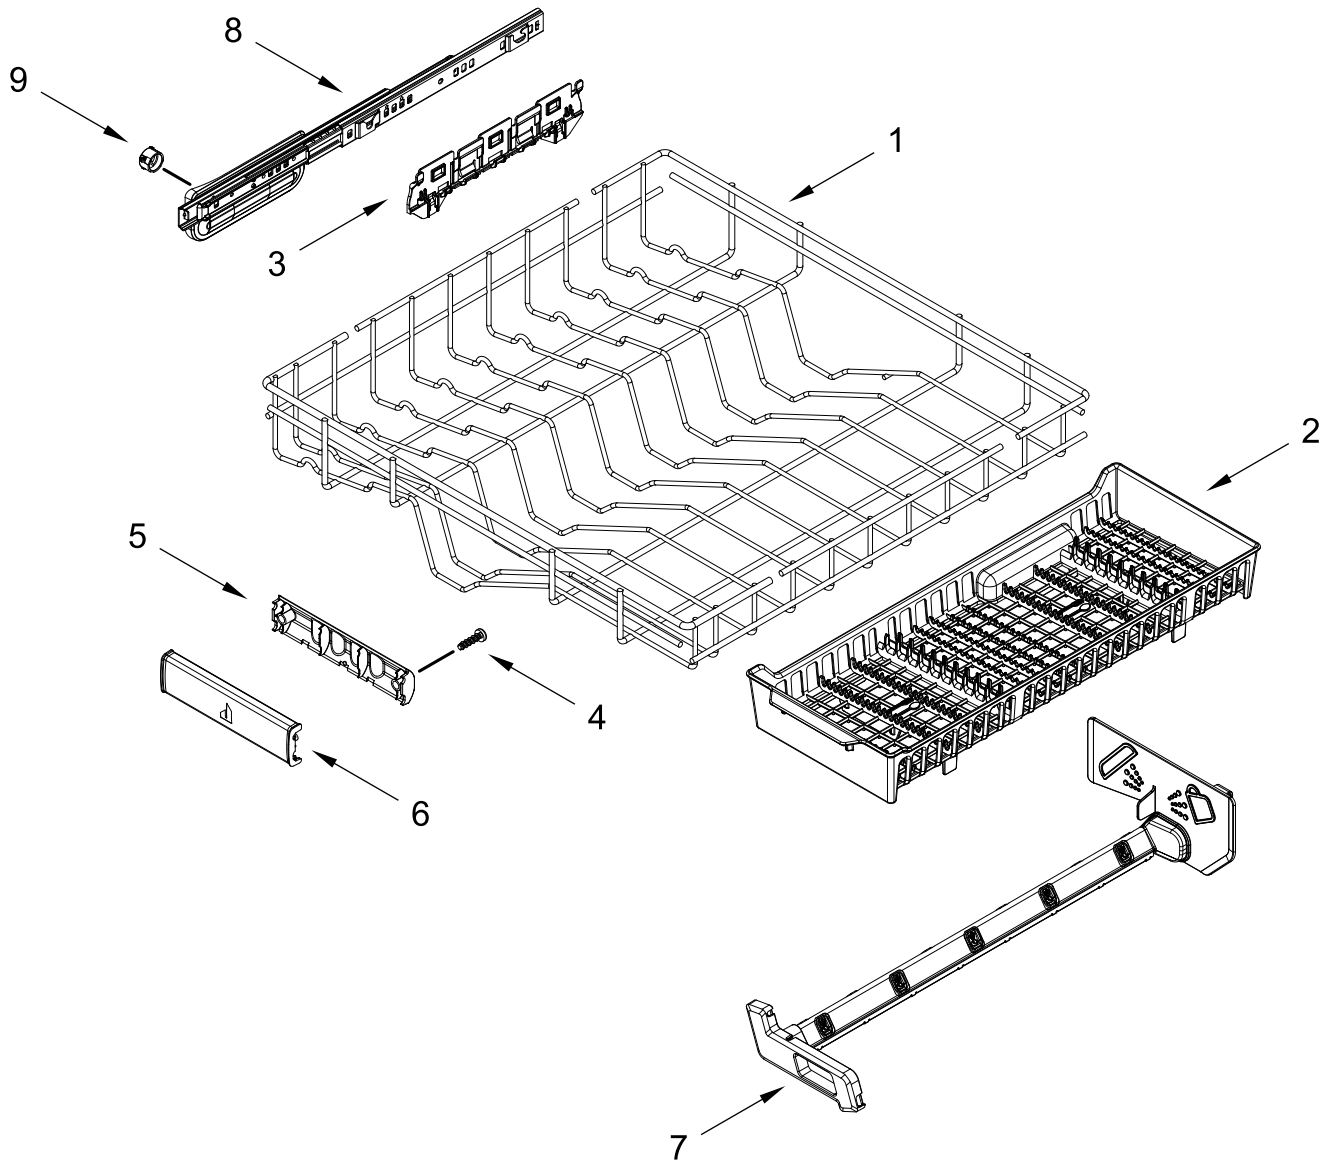

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11528027	Rack, Third Level	4	W11337336	Screw	8	W11549968	Track, Dishrack (Left)
2	W11545952	Silverware Tray	5	W11590236	Handle, Rear		W11549969	Track, Dishrack (Right)
3	W11543835	Mount, Dishrack	6	W11590243	Handle, Front	9	W11630670	Nut, Tub
			7	W11528575	Washarm Assembly			