




ELECTRIC RANGE

MODELS:

WFES3030RS0 (Stainless)


COOKTOP PARTS

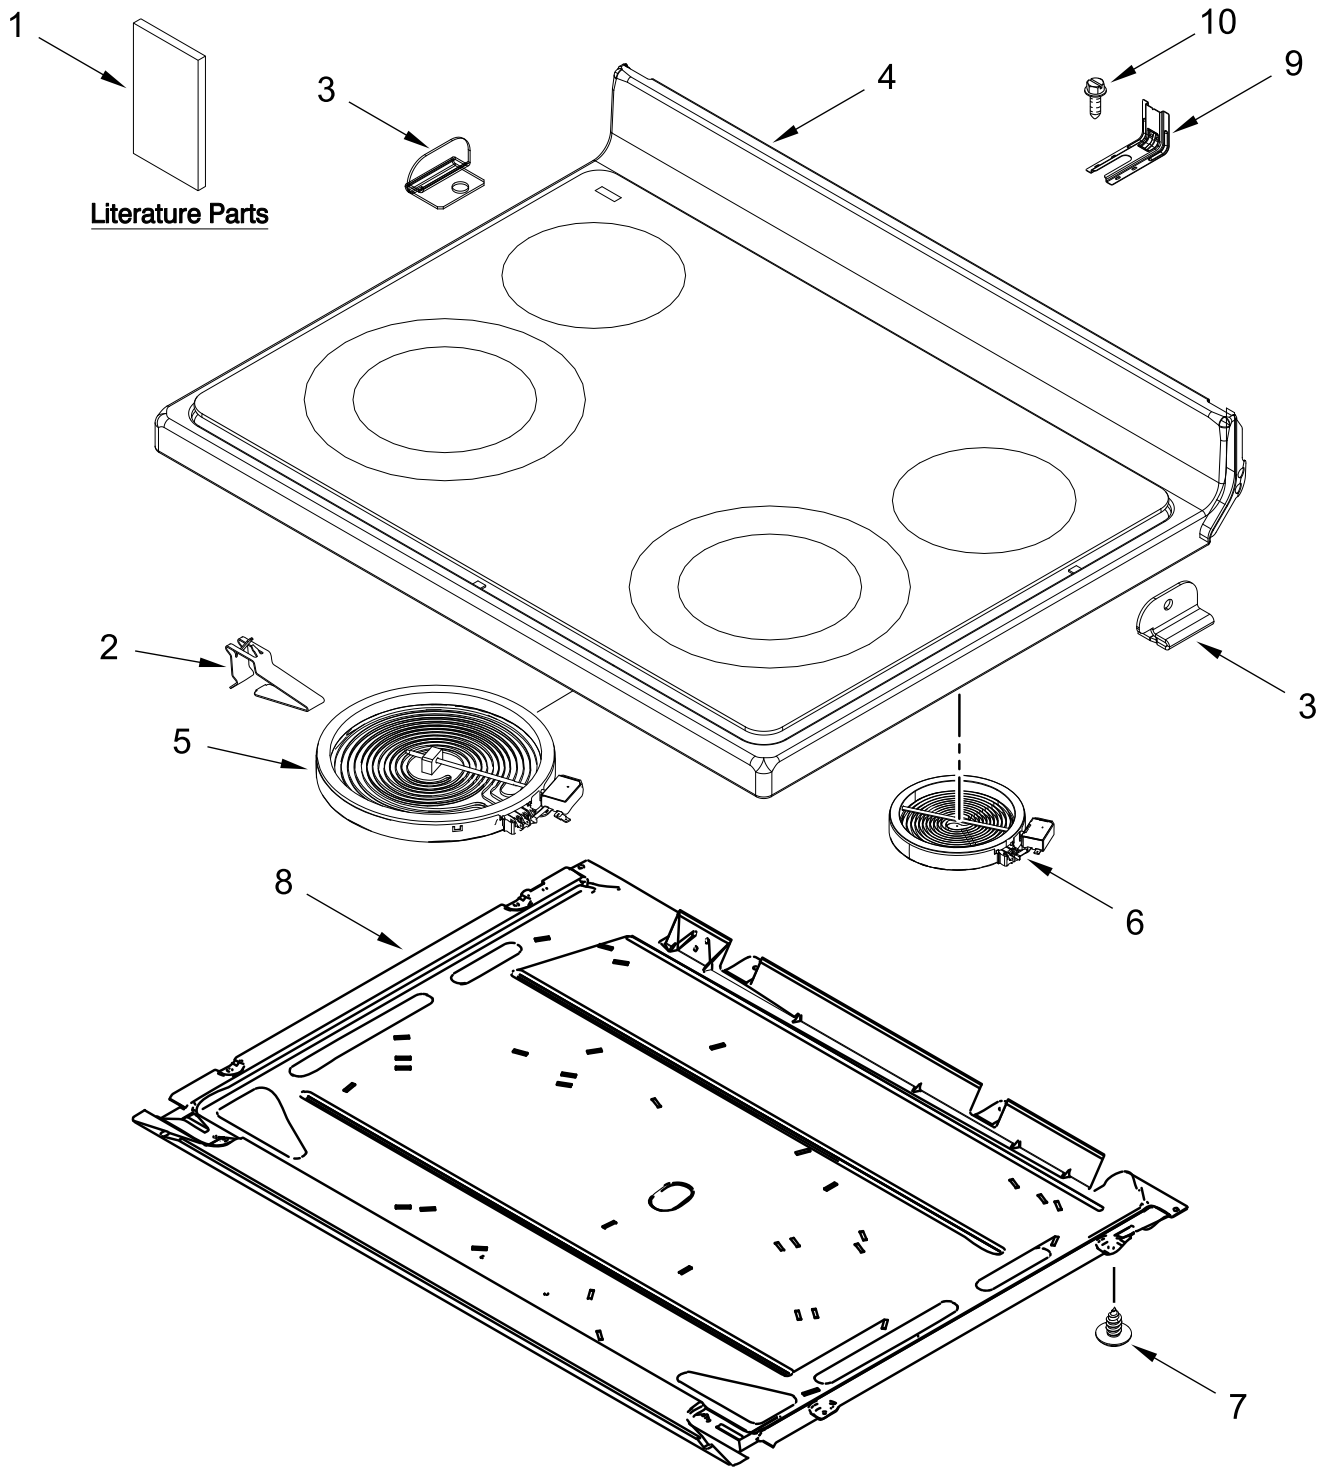

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	10	7101P485-60	Screw, Anti-Tip Kit
	W11617173	Owners Manual			(Left Front and Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11618614	Quick Start Guide						
	W11618626	Tech Sheet	6	W10248261	Element (1200W)		W11334451	Harness, Main
2	W11600012	Spring, Element			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	7	3196169	Screw		W11134845	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)	8	W10691223	Pan, Radiant Element			
4		Cooktop	9	W11379945	Bracket, Anti-Tip			
	W11629153	Black						


CONTROL PANEL PARTS

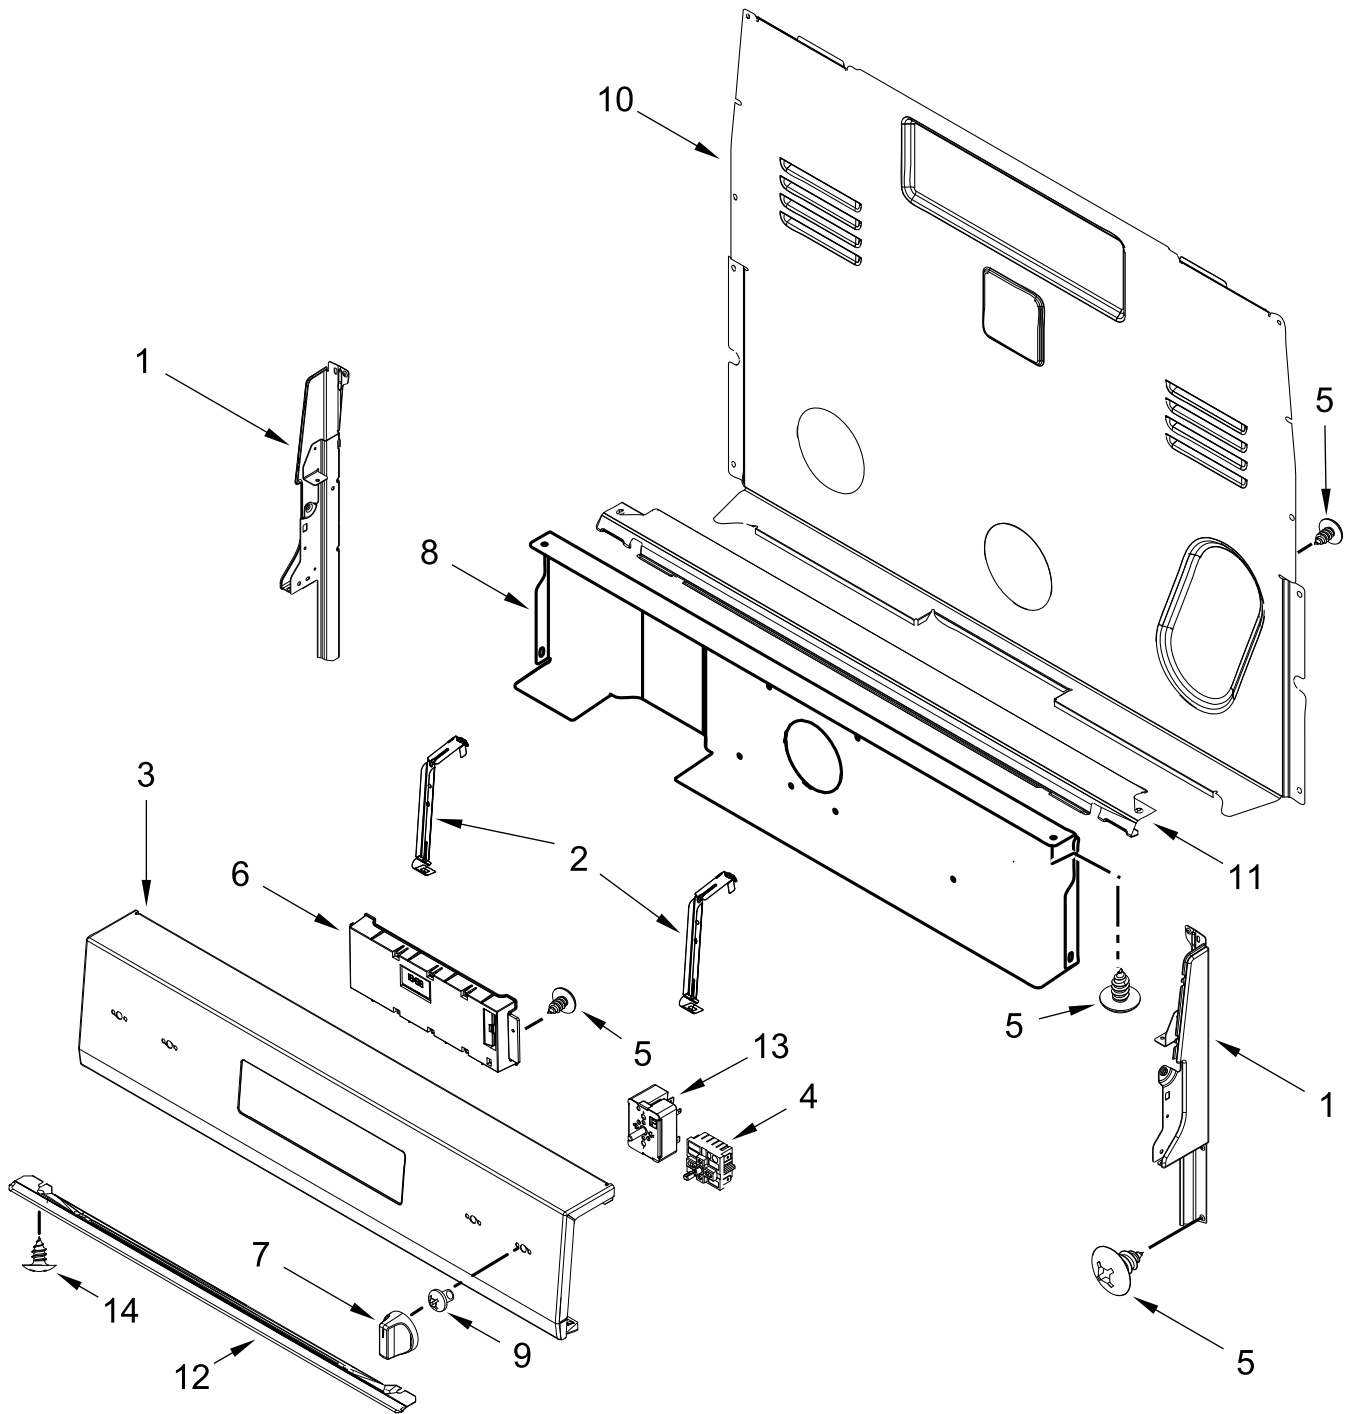

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196178	Screw	11	W10525121	Bracket, Console Mounting
	W11213290	Black (Left)	6		Control, Electronic (LCX)	12		Bracket, Eye Brow
	W11213292	Black (Right)		W11637088	Black		W11443964	Black
2	W11290750	Bracket, Control	7		Knob	13	W10578768	Switch, Infinite
3		Console, Assembly		W11331196	Black			(Left Rear and Right Rear)
	W11375821	Stainless	8	W10134247	Shield, Heat			
4	W10437092	Switch, Infinite (Left Front and Right Front)	9	3400882	Screw	14	3196165	Screw
			10	8272473	Cover, Upper Rear			


CHASSIS PARTS

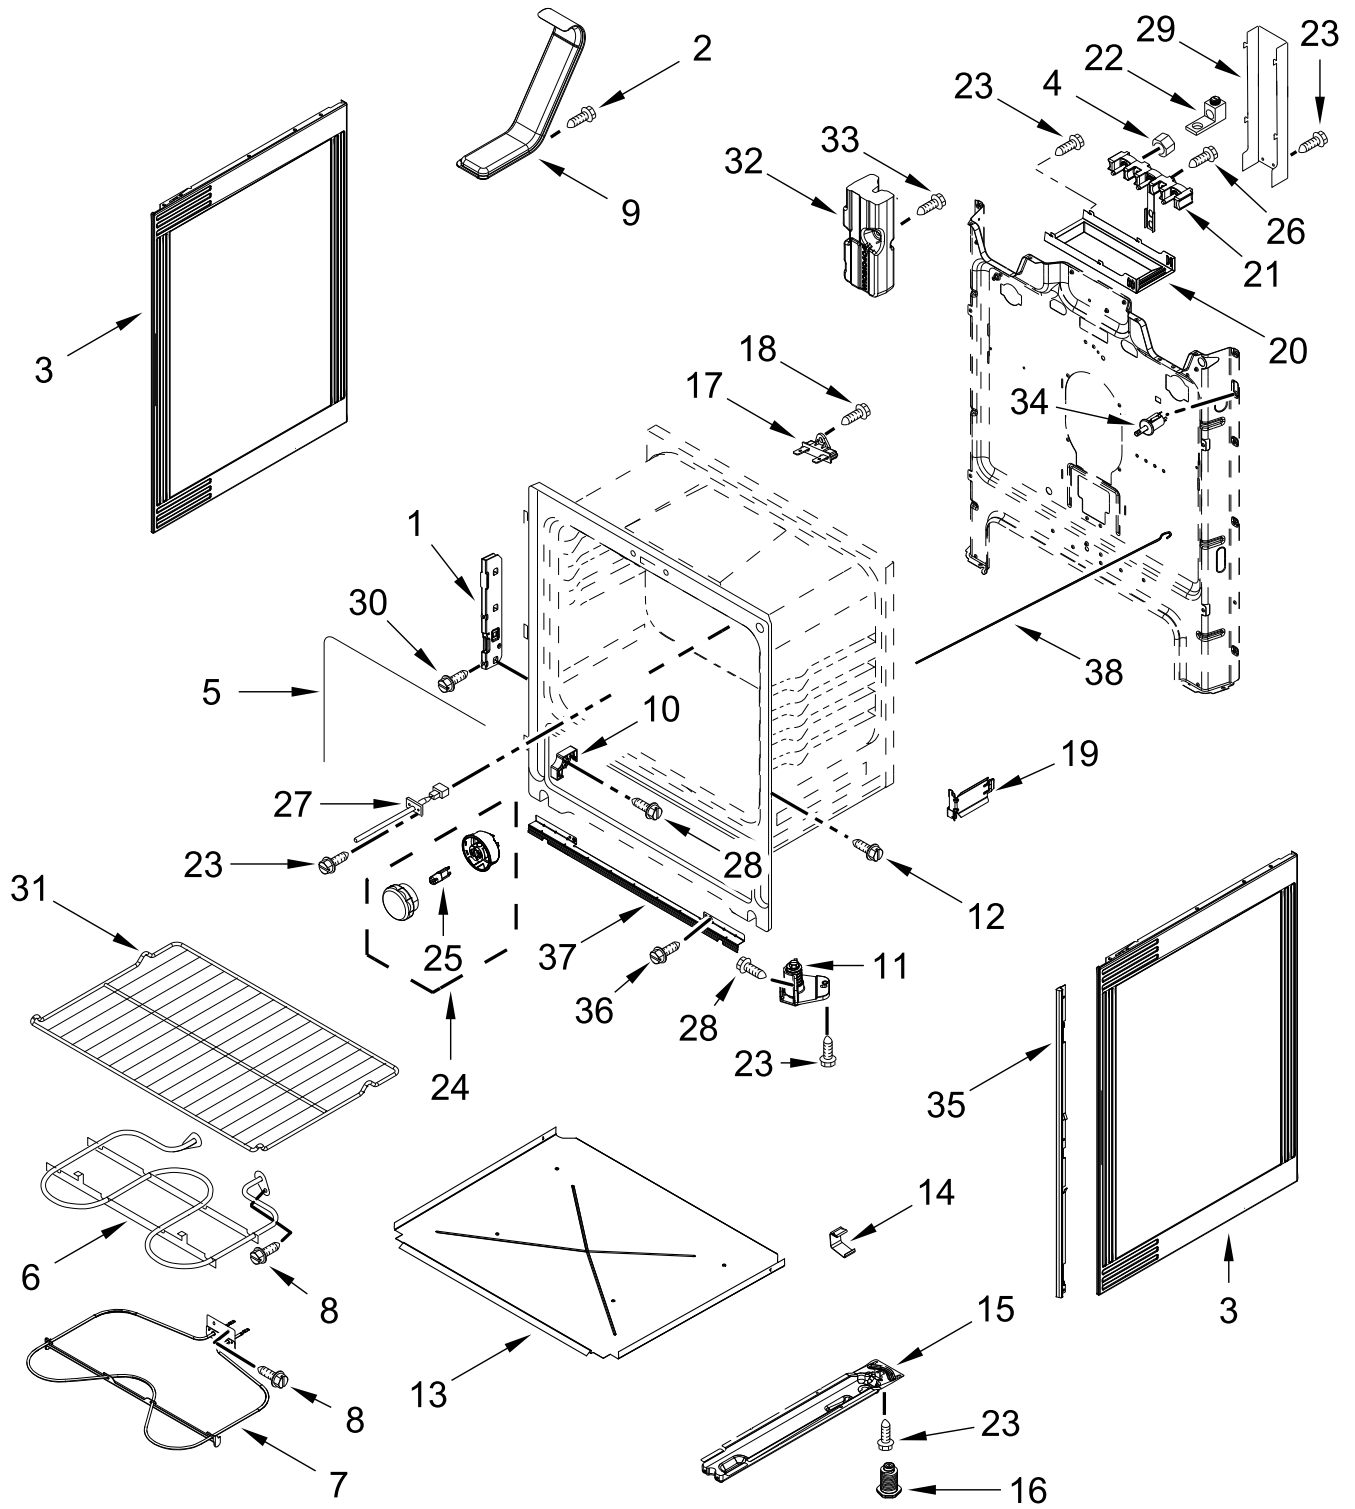

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	33	W11034869	Screw
2	3196154	Screw	17	3196548	Fuse, Thermal	34	W11511828	Switch, Door
3		Panel, Side	18	3196172	Screw	35	W11510560	Barrier Rail, Rubber (Left and Right)
	W10162245	Black	19	W10404688	Clip, Oven Support	36	3196560	Screw
4	3400029	Nut	20	3186034	Bracket, Service	37	W11464547	Bracket, Front Frame
5	W10129032	Seal, Door	21	W10245259	Block, Terminal	38	9757239	Rod, Door Switch
6	9757340	Element, Broil	22	W10281322	Kit, Bare Wire Adapter Block			FOLLOWING PARTS NOT ILLUSTRATED
7	W11111743	Element, Bake	23	3196178	Screw		8273263	Insulation, Wrap
8	3196174	Screw	24	W11634772	Light Assembly		8272611	Insulation, Back
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts		W10333344	Insulation, Flue
10	W10674705	Glide, Drawer Front	26	3400016	Screw			
11	W10341186	Front Foot Assembly	27	W10586204	Sensor			
12	W10067840	Screw	28	3196169	Screw			
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390008	Base Rail Assembly (Left)	31	W11173792	Rack, Oven			
	W10390007	Base Rail Assembly (Right)	32	W10910404	Counterweight			


DOOR PARTS

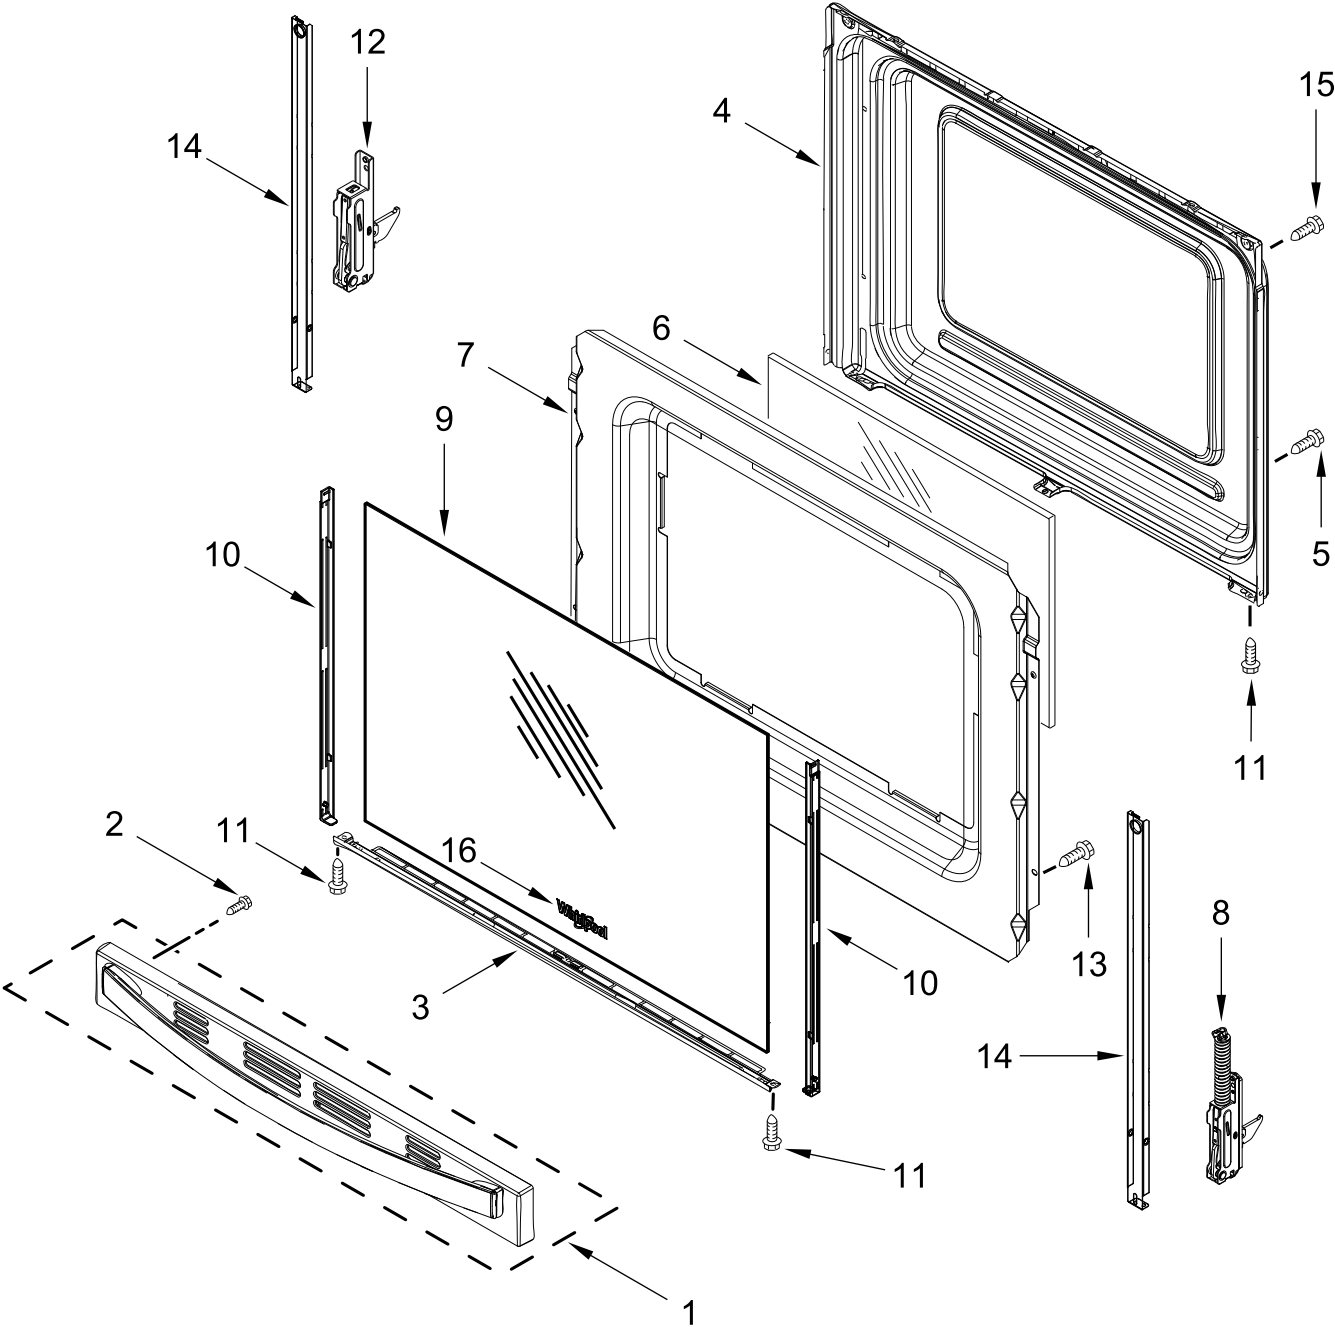

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299225	Hinge, Active	15	W10200660	Screw
	W11363649	Stainless (Includes Standoff)	9		Glass Assembly, Outer Door	16	W10884775	Badge
				W11624779	Black			
2	W10465158	Screw	10		Trim, Side			
3		Trim, Lower Door		W10746436	Black (Left)			
	W11444043	Black		W10746435	Black (Right)			
4	9761344	Liner, Door	11	W10327235	Screw			
5	W10031790	Screw	12	W10299227	Hinge, Door (Passive)			
6	W11367326	Glass, Inner	13	W10031780	Screw			
7	W11380221	Retainer, Insulation	14	W11379944	Strap, Door			

DRAWER PARTS

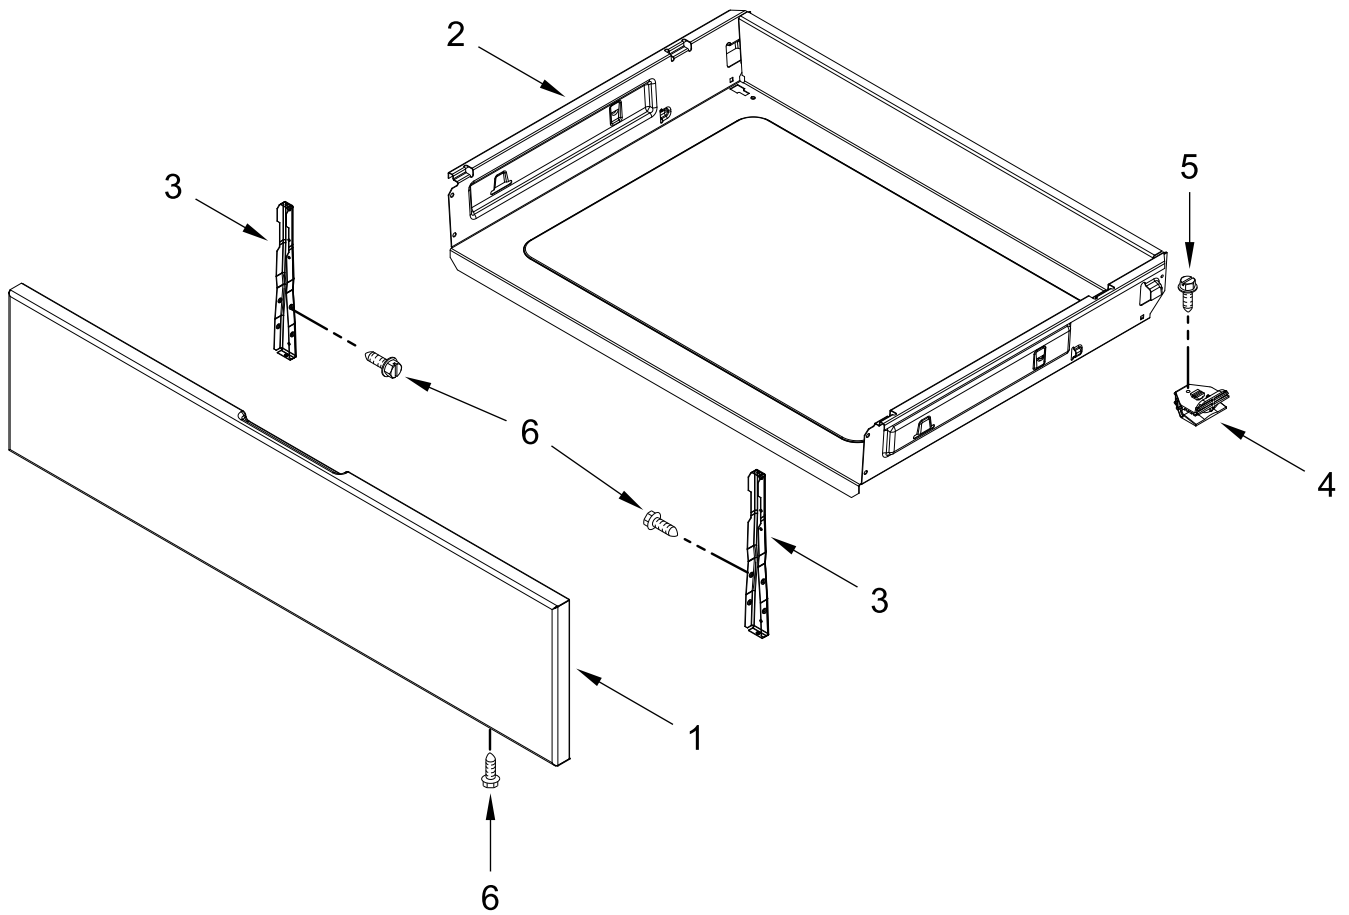

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W10330070	Stainless				6	3196169	Screw
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting