




## **ELECTRIC RANGE**

### **MODELS:**

WFES3330RB0 (Black)

WFES3330RW0 (White)


# COOKTOP PARTS

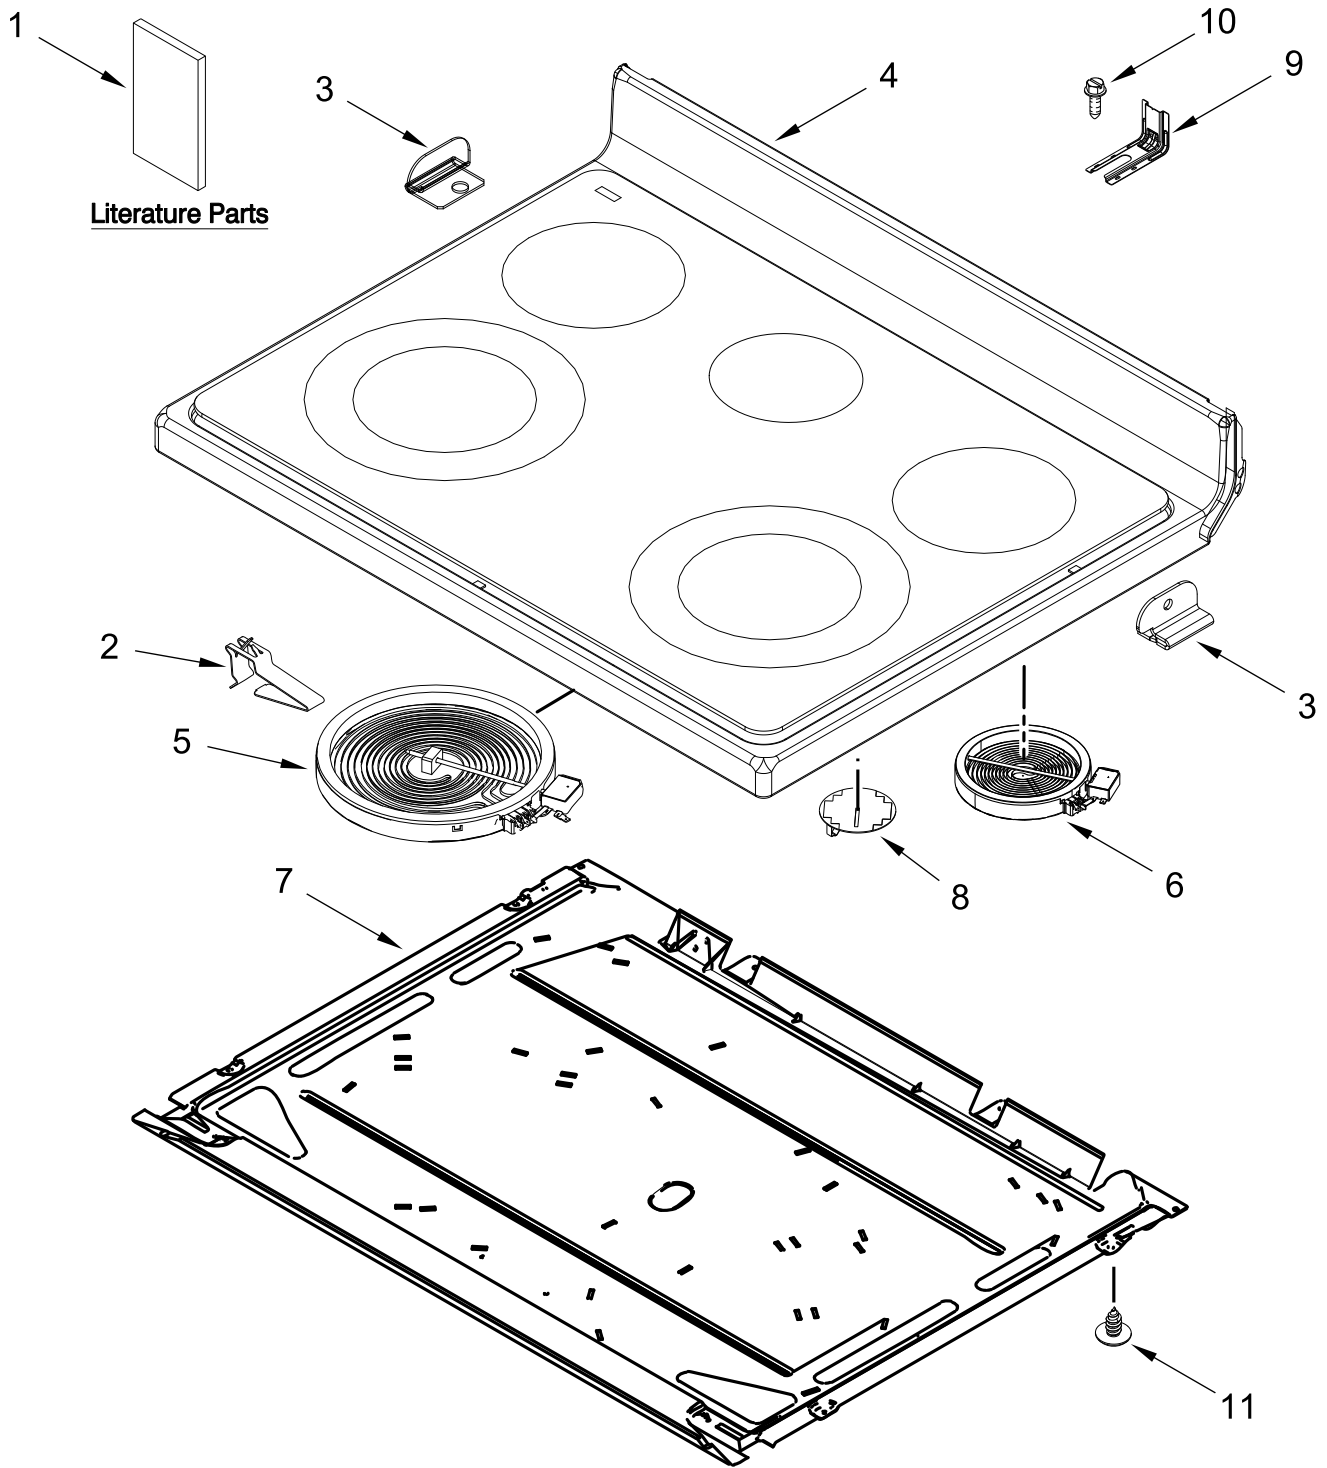

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11282542	Element (3000W Dual)	11	3196169	Screw
	W11617173	Owners Manual			(Left Front and Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11618614	Quick Start Guide						
	W11618626	Tech Sheet	6	W10248261	Element (1200W)	W11702766		Harness, Main
2	W11600012	Spring, Element			(Left Rear and Right Rear)	W11598759		Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	7	W10691223	Pan, Radiant Element	W11134845		Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)	8	W11668631	Element, Warm Zone (Center)	W11134603		Harness, Cooktop (Left)
4		Cooktop	9	W11379945	Bracket, Anti-Tip			
	W11629477	Black	10	7101P485-60	Screw, Anti-Tip Kit			
	W11629476	White						


# CONTROL PANEL PARTS

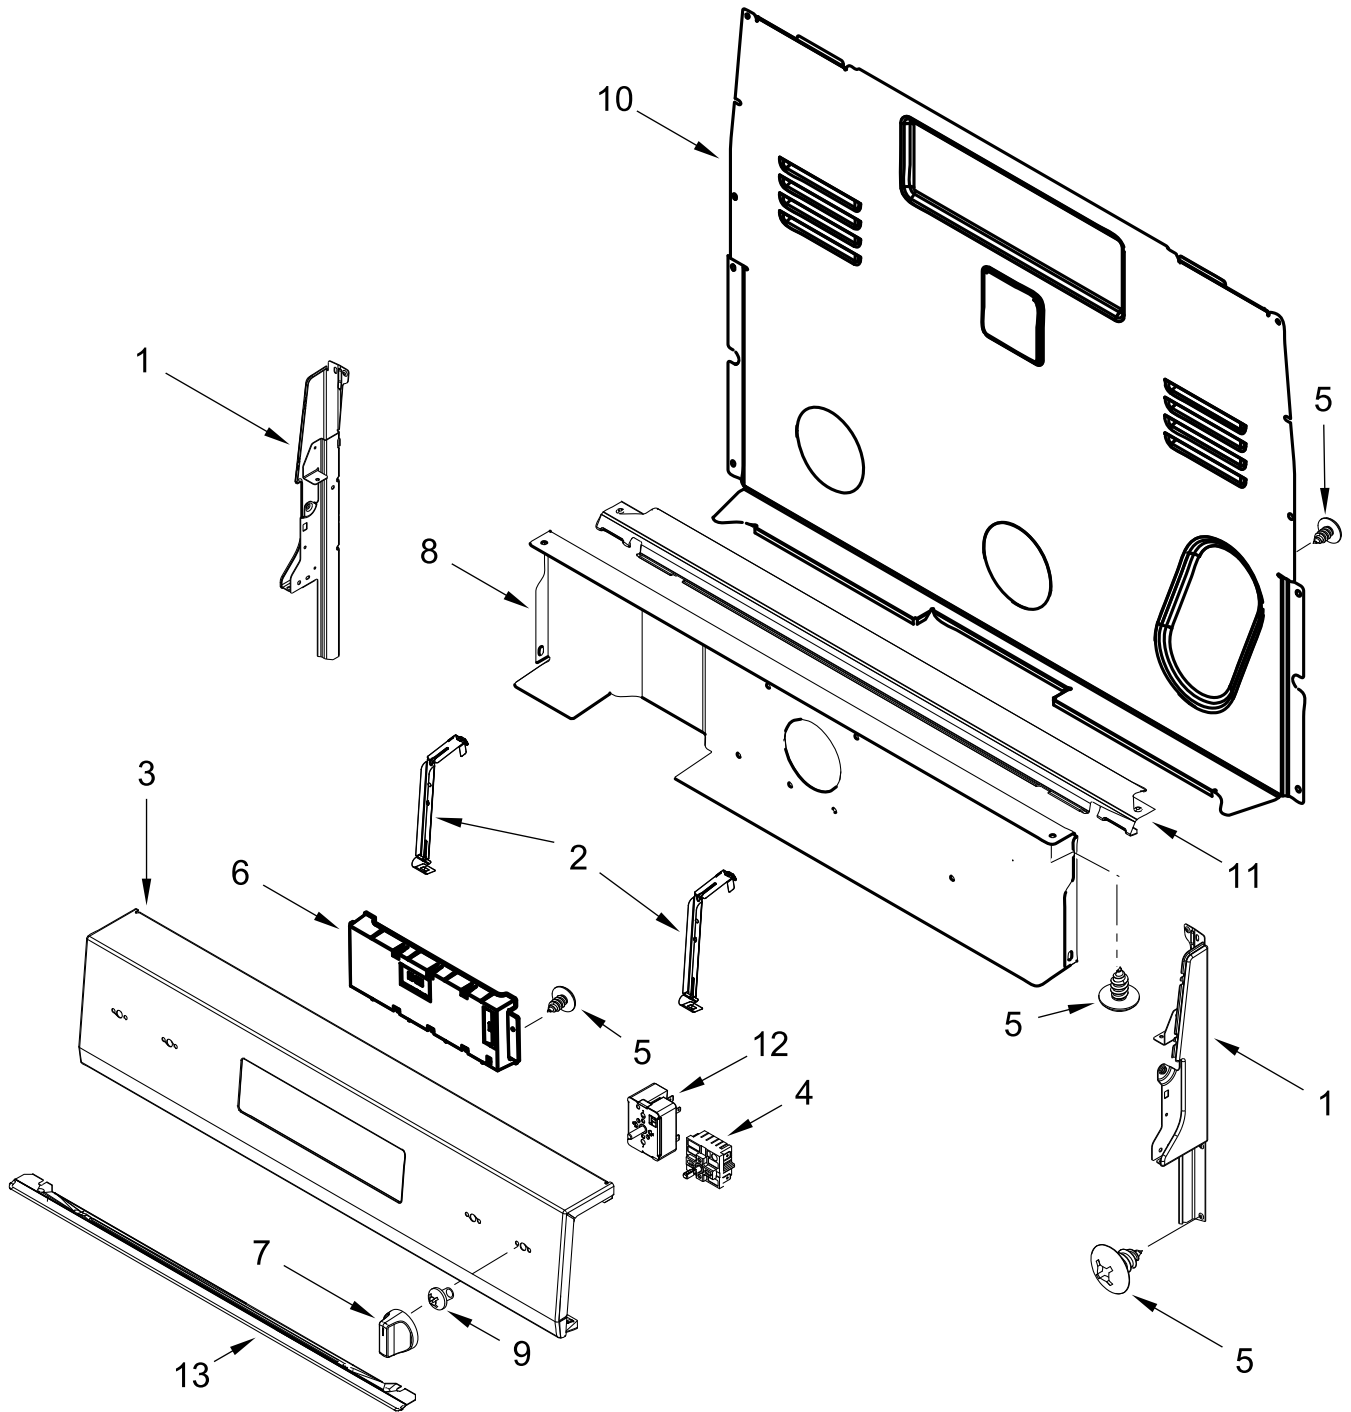

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196169	Screw	11	W10525121	Bracket, Console Mounting
	W11213290	Black (Left)	6		Control, Electronic (LCX)	12	W10578768	Switch, Infinite
	W11213292	Black (Right)		W11637089	Black			(Left Rear and Right Rear)
	W11213291	White (Left)	7		Knob			
	W11213293	White (Right)		W11331196	Black	13		Bracket, Eye Brow
2	W11290750	Bracket, Control		W11331195	White		W11443964	Black
3		Panel, Console	8	W10134247	Shield, Heat		W11443963	White
	W11299264	Black	9	3400882	Screw			
	W11299265	White	10	8272473	Cover, Upper Rear			
4	W10437092	Switch, Infinite (Left Front and Right Front)						


# CHASSIS PARTS

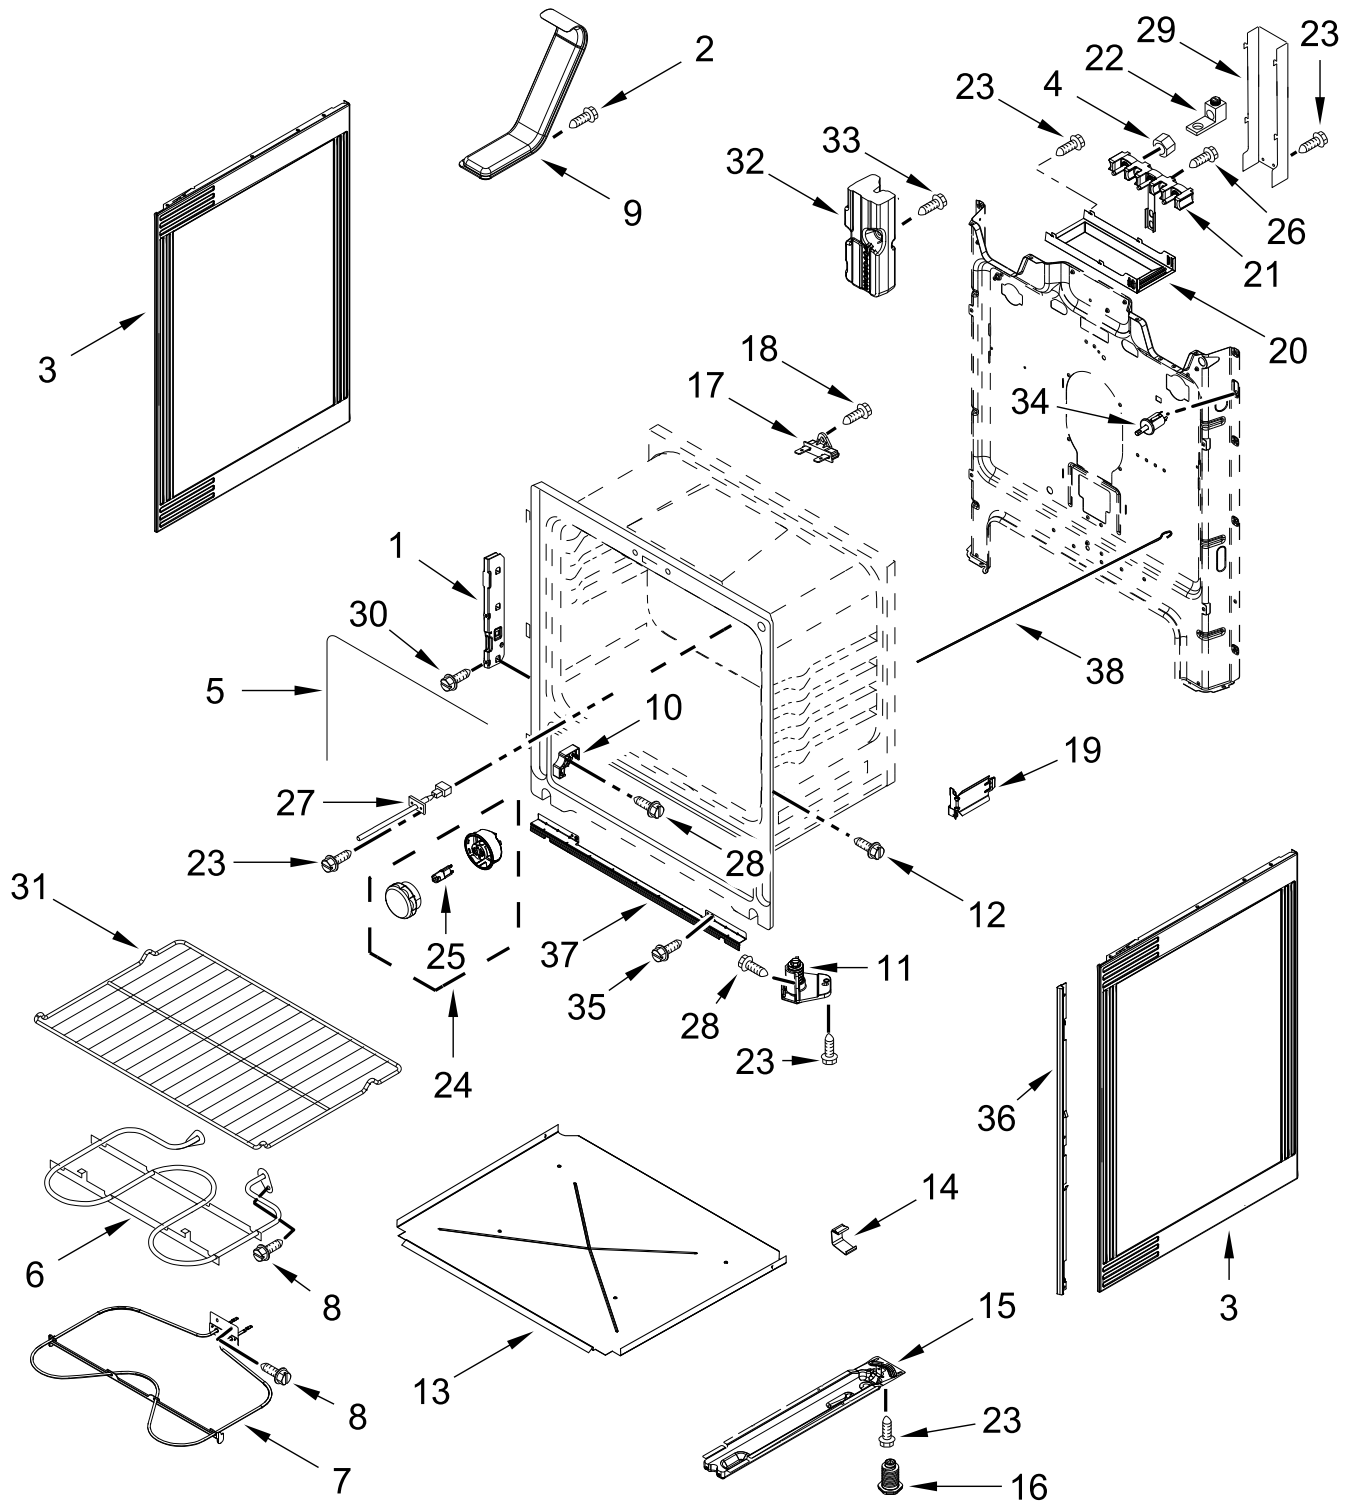

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390007	Base Rail Assembly (Right)	28	3196169	Screw
2	W10362924	Screw				29	W10326122	Cover, Terminal Block
3		Panel, Side		W10390008	Base Rail Assembly (Left)	30	W10031780	Screw
	W10162245	Black				31	W11173792	Rack, Oven
	W10575396	White	16	W10058460	Foot, Leveling	32	W10910404	Counterweight
4	3400029	Nut	17	3196548	Fuse, Thermal	33	W11034869	Screw
5	W10129032	Seal, Door	18	3196172	Screw	34	W11511828	Switch, Door
6	9757340	Element, Broil	19	W10404688	Clip, Oven Support	35	3196560	Screw
7	W11022836	Element, Bake	20	3186034	Bracket, Service	36	W11510560	Barrier Rail, Rubber (Left and Right)
8	3196154	Screw	21	W10245259	Block, Terminal	37	W11464547	Bracket, Front Frame
9	W10134285	Tube, Vent	22	W10281322	Kit, Bare Wire Adapter Block	38	9757239	Rod, Door Switch
10	W10674705	Glide, Drawer Front						FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11634772	Light Assembly			
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts		8273263	Insulation, Wrap
14	W10137382	Clip, Panel	26	3400016	Screw		8272611	Insulation, Back
			27	W10586204	Sensor		W10333344	Insulation, Flue

# DOOR PARTS

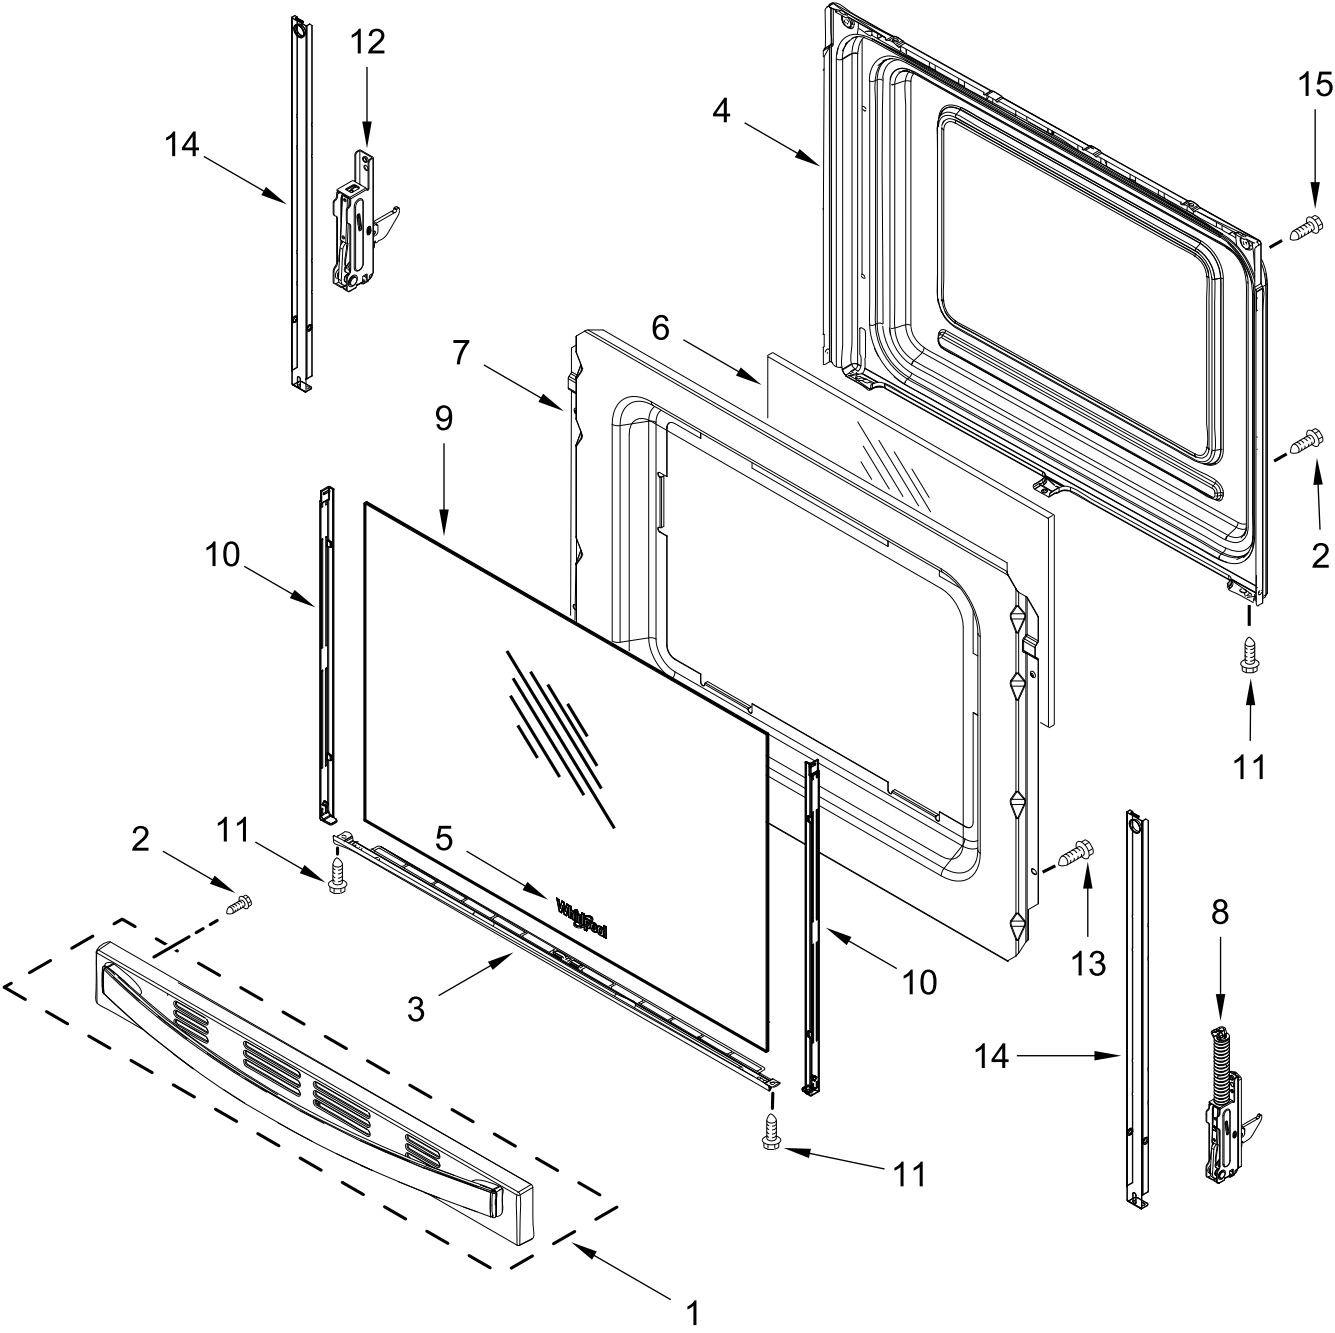




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	7	W11380221	Retainer, Insulation	11	W10327235	Screw
	W11353052	Black	8	W10299225	Hinge, Active	12	W10299227	Hinge, Door (Passive)
	W11353053	White	9		Glass Assembly, Outer Door	13	W10031780	Screw
2	W10465158	Screw		W11624777	Black	14	W11379944	Strap, Door
3		Trim, Lower Door		W11624778	White	15	W10200660	Screw
	W11444043	Black	10		Trim, Side			
	W11444042	White		W10746436	Black (Left)			
4	9761344	Liner, Door		W10746435	Black (Right)			
5	W10884775	Badge		8523172	White (Left)			
6	W11367326	Glass, Inner		8523166	White (Right)			

# DRAWER PARTS

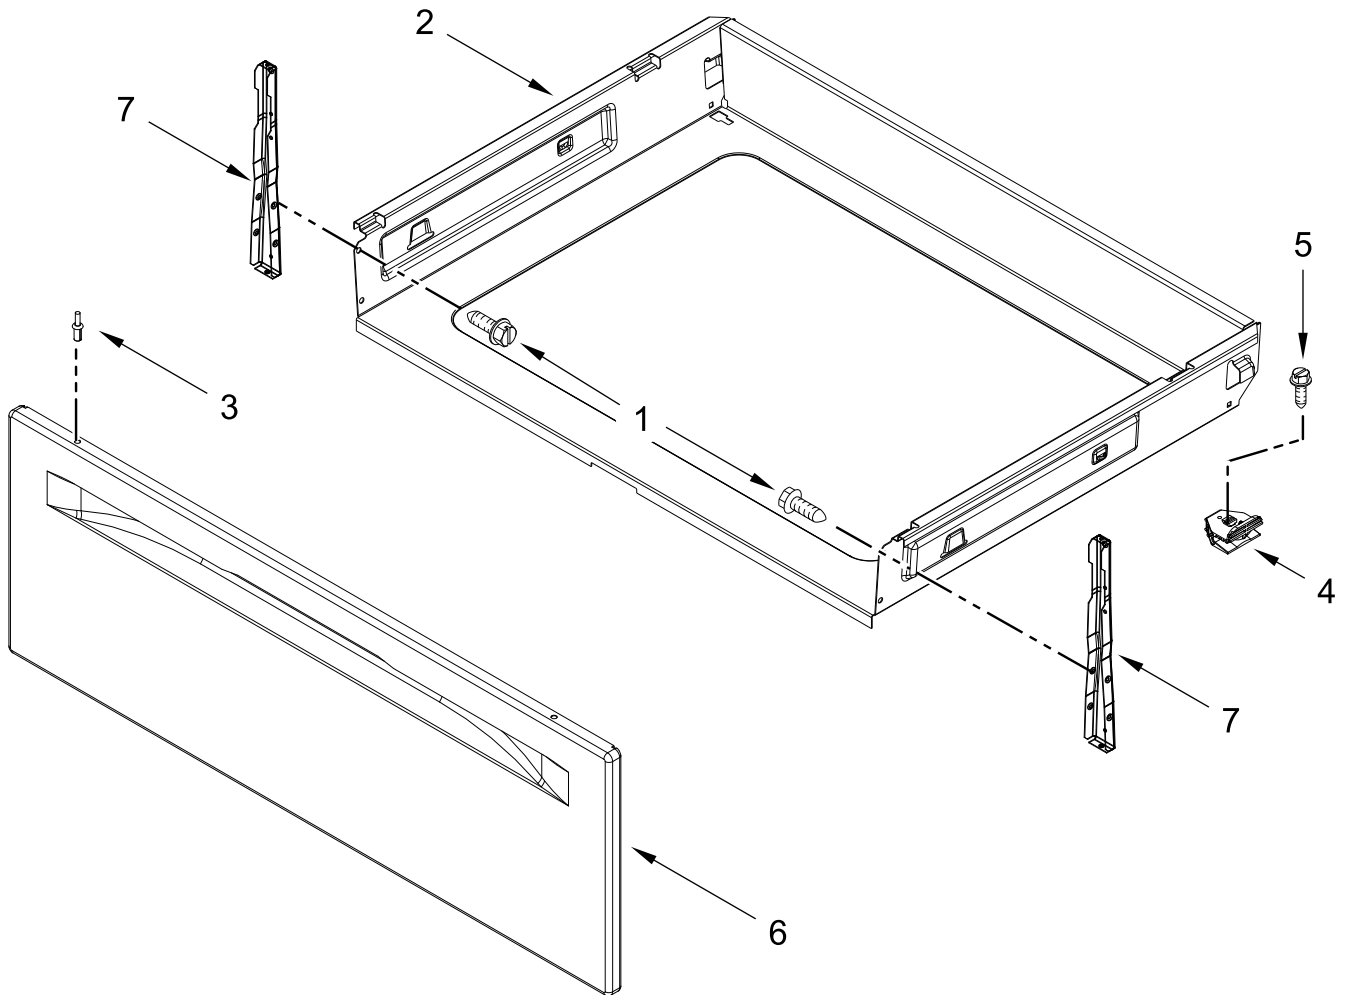

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2	W10688022	Drawer, Storage
3		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Panel, Drawer Front
	W11123900	Black
	W11123901	White
7	W10462912	Bracket, Mounting Drawer

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting