




**GAS RANGE**

**MODELS:**

MGS8800PZ0 (Stainless)


# COOKTOP PARTS

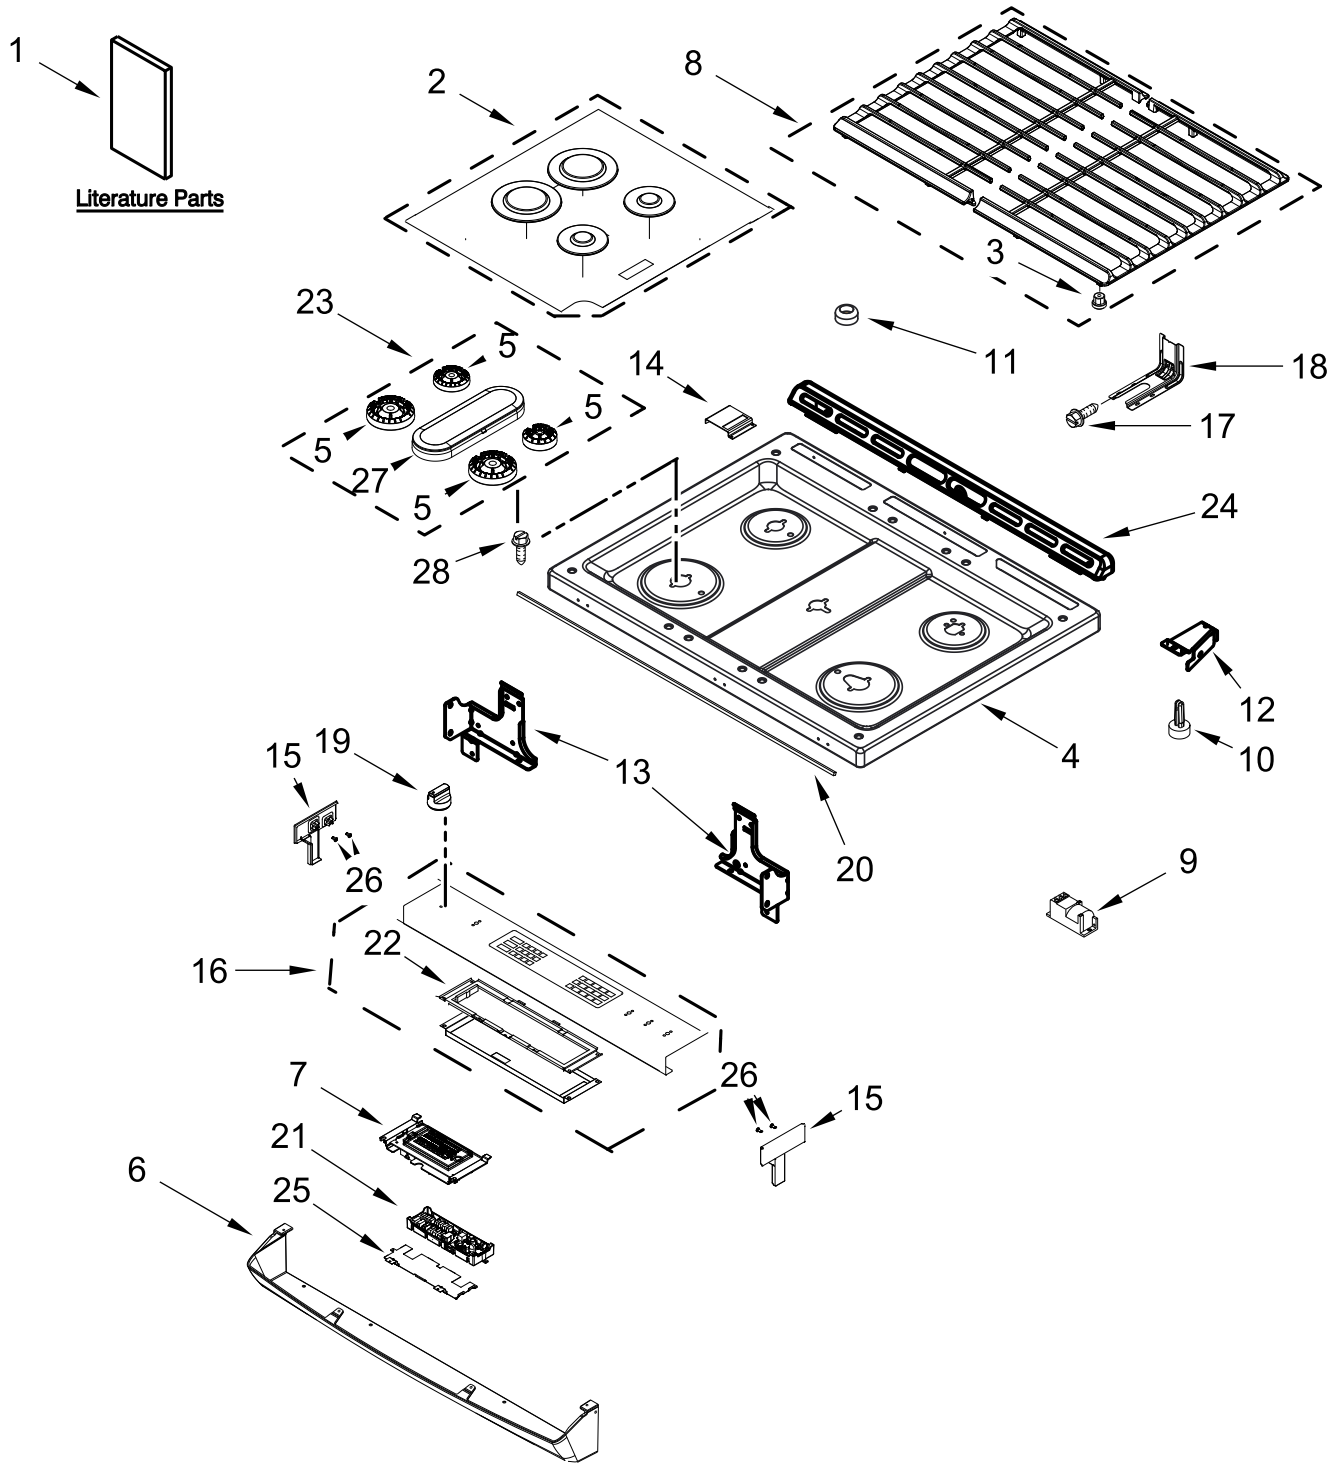

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W10475149	Module, Spark	20	W11512127	Gasket, Console and Cooktop
	W11627729	Owners Manual		W10457998	Module, Spark (0 plus 2)	21	W11626845	Control, Electronic
	W11635379	Tech Sheet				22	W10557780	Bracket, Control
	W11627731	Quick Start Guide	10	8016P022-60	Glide, Main Top	23	W11367105	Burner Kit (Set of 5)
2		Kit, Burner Cap	11	W10854253	Bumper	24		Trim, Vent
	W11367440	Black (Set of 3)	12	W10162253	Brace, Corner (Left)		W10577781	Black
3	W10465081	Grate, Bumper		W10162252	Brace, Corner (Right)	25	W10558372	Bracket, Control
4		Cooktop	13	W11563529	Bracket,Support (Left)	26	9780274	Screw
	W11341028	Black		W11563527	Bracket, Support (Right)	27	W11357364	Spreader, Flame (Fish)
5	W11348511	Flame Spreader, Stack	14	W11158783	Shield, Keypad	28	W10673618	Screw
		(Left Front)	15	W10557751	Stainless (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11352197	Flame Spreader (Left Rear)		W10557754	Stainless (Right)		W11458864	Harness, Main
	W11352195	Flame Spreader (Right Rear)		W10598048	Bracket, Console (Center)		W10754419	Harness, Bake and Broil
	W11352193	Flame Spreader (Right Front)	16		Assembly, Console		3196896	Clip, Wire
6		Panel, Lower Console		W11562888	Stainless		W10575120	Harness, Keypad
	W10565662	Stainless	17	7101P485-60	Screw, Anti-Tip Kit		W10598169	Harness, Display
7	W10759326	Display, Assembly	18	W11379947	Bracket, Anti-Tip		W10580229	Wire, Ground
8		Kit, Grate	19		Knob		313438	Clip, Harness
	W10432535	Black		W11617406	Stainless			


# CHASSIS PARTS

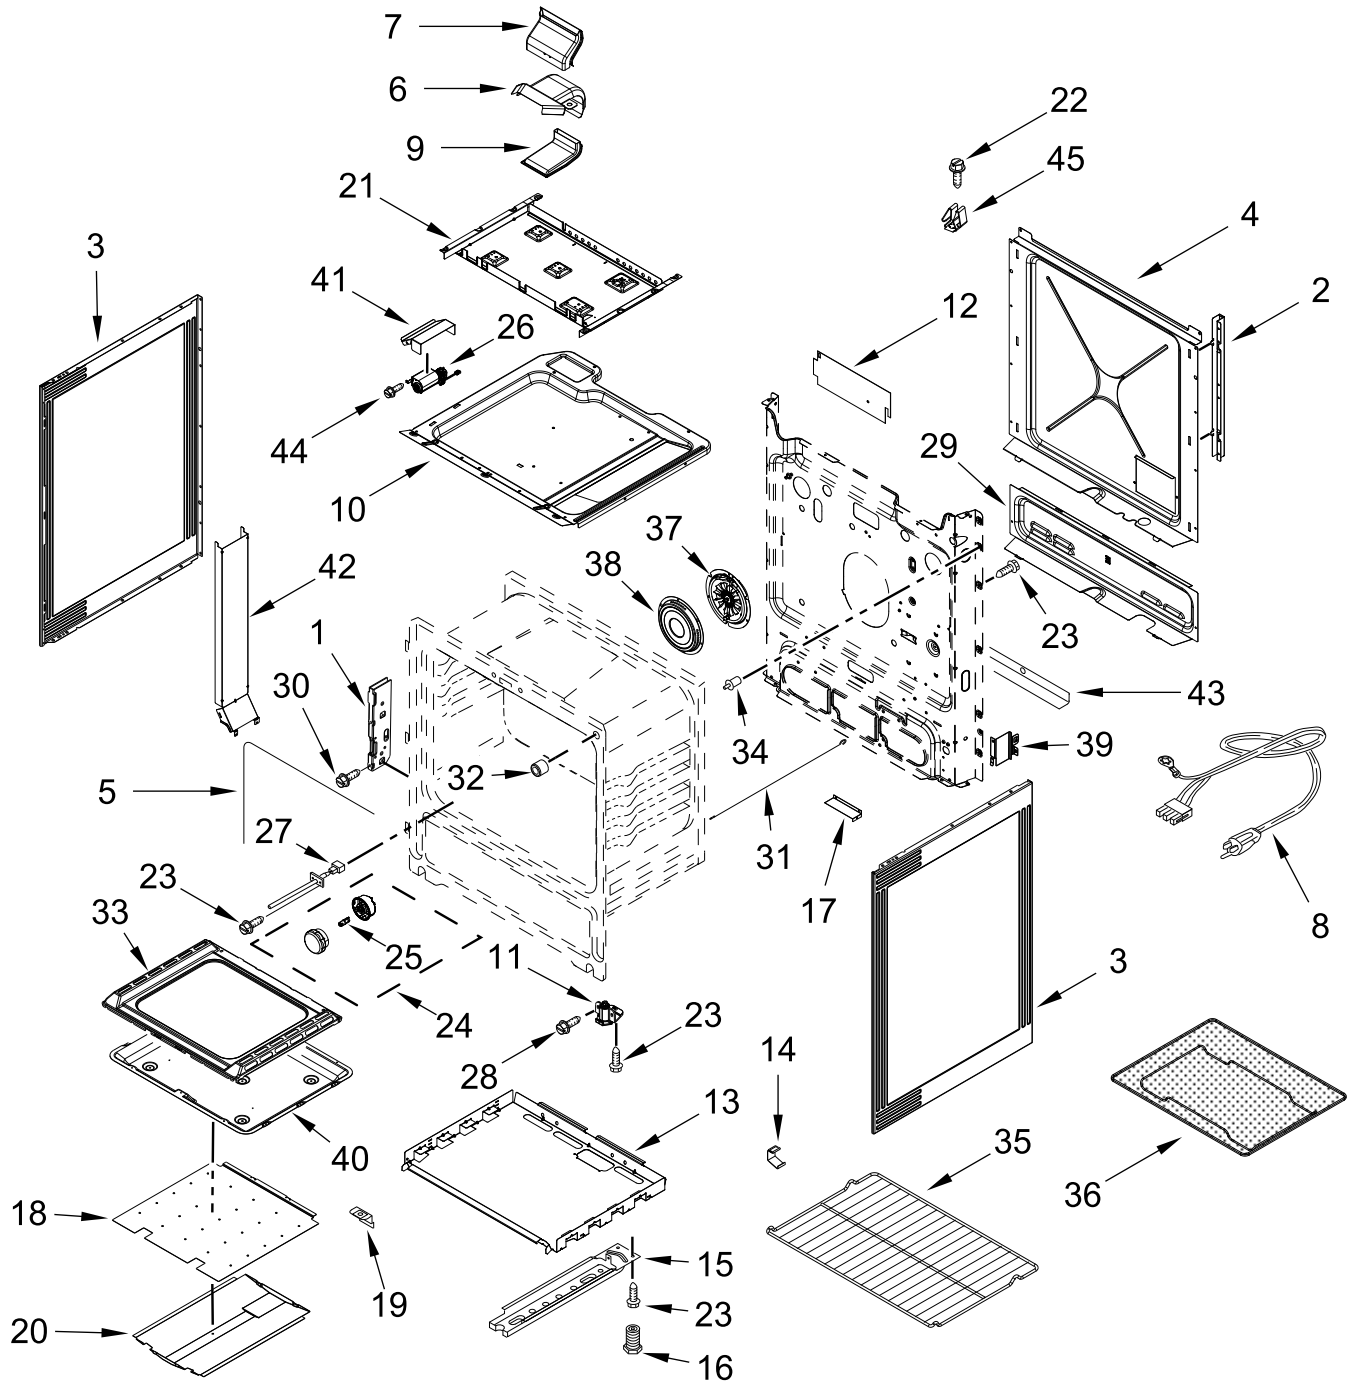

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	W11206138	Guard, Splash	37	W11353926	Convection Assembly
2	W10162241	Channel, Rear	18	W10323077	Diffuser, Flame	38	W10346154	Cover, Convection
3		Panel, Side	19	W10035900	Support, Oven Bottom	39	W10273002	Bracket, Oven Support
	W10162245	Black	20	3601P356-45	Baffle, Bake Burner	40	W11379356	Pan, Bake
4	W11379354	Cover, Back	21	W11320442	Gas Box Burner	41	W10162255	Duct, Cover
5	W11491752	Gasket, Door	22	W10516115	Screw	42	W10162254	Duct, Cooling
6	W10162257	Duct, Cooktop	23	3196178	Screw	43	W10435470	Brace, Main Back
7	W10614920	Assembly, Flue	24	W11544377	Light Assembly	44	W10067840	Screw
8	W10910642	Cord, Power	25	W10571723	Bulb, Halogen 40 Watts	45	W10645947	Grommet
9	W11040249	Assembly, Flue (Upper)	26	W11467246	Cooling Fan			FOLLOWING PARTS NOT ILLUSTRATED
10	W10289168	Box, Burner SI	27	W10586204	Sensor	W10289173		Insulation, Wrap
11	W10341186	Front Foot Assembly	28	3196169	Screw	W10162240		Insulation, Back
12	W10818358	Shield, Wire	29	W10162249	Cover, Wire	4820F015-59		Insulation, Strap
13	W10541959	Shield, Bake	30	W10031780	Screw	7111P017-60		Clamp, Wire
14	W10137382	Clip, Panel	31	W10273192	Rod, Door Switch	3196520		Clip, Wire
15	W10390008	Base Rail Assembly (Left)	32	9758701	Spacer, Door			
	W10390007	Base Rail Assembly (Right)	33	W10211368	Bottom, Oven			
16	W10058460	Foot, Leveling	34	W11511828	Switch, Door			
			35	W10531060	Rack, Oven			
			36	W11629505	Airfry Basket Kit			


# MANIFOLD PARTS

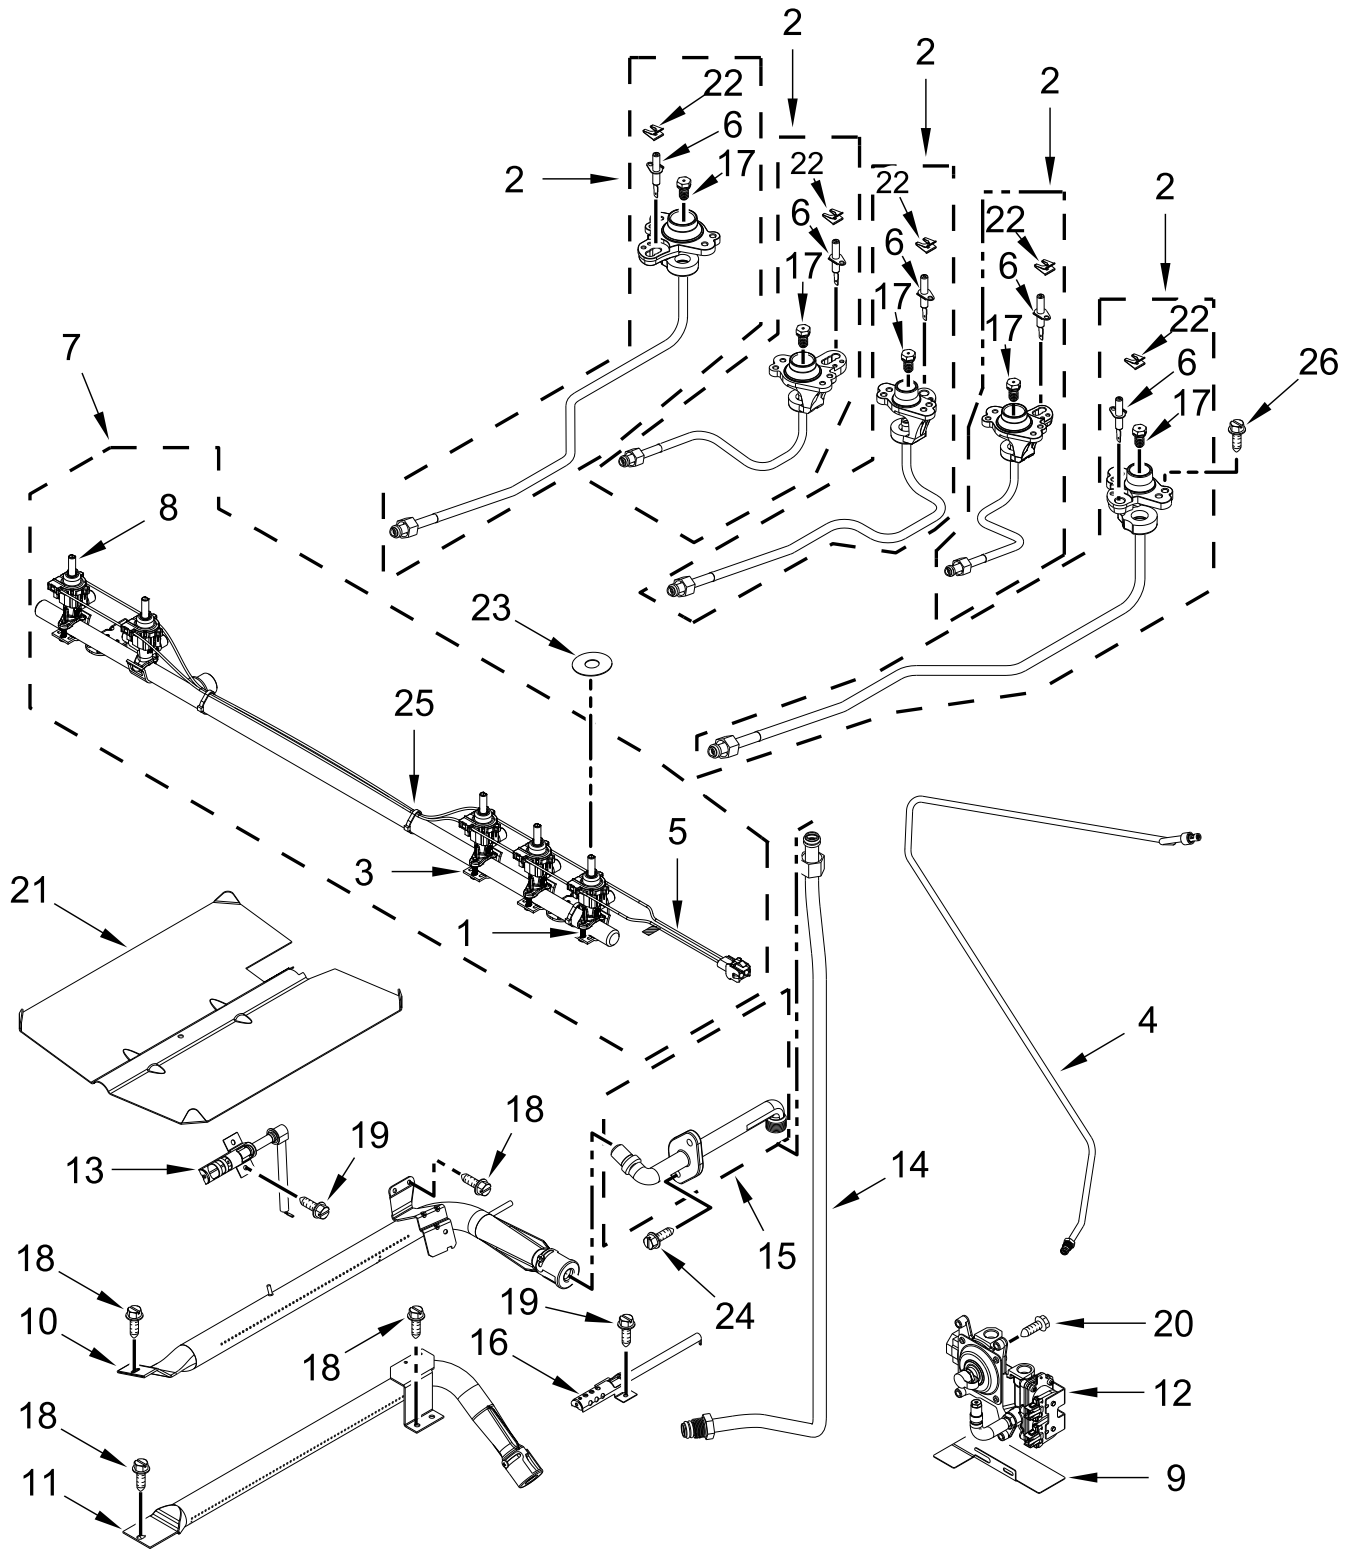

# MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577790	Screw	8	W11593170	Valve, Gas (Dual)	18	3196178	Screw
2	W11186511	Assembly, Orifice (19K)			(Left Front)	19	3196385	Screw
		(Left Front)		W11511819	Valve, Gas	20	3400016	Screw
	W11186508	Orifice, Assembly			(Left Rear)	21	3601P336-45	Baffle, Broil Burner
		(Left Rear)		W11511818	Valve, Gas	22	W10827923	Electrode, Spring
	W11186524	Assembly, Orifice (15K)			(Right Front)	23	W11507167	Seal, Switch Shaft
		(Right Front)		W11511824	Valve, Gas	24	W10362924	Screw
	W11186520	Assembly, Orifice (9.2K)	9	W10224921	Bracket, Aegis	25	W10182767	Tie, Manifold Wire
		(Right Rear)	10	W10439242	Burner, Broiler	26	3196172	Screw
	W11186517	Assembly, Orifice (8K)	11	W10680035	Burner, Bake			FOLLOWING PARTS NOT ILLUSTRATED
		(Center)	12	W10554066	Valve, Regulator		W11397194	LP Conversion Kit
3	W10949105	Bracket, Saddle Valve	13	W10324262	Igniter, Bake		W10566535	LP Conversion Kit (Bake and Broil)
4	W10432252	Tube, Gas Supply	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)		W10400494	Orifice, LP Bake
5	W11596366	Harness, Spark Switch	15	W10583216	Fitting, Broil Burner		W10465078	Orifice, LP Broil
6	W10898387	Electrode, Burner	16	W10333842	Electrode, Broil			
		(Left Front)	17	W10702888	Orifice (18K)			
	W10669525	Electrode			(Left Front)			
		(Left Rear)		W10849719	Orifice (5K)			
	W10669524	Electrode, Burner			(Left Rear)			
		(Right Front and Center)		W10849717	Orifice (15K)			
	W10669523	Electrode, Burner			(Right Front)			
		(Right Rear)		W10849714	Orifice (9.5K)			
7	W11602206	Manifold Assembly			(Right Rear)			
				W10849715	Orifice (8K)			
					(Center)			

# DOOR PARTS

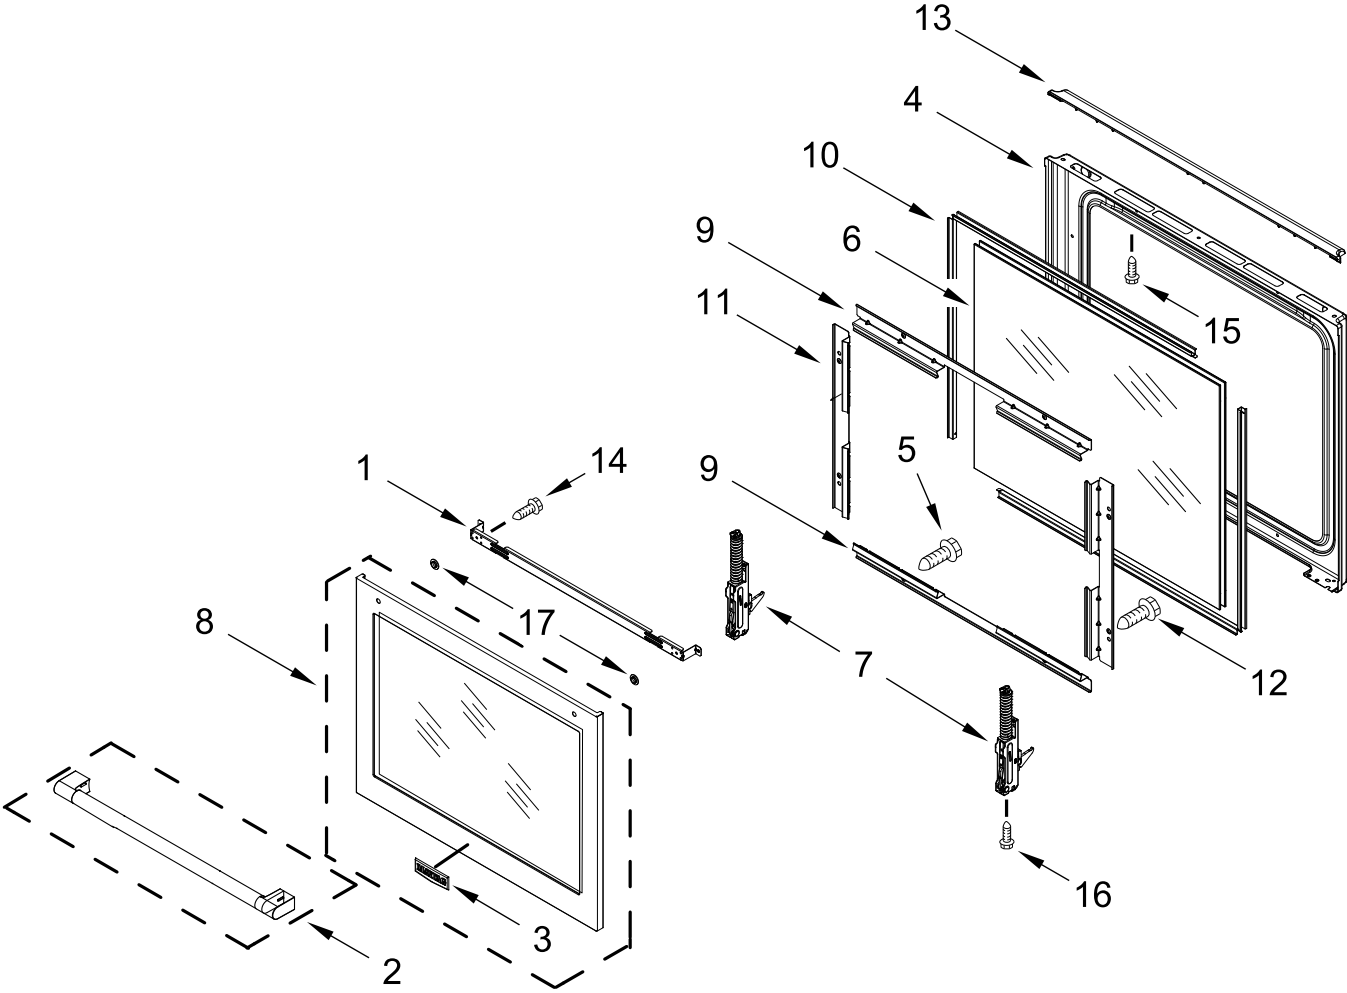




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	7	W11184046	Hinge, Door (Active)	12	W10031780	Screw
2		Assembly, Handle	8		Assembly, Door Skin	13		Liner, Door Scoop
	W11495825	Stainless		W11619008	Stainless		W10613791	Black
3	W11628148	Badge	9	W10813140	Rail, Horizontal Support	14	W11091878	Screw
4	W10826568	Liner, Door				15	9780274	Screw
5	W10031790	Screw	10	W11379948	Glass Spacer	16	W10327235	Screw
6	W11223202	Glass, Inner	11	W10813139	Rail, Vertical Support	17	W10319024	Washer, Door

# DRAWER PARTS

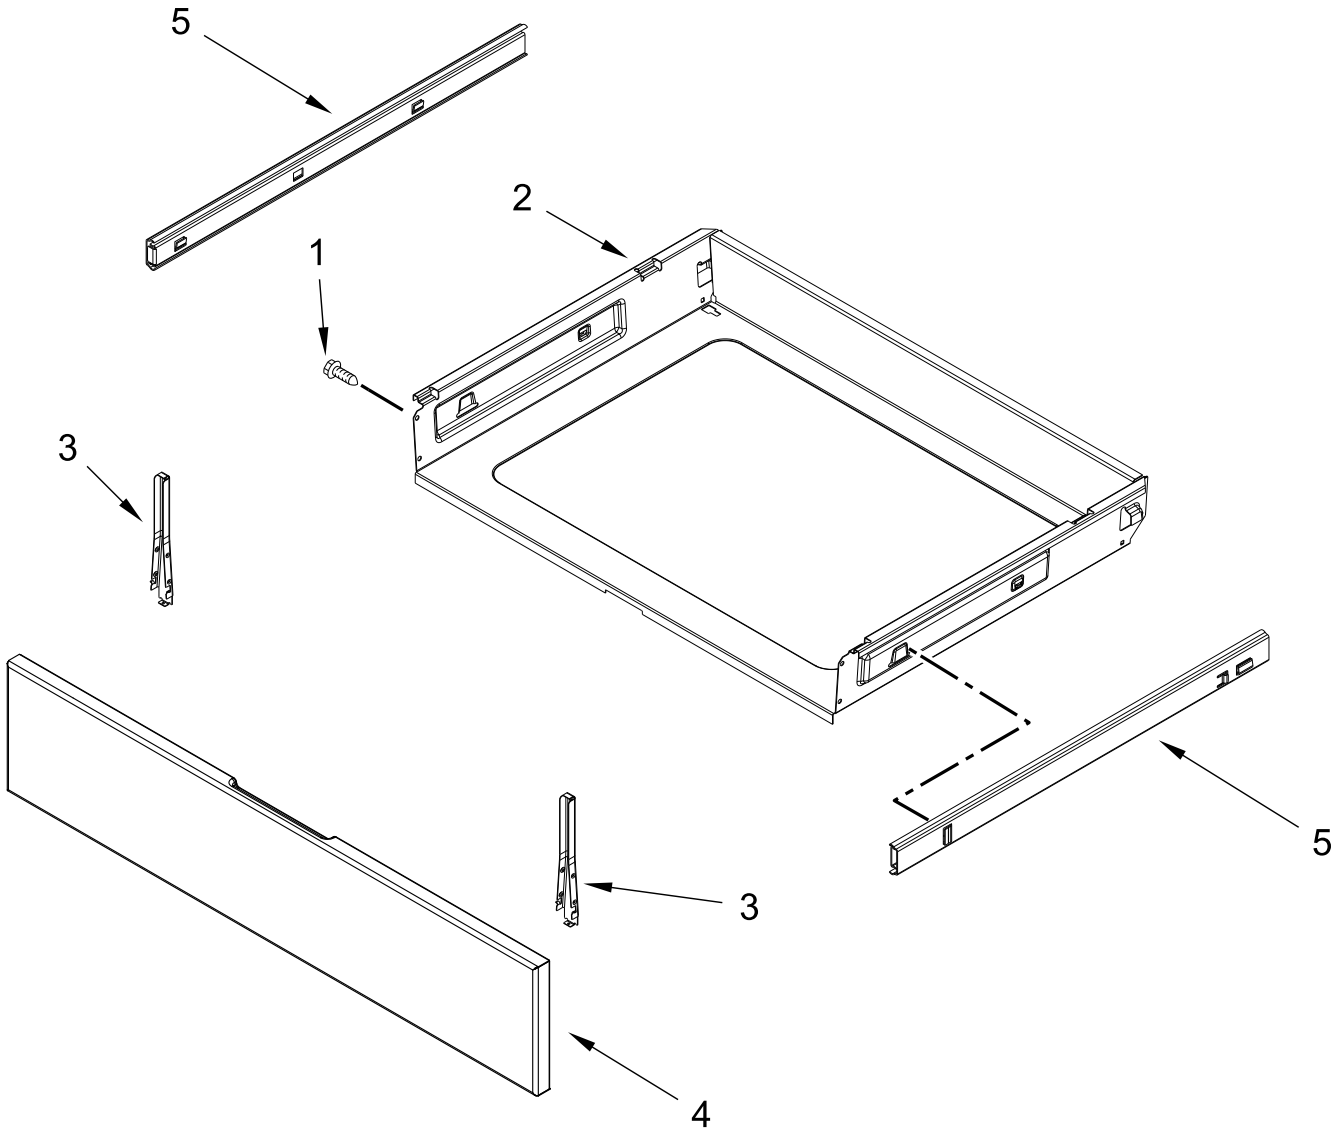

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8533988	Screw
2	W10688022	Drawer, Storage
3	W10318026	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Panel, Drawer Front
	W11449700	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)

# OPTIONAL PARTS (NOT INCLUDED)

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72032	Black
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350930	White
	4392901	Biscuit and Bisque

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	W10432019	Alt Cleaning Kit
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill Assembly, Trim (Includes Blind Threaded Insert)
	W10675026	Black
	W10675027	White
	W10675028	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint