




GAS RANGE

MODELS:

WFGS7530RB0 (Black)
WFGS7530RW0 (White)


COOKTOP PARTS

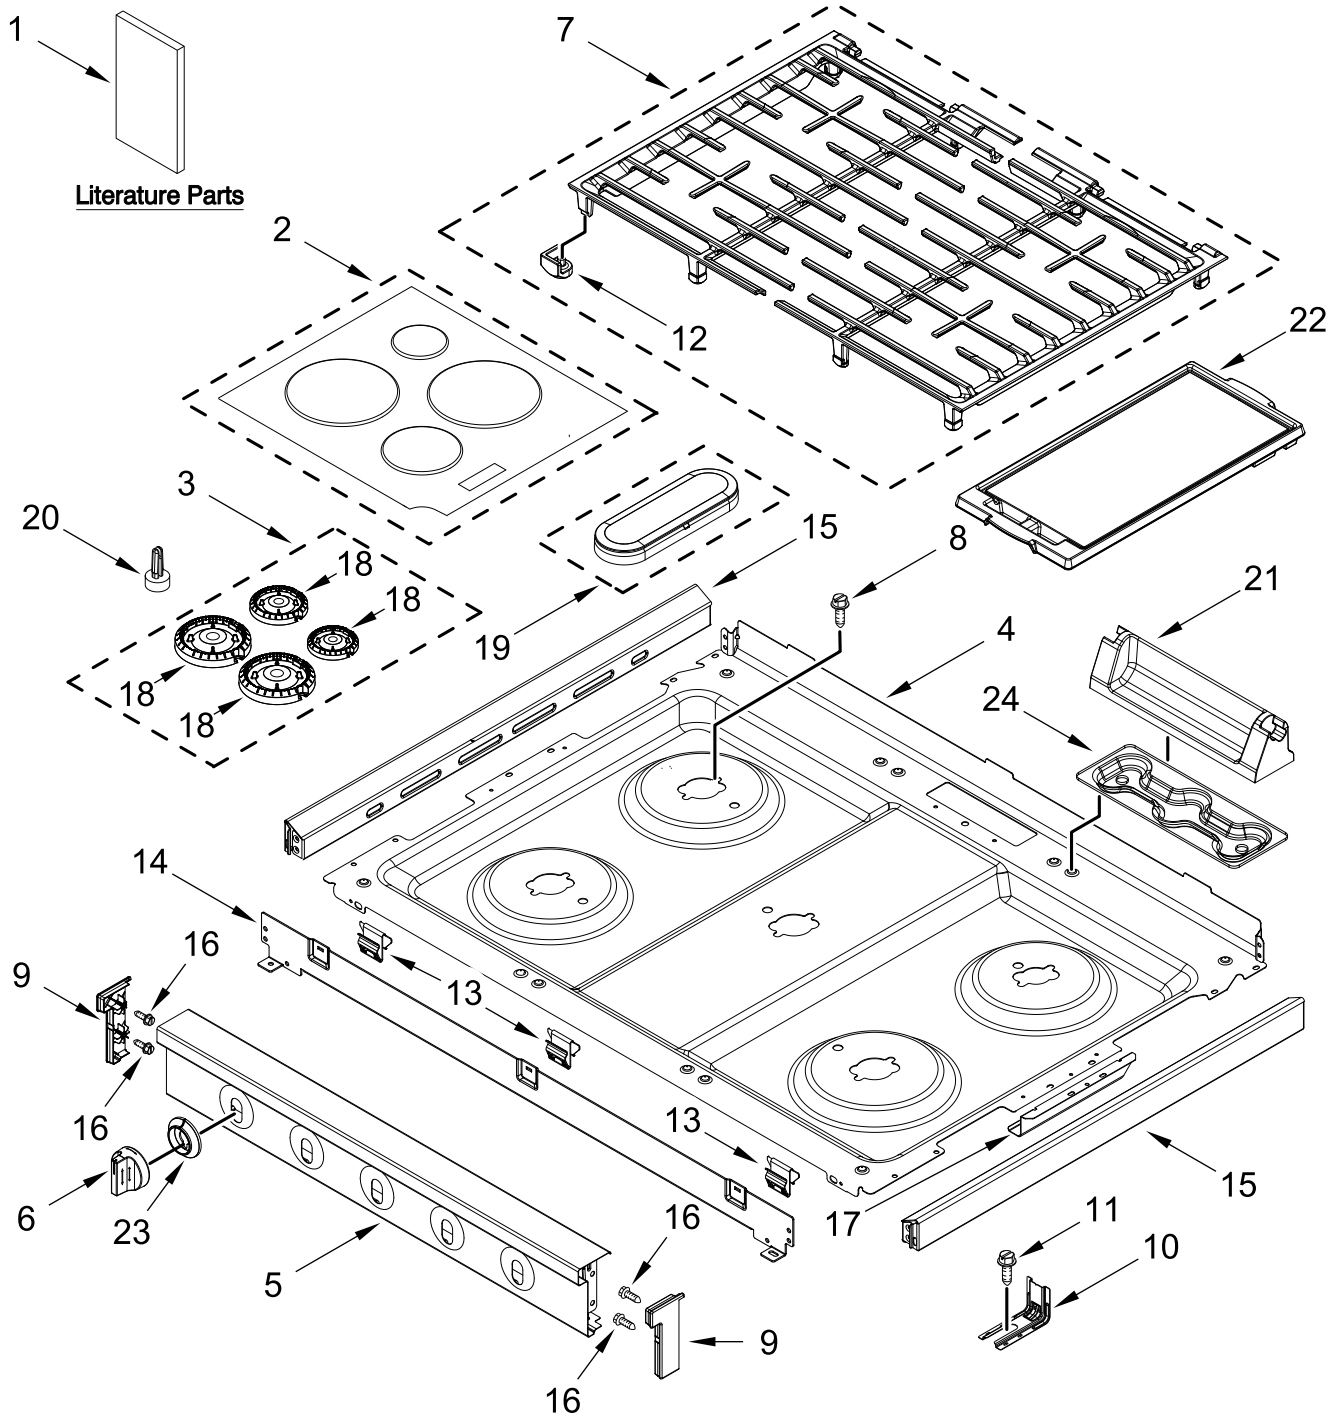

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W11672010	Grate, Bumper	24	W11623712	Hinge, Spacer
	W11642081	Owner's Manual	13	W11637551	Spring, Clip			FOLLOWING PARTS NOT ILLUSTRATED
	W11639170	Tech Sheet	14		Bracket, Front Cooktop		W11334462	Harness, Main
	W11641568	Quick Start Guide		W11295628	Black		W11454086	Harness, Bake
2		Burner Cap Kit	15	W11367962	Frame, Cooktop		W11334489	Harness, Cooktop
	W11498499	Black (Set of 4)	16	9780274	Screw		3196520	Clip, Wire
3	W11600788	Burner Kit (Set of 4)	17	W11366598	Bracket, Spark Module		313438	Clip, Harness
4		Cooktop	18	W11352193	Flame Spreader (Left Front and Right Front)		3196896	Clip, Wire
	W11279795	Black		W11352195	Flame Spreader (Left Rear)			
5		Panel, Manifold		W11352197	Flame Spreader (Right Rear)			
	W11393099	Black	19	W11635774	Oval Flame Spreader Kit			
	W11393098	White			(Center)			
6		Knob, Control	20	8016P022-60	Glide, Main Top			
	W11632048	Black	21		Hinge, Grate (Not Serviced)			
	W11632047	White	22	W11640437	Griddle, Cooktop			
7		Grate Kit	23		Bezel			
	W11622335	Black (Set of 2)		W11632250	Black			
8	W10673618	Screw		W11632251	White			
9		Panel, Manifold End Cap						
	W11361195	Black (Left)						
	W11361200	Black (Right)						
	W11361204	White (Left)						
	W11361202	White (Right)						
10	W11379945	Bracket, Anti-Tip						
11	7101P485-60	Screw, Anti-Tip Kit						


CONTROL PANEL PARTS

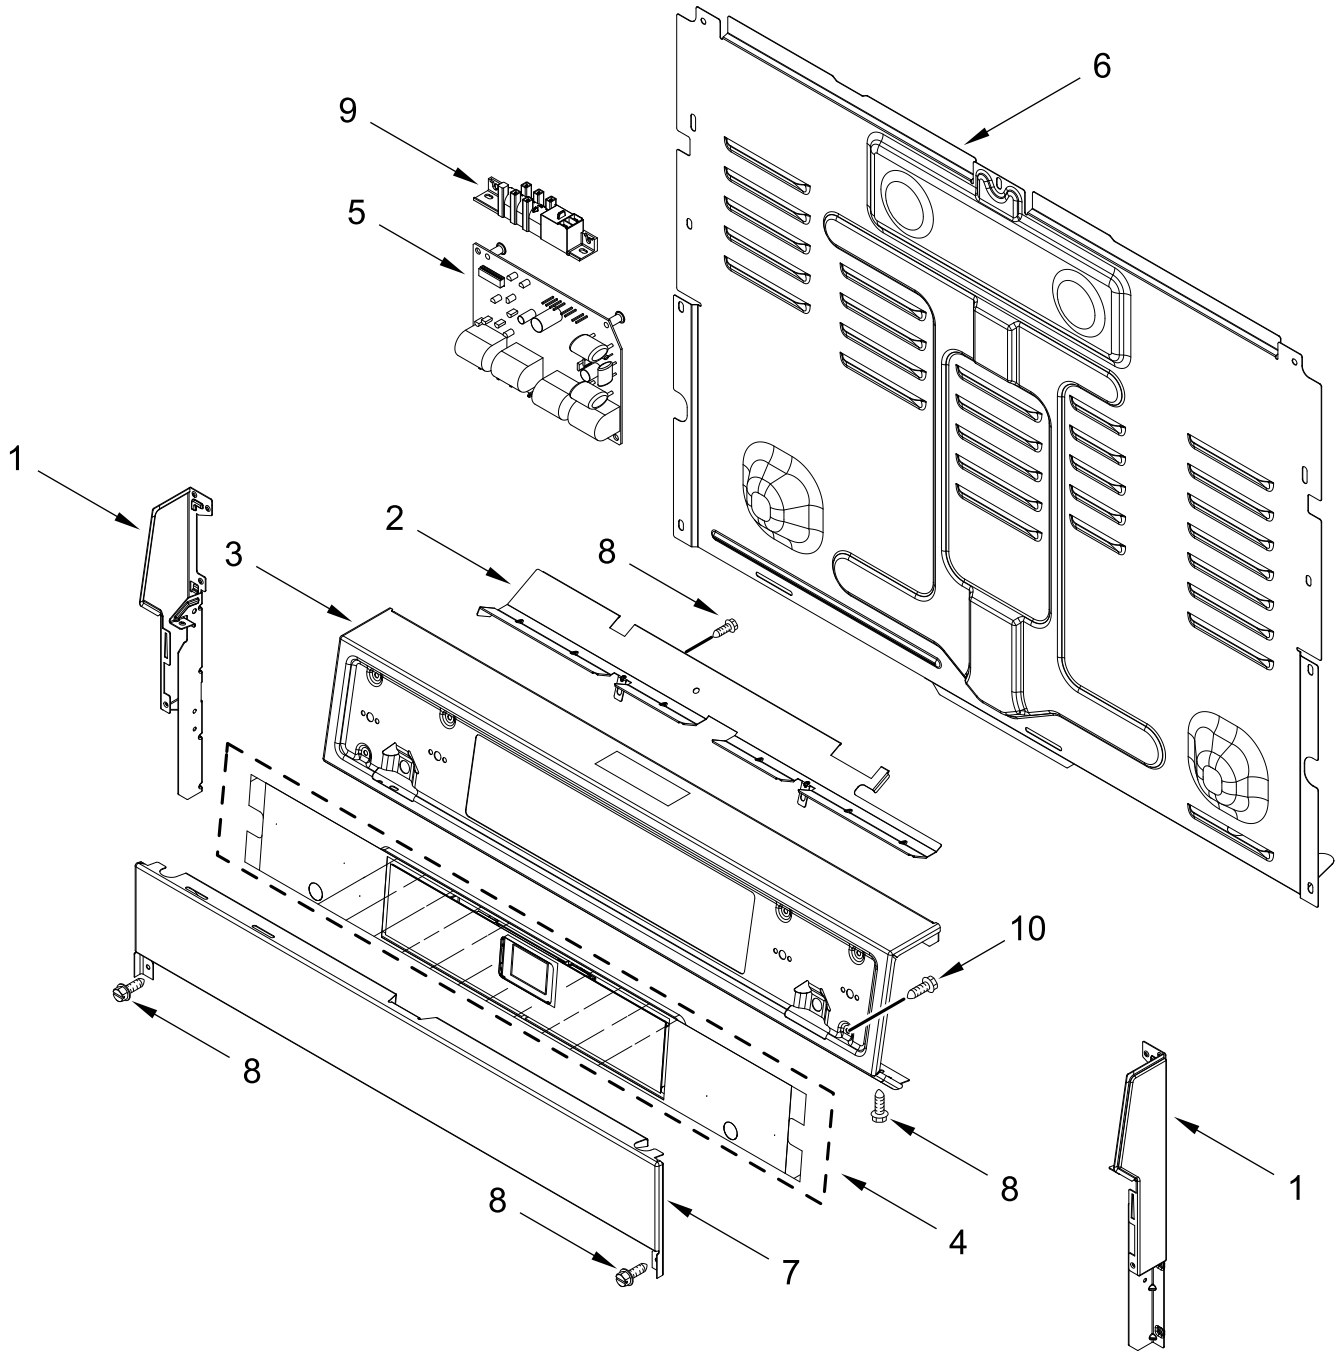

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W11400084	User Interface Assembly	9	W11350452	Spark Module
	W11625423	Black (Left)				10	3196160	Screw
	W11625420	Black (Right)	5	W10818365	Module, Spark DSI			
	W11625422	White (Left)	6	W11393669	Cover, Upper Rear			
	W11625418	White (Right)	7		Panel, Lower			
2	W11363806	Shield, Heat		W11625443	Black			
3		Panel, Control		W11625439	White			
	W11385176	Black	8	3196169	Screw			
	W11371987	White						


MANIFOLD PARTS

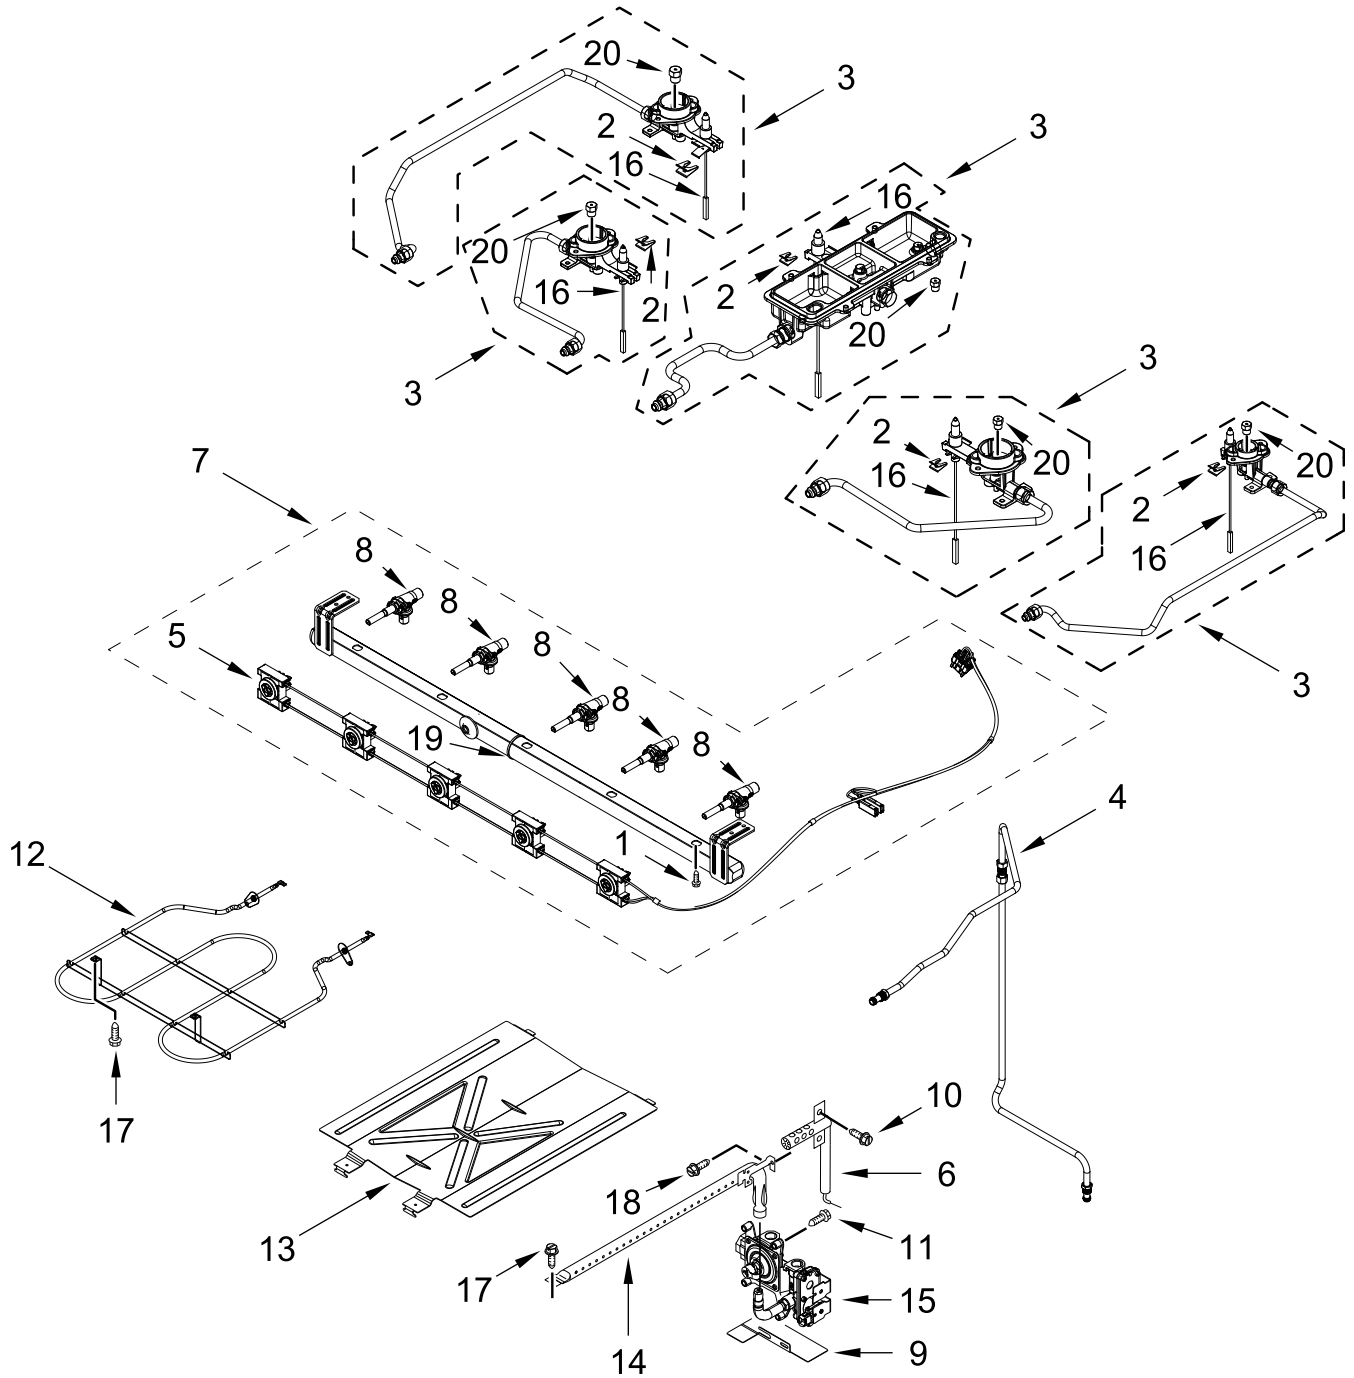

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11402213	Screw	5	W11637977	Harness, Igniter (Includes Switches)	14	9758078	Burner, Bake
2	W10827923	Electrode, Spring	6	W11450459	Electrode, Bake	15	W10818355	Regulator
3	W11300870	Orifice Holder Assembly (18K) (Left Front)	7	W11279816	Manifold Assembly	16	W11428831	Electrode (Left Front, Left Rear)
	W11300871	Orifice Holder Assembly (10K) (Left Rear)	8	W11279839	Valve, Single (Left Front, Right Front)		W11428858	Electrode (Right Front, Right Rear)
	W11300879	Orifice Holder Assembly (18K) (Right Front)		W11279838	Valve, Single (Left Rear)		W11581944	Electrode (Center)
	W11300867	Orifice Holder Assembly (5K) (Right Rear)		W11279837	Valve, Single (Right Rear)	17	W10362924	Screw
	W11634398	Orifice Holder Assembly (12K) (Center)		W11629949	Valve, Single (Center)	18	3196265	Screw
4	W11384792	Tubing (Manifold to Regulator)	9	W10224921	Bracket, Aegis	19	W11402210	Tie, Wire
			10	3196385	Screw	20		Orifice (Not Serviced)
			11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
			12	W10714060	Element, Broiler		W11370714	LP Conversion Kit
			13	W10184491	Spreader, Flame (Oven)		W10838304	Orifice, LP Bake


CHASSIS PARTS

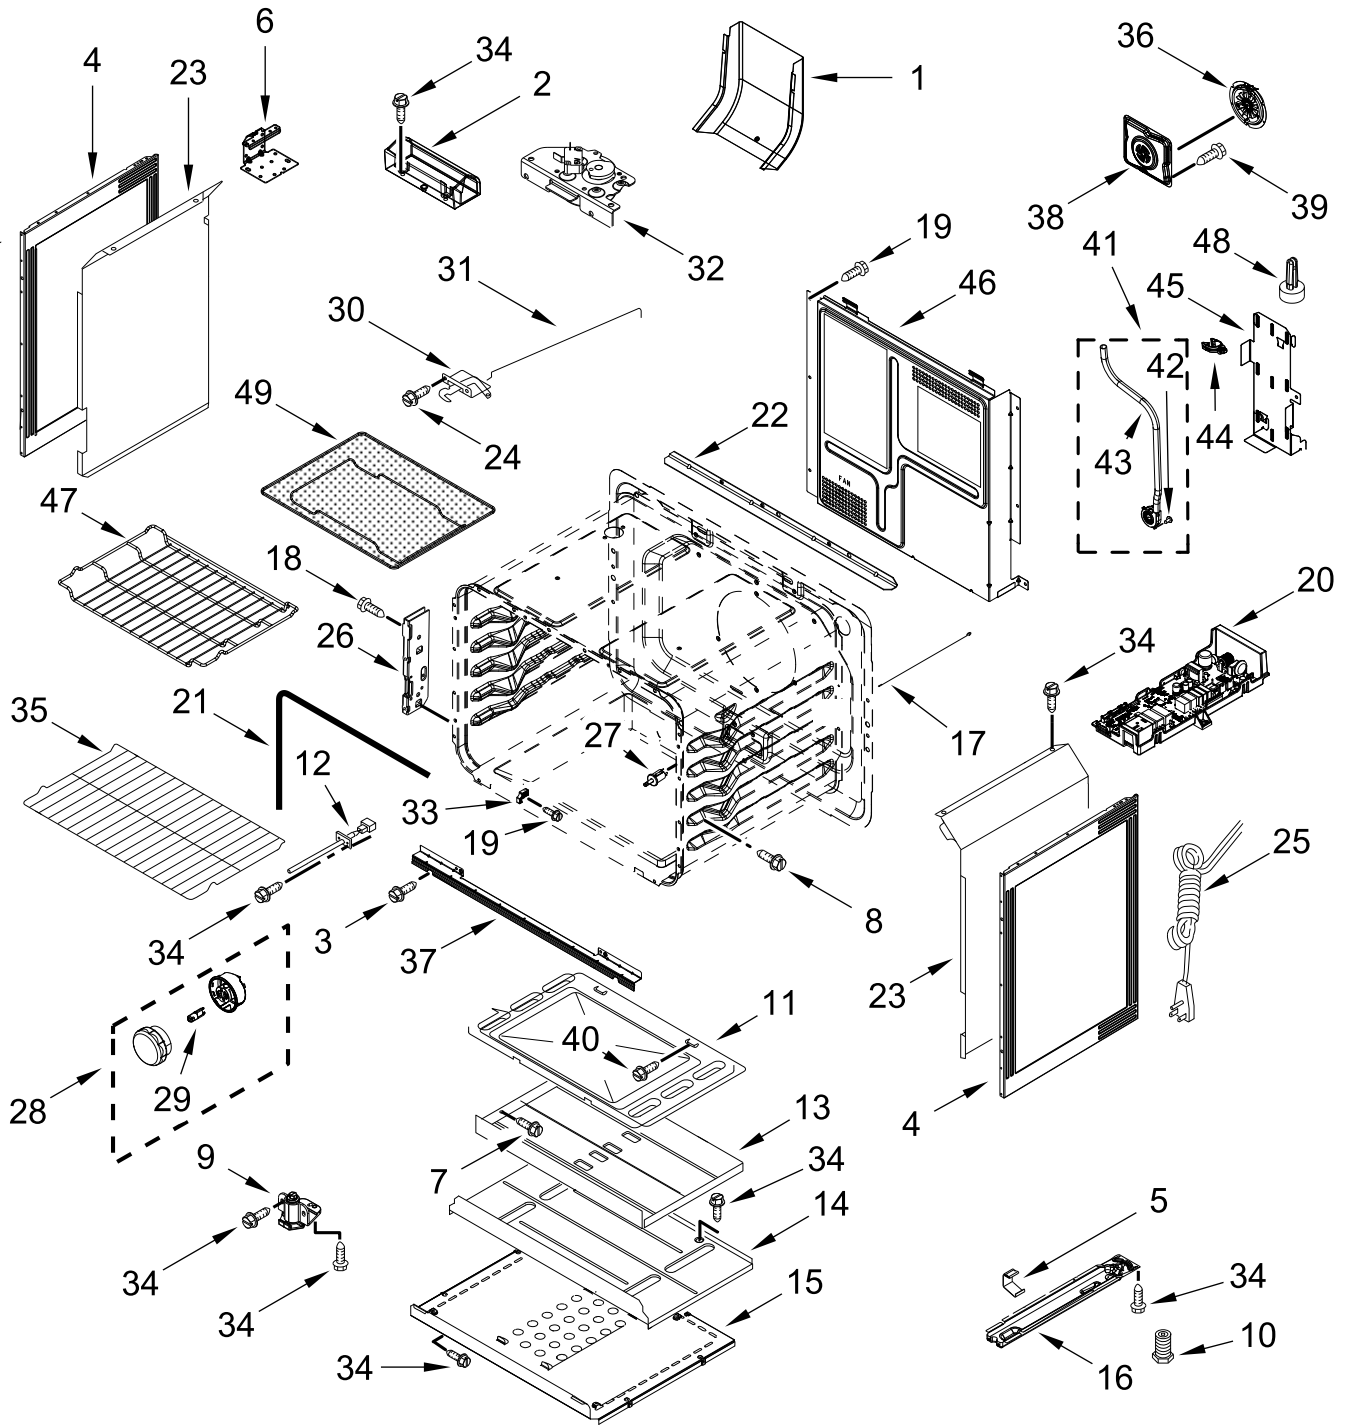

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11366110	Box, Flue	19	3400080	Screw	36	W11644425	Fan, Convection
2	W11279866	Shield, Flue	20	W11734475	Control, Electronic	37	W11464547	Bracket, Front Frame
3	W10067840	Screw	21	W11491751	Seal, Door	38	W11373155	Cover, Conv Fan
4		Panel, Side	22	W10435470	Brace, Main Back	39	W10516115	Screw
	W11445467	Black	23	W11379353	Retainer, Insulation (Left)	40	W10379120	Screw
	W11445761	White		W11379943	Retainer, Insulation (Right)	41	W11625914	Exhaust, Vent
5	W10137382	Clip, Panel	24	3196560	Screw	42	3400701	Screw
6	W11287215	Bracket, Manifold	25	W11661976	Cord, Power	43	W11411632	Blower, Tube
7	W10362924	Screw	26	W10289077	Receiver, Hinge	44	W11642475	Tube, Clamp
8	3196560	Screw	27	W11511828	Switch, Door	45	W11365827	Terminal Block, Cover
9	W10341186	Front Foot Assembly	28	W11634772	Light Assembly	46	W11596199	Cover, Side Fan
10	W10058460	Foot, Leveling	29	W10571723	Bulb, Halogen 40 Watts	47	W11607819	Rack, Oven (Gull-Wing)
11	W11602073	Bottom, Oven	30	9761013	Front Door Latch Assembly	48	8016P022-60	Glide, Main Top
12	W11633068	Sensor	31	W10078370	Rod, Push Latch	49	W11661815	Basket, Airfry
13	8053967	Baffle, Burner Oven	32	W10107820	Rear Door Latch Assembly			FOLLOWING PARTS NOT ILLUSTRATED
14	8053969	Shield, Heat	33	W10674705	Glide, Drawer Front		W10818362	Insulation, Wrap
15	W11640074	Shield, Lower	34	3196178	Screw		W11407376	Insulation, Back
16	W10390008	Base Rail Assembly (Left)	35	W11173792	Rack, Oven			
	W10390007	Base Rail Assembly (Right)						
17	9757239	Rod, Door Switch						
18	W10031780	Screw						

DOOR PARTS

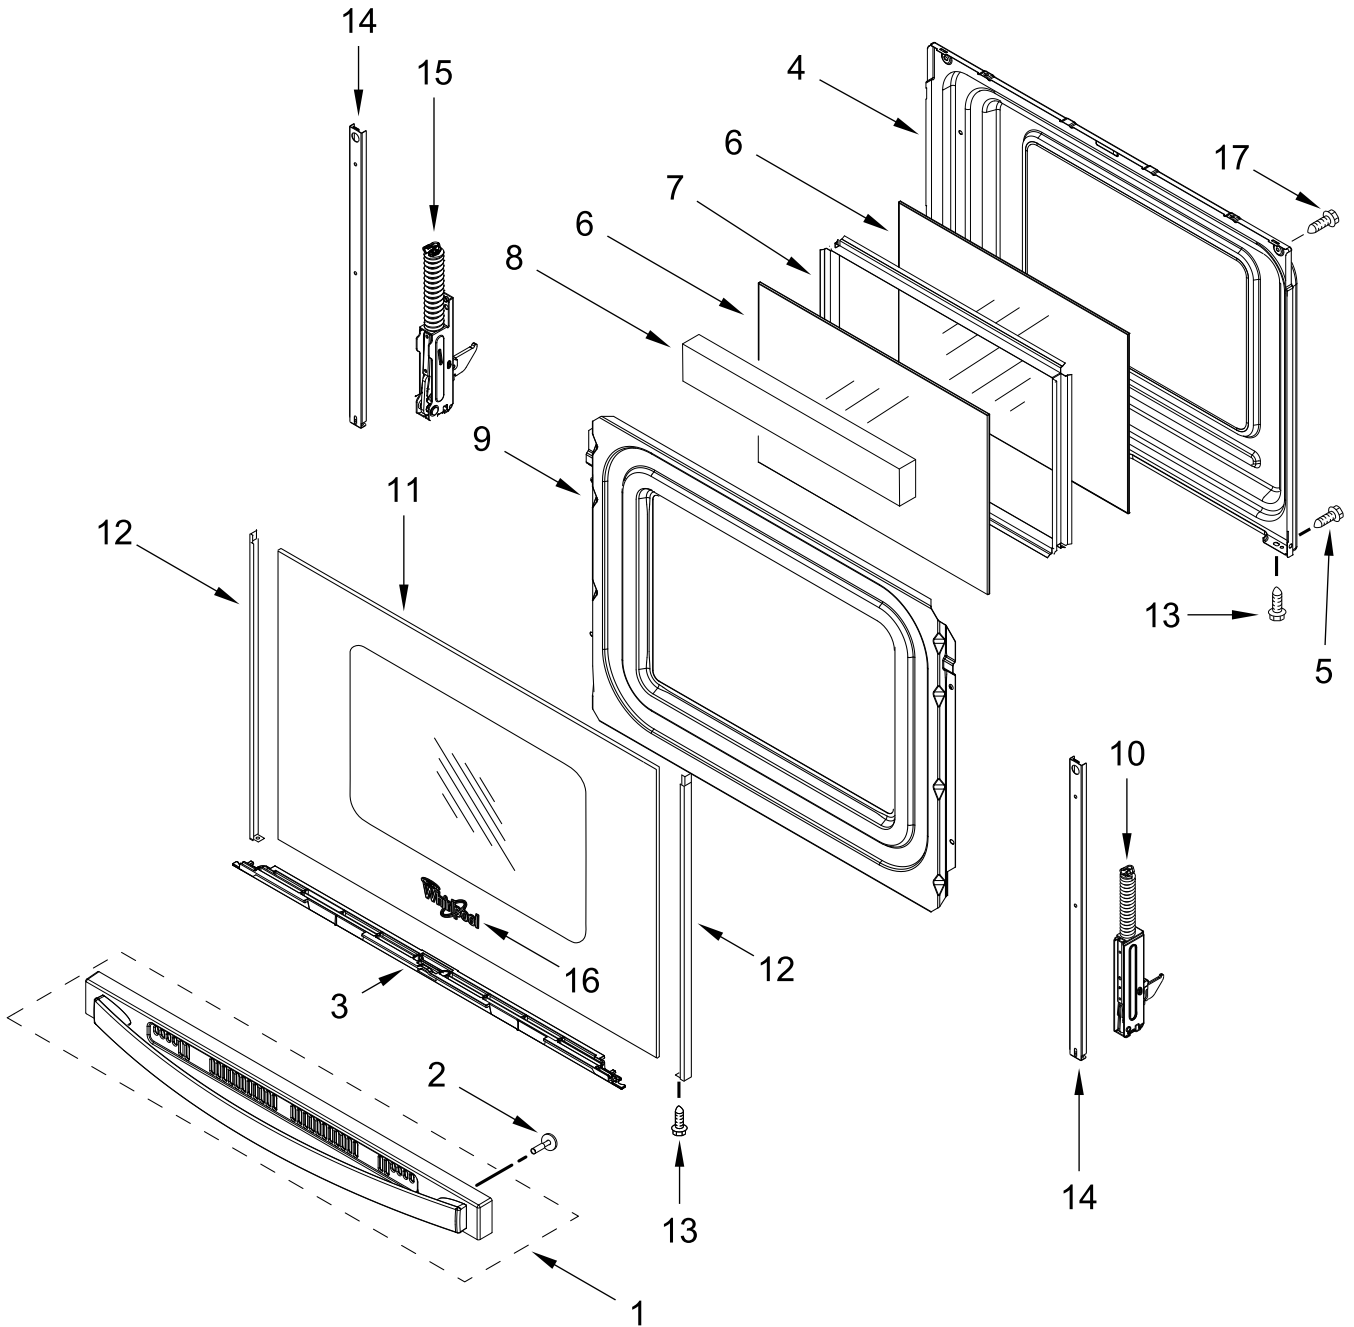


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11353052	Black
	W11353053	White
2	W10465158	Screw
3		Trim, Lower Door
	W11444043	Black
	W11444042	White
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	W11380222	Retainer, Insulation
10	W10388635	Hinge, Door (Active)
11		Glass, Outer Door
	W11729636	Black
	W11729637	White
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523166	White (Right)
	8523172	White (Left)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W11379944	Strap, Door
15	W10440013	Hinge, Door (Active)
16	W10884775	Badge
17	W10200660	Screw

DRAWER PARTS

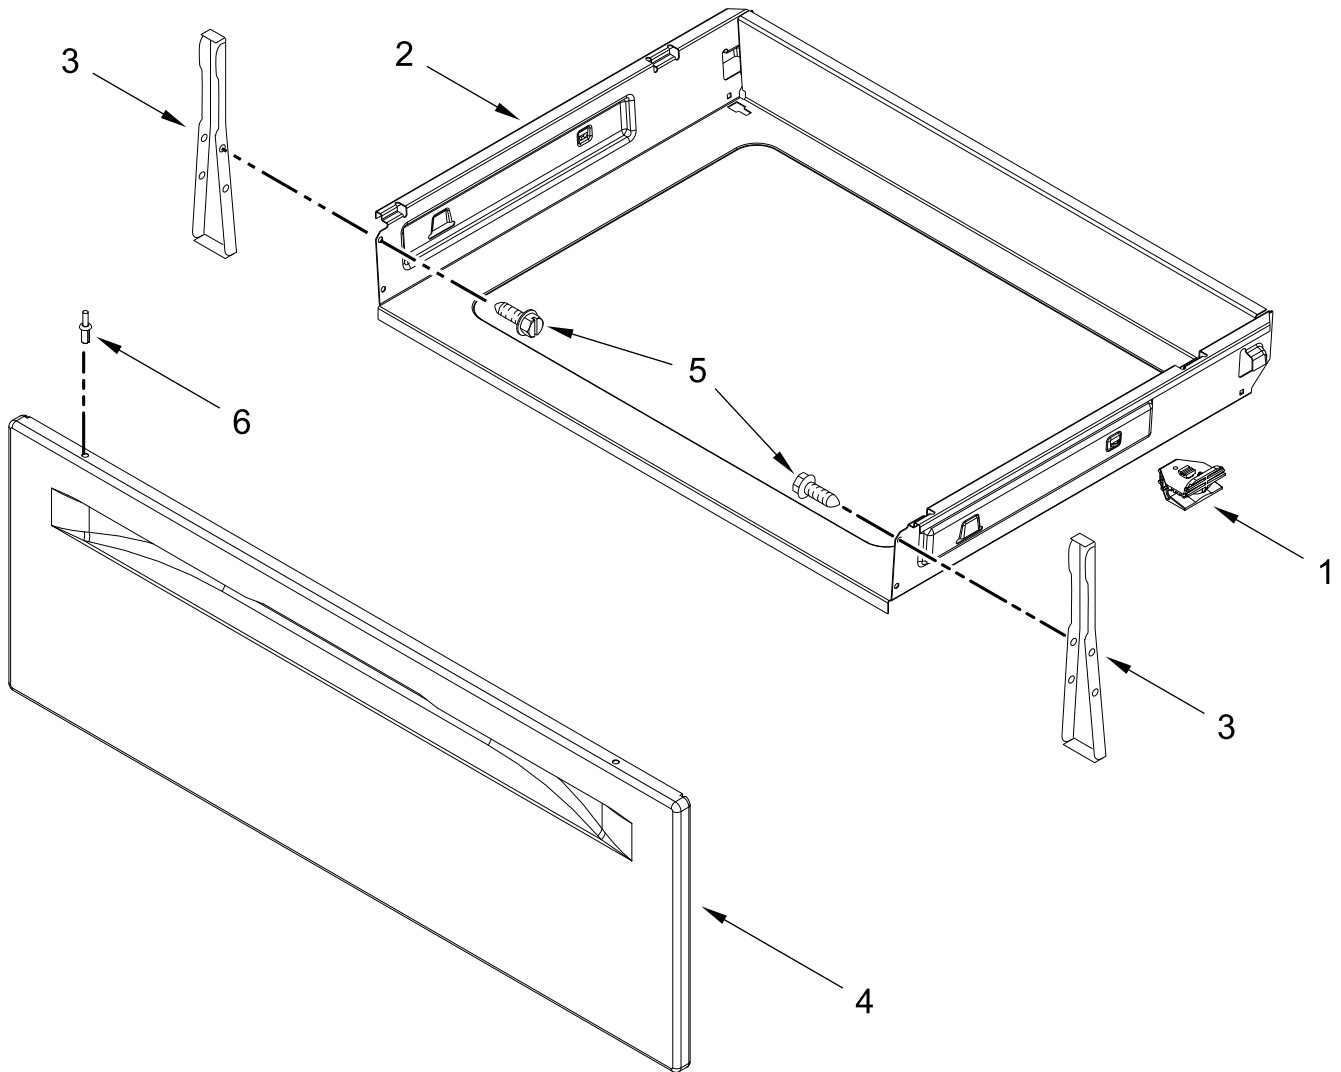

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10674708	Glide, Drawer Rear	4		Panel, Drawer Front	5	3196169	Screw
2	W10688022	Drawer, Storage		W11123976	Black	6		Rivet, Push
3	W10462911	Bracket, Mounting		W11123977	White		3196813	Black
							3196814	White

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	285006	Black
	350930	White
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid