




GAS RANGE
(Fingerprint Resistant)

MODELS:

WEGA25H0HZ6 (Stainless)


COOKTOP PARTS

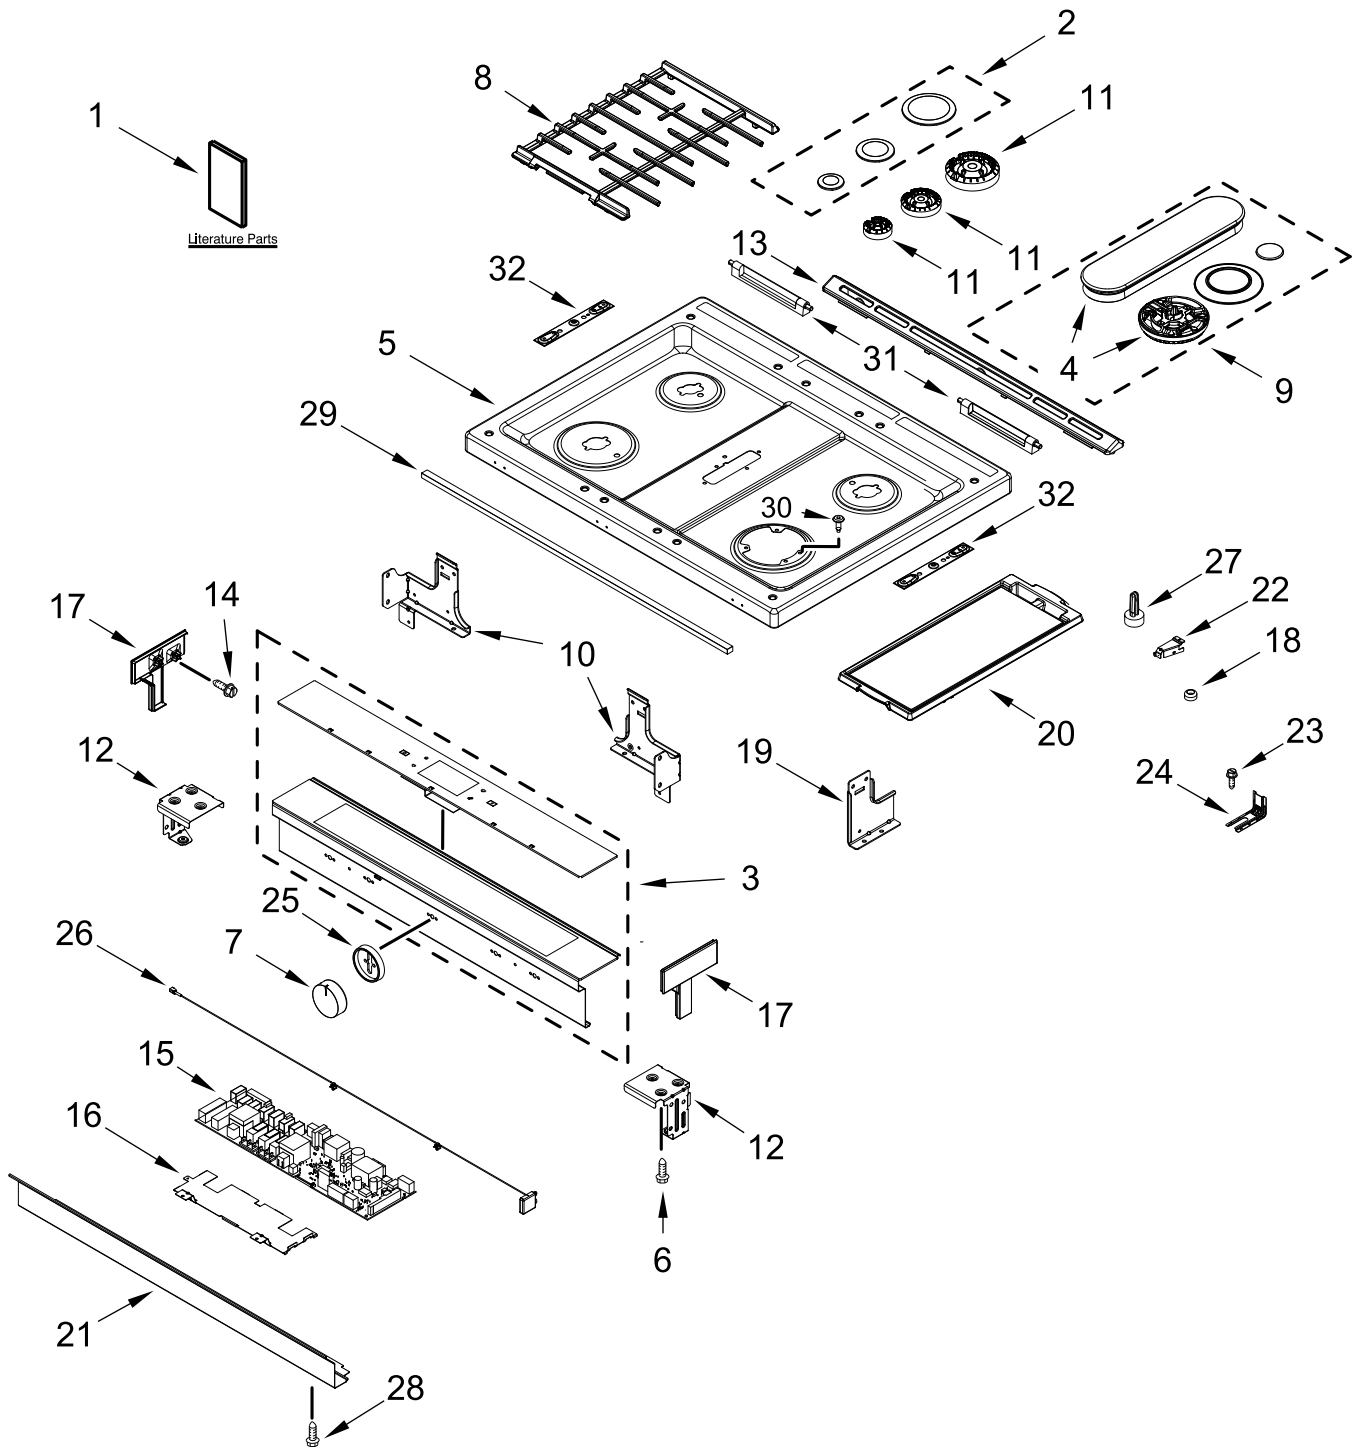

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10867593	Support, Cooktop (Left)	22	W10162253	Brace, Corner (Left)
	W11498994	Owners Manual					W10162252	Brace, Corner (Right)
	W11428052	Quick Start Guide		W10867592	Support, Cooktop (Right)	23	7101P485-60	Screw, Anti-Tip Kit
	W11565459	Tech Sheet	11	W11352193	Flame Spreader (Left Front)	24	W11379947	Bracket, Anti-Tip
2		Caps, Burner (Left Front, Left Rear, Right Rear)		W11352195	Flame Spreader (Left Rear)	25		Bezel
	W11498501	Black (Set of 3)		W11352197	Flame Spreader (Right Rear)		W11108451	Stainless
3		Console		W10828159	Base, Console (Left)	26	W11516200	Antenna
	W11295853	Stainless		W10828160	Base, Console (Right)	27	8016P022-60	Glide, Main Top
4	W10867781	Spreader, Flame (Right Front)	12		Trim, Vent	28	3196178	Screw
	W11357364	Spreader, Flame (Fish)	13	W10577781	Black	29	W10612719	Gasket, Console and Cooktop
		(Center)		9780274	Screw	30	W11103318	Screw
5		Cooktop	14	W11543343	Control, Electronic (Powermax)	31	W10826075	Rear, Hinge-Grate
	W11511787	Black	15			32	W10879790	Grate Hinge Spacer
6	3196160	Screw	16	W10908536	Bracket, Control			FOLLOWING PARTS NOT ILLUSTRATED
7		Knob	17		Endcap		W11456871	Harness, Main
	W11108449	Stainless		W10854356	Stainless (Left)		W10754419	Harness, Bake and Broil
8		Grate Kit (Includes 2 Grates)		W10854360	Stainless (Right)		313438	Clip, Harness
	W11160332	Black	18	W10854253	Bumper		3196520	Clip, Wire
9	W11495472	Spreader, Flame Kit (Right Front and Center)	19	W10867600	Bracket, Console (Center)		7111P017-60	Clamp, Wire
		(Includes Burner Caps)	20	W11043399	Griddle		W10580229	Wire, Ground
			21		Console, Lower Panel		3196896	Clip, Wire
				W10899344	Black			


CHASSIS PARTS

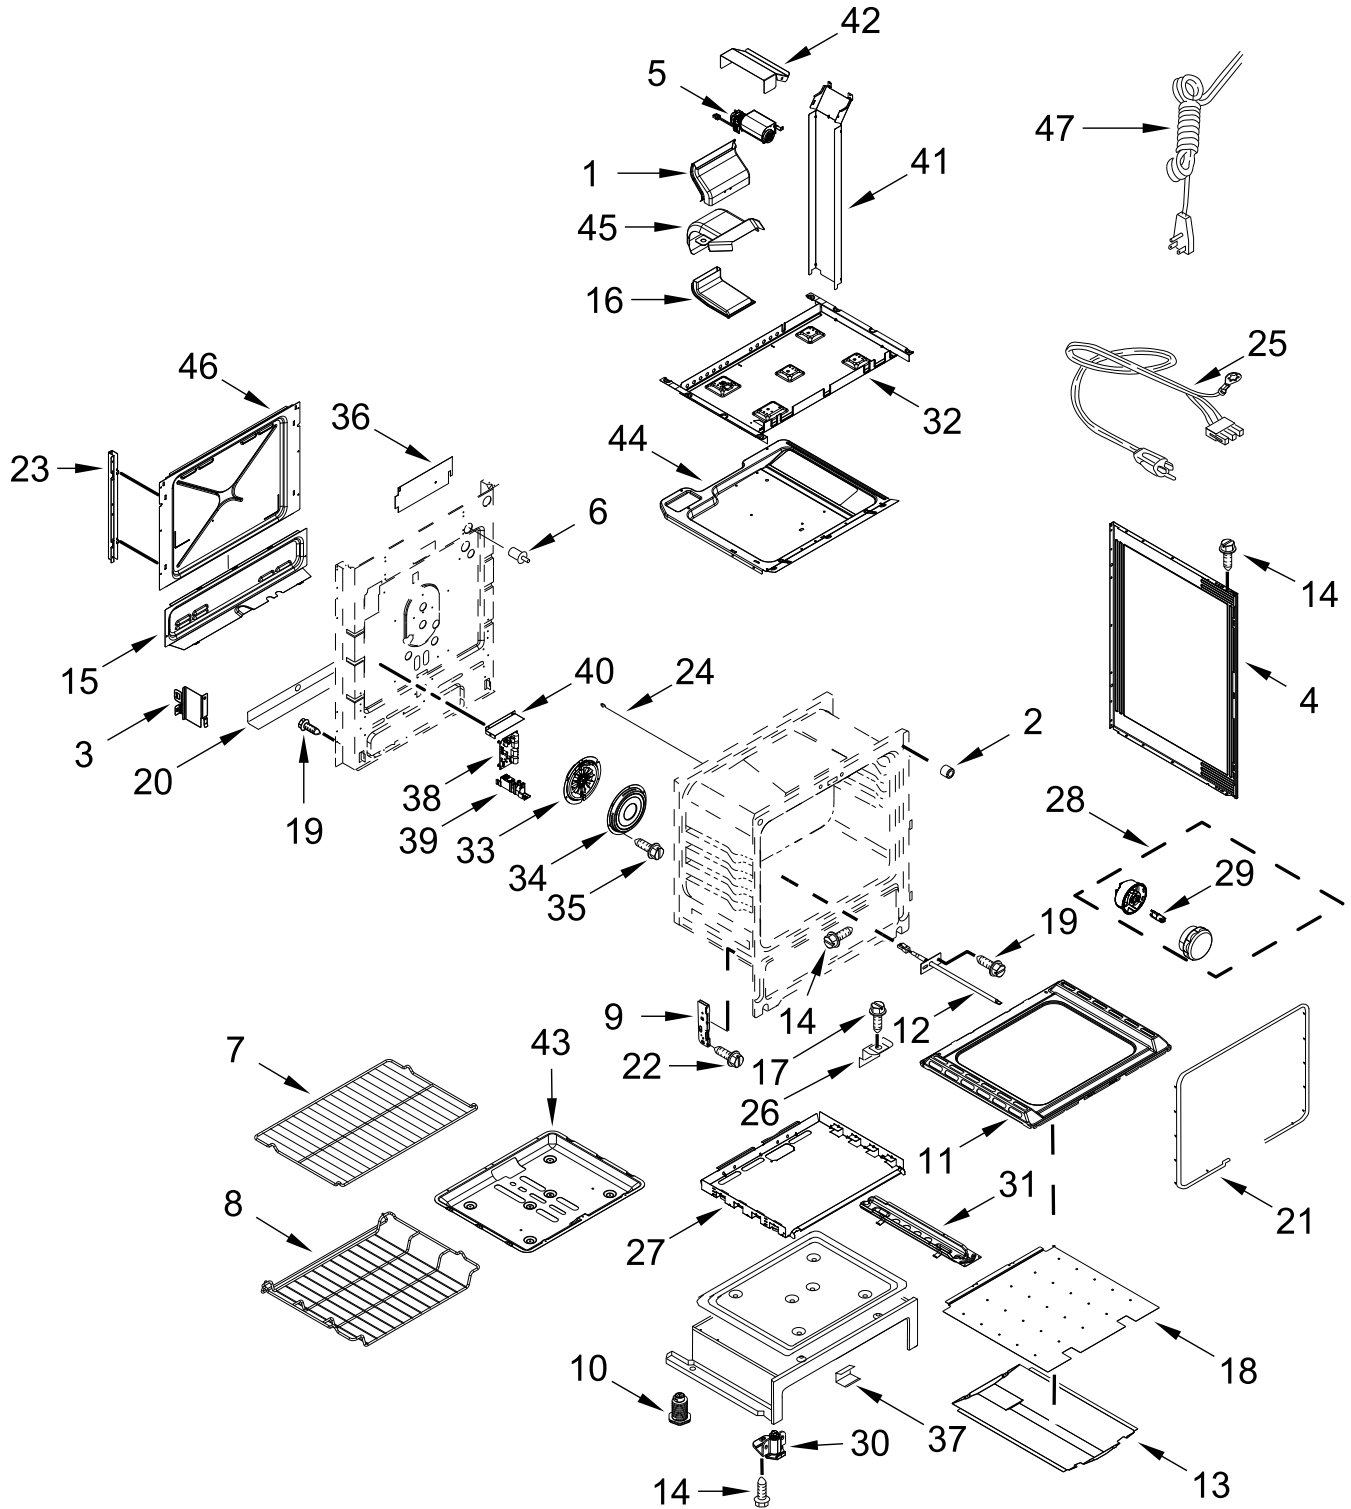

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	21	W11491752	Gasket, Door	39	W11350452	Spark Module
2	9758701	Spacer, Door	22	W10031780	Screw	40	W11206138	Guard, Splash
3	W10273002	Bracket, Oven Support	23	W10162241	Channel, Rear	41	W10162254	Duct, Cooling
4		Panel, Side	24	W10273192	Rod, Door Switch	42	W10162255	Duct, Cover
	W10162245	Black	25	W11456871	Harness, Main	43	W11379356	Pan, Bake
5	W11467246	Cooling Fan	26	W10035900	Support, Oven Bottom	44	W10289168	Box, Burner SI
6	W11511828	Switch, Door	27	W10541959	Shield, Bake	45	W10162257	Duct, Cooktop
7	W10531060	Rack, Oven	28	W11634772	Light Assembly	46	W11379355	Cover, Back
8	W10289145	Rack, Oven (Gull-Wing)	29	W10571723	Bulb, Halogen 40 Watts	47	W10910642	Cord, Power
9	W10289077	Receiver, Hinge	30	W10341186	Front Foot Assembly			FOLLOWING PARTS NOT ILLUSTRATED
10	W10058460	Foot, Leveling	31	W10390008	Base Rail Assembly (Left)	4820F015-59		Insulation, Strap
11	W10211368	Bottom, Oven		W10390007	Base Rail Assembly (Right)	W10289173		Insulation, Wrap
12	W10586204	Sensor				W10162240		Insulation, Back
13	3601P356-45	Baffle, Bake Burner	32	W11216156	Box, Burner	W11504279		Kit, LP 5 Orifice Conversion
14	3196178	Screw	33	W11353926	Convection Assembly	W10566535		LP Conversion Kit (Bake and Broil)
15	W10162249	Cover, Wire	34	W10346154	Cover, Convection	W10400494		Orifice, LP Bake
16	W11040249	Assembly, Flue (Upper)	35	W10362924	Screw	W10465078		Orifice, LP Broil
17	W10362924	Screw	36	W10818358	Shield, Wire			
18	W10323077	Diffuser, Flame	37	W10137382	Clip, Panel			
19	3196178	Screw	38	W10457998	Module, Spark (0 plus 2)			
20	W10435470	Brace, Main Back						


MANIFOLD PARTS

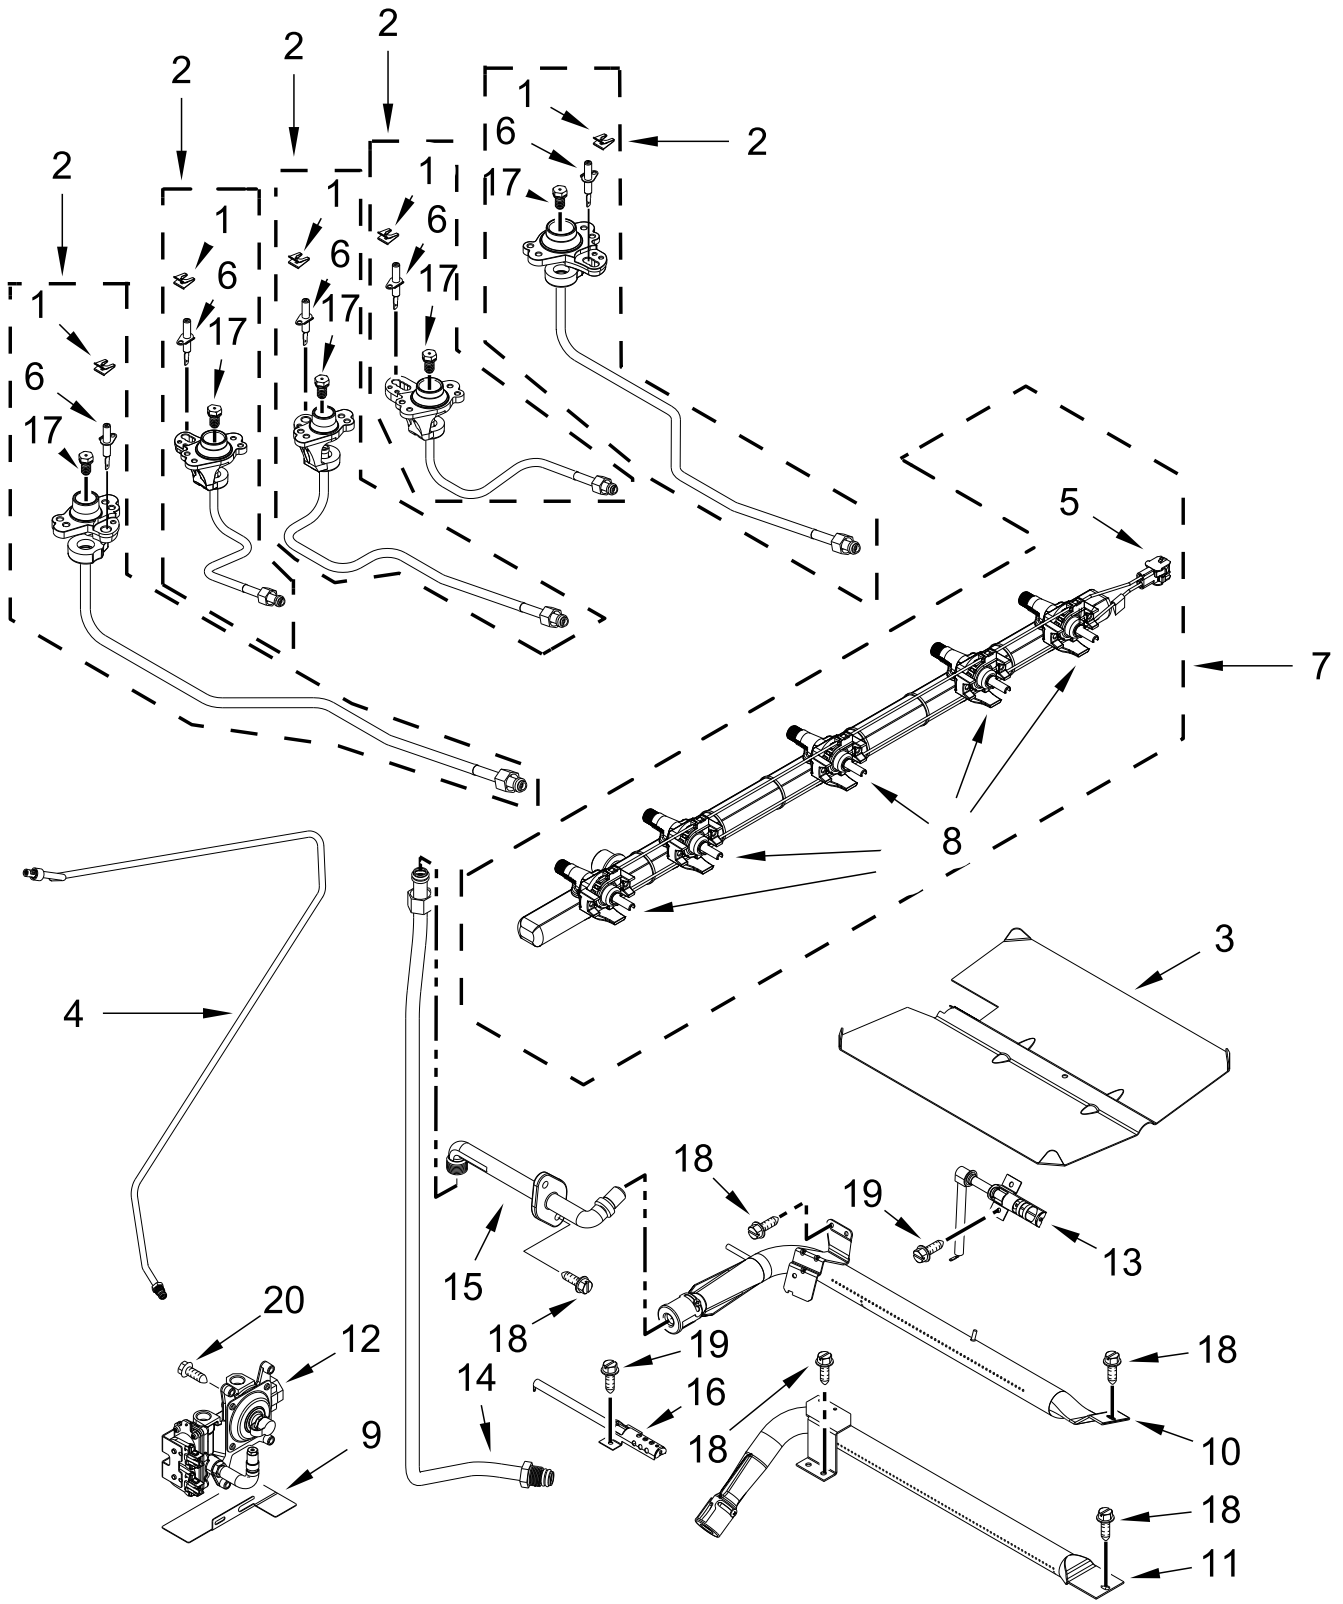

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10827923	Electrode, Spring (Left Front, Left Rear, Right Rear) (Center)	6	W10669526	Electrode, Burner (Left Front, Left Rear, Right Rear)	11	W10680035	Burner, Bake
	W11084050	Clip, Electrode (Right Front)		W10669524	Electrode, Burner (Center)	12	W10554066	Valve, Regulator
2	W10867777	Assembly, Orifice (Left Front)		W11084034	Electrode, Burner (Right Front)	13	W10324262	Igniter, Bake
	W10867779	Assembly, Orifice (Left Rear)		W10669523	Electrode, Burner (Right Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)
	W10867780	Assembly, Orifice (Right Front)	7	W11504626	Assembly, Manifold	15	W10583216	Fitting, Broil Burner
	W10867778	Assembly, Orifice (Right Rear)	8	W11259513	Valve, Gas (Right Rear)	16	W10333842	Electrode, Broil
	W11498076	Assembly, Orifice (Center)		W11259514	Valve, Gas (Left Rear)	17	W10849722	Orifice (18K) (Left Front)
3	3601P336-45	Baffle, Broil Burner		W11259404	Valve, Gas (Left Front, Right Front, Center)		W10849719	Orifice (5K) (Left Rear)
4	W11107282	Tube, Supply	9	W10224921	Bracket, Aegis		W10672111	Orifice (1.65MM) (Right Front)
5	W10885903	Harness, Spark Switch	10	W10439242	Burner, Broiler		W10849714	Orifice (9.5K) (Right Rear)
						18	3196178	Screw
						19	3196385	Screw
						20	3400016	Screw

DOOR PARTS

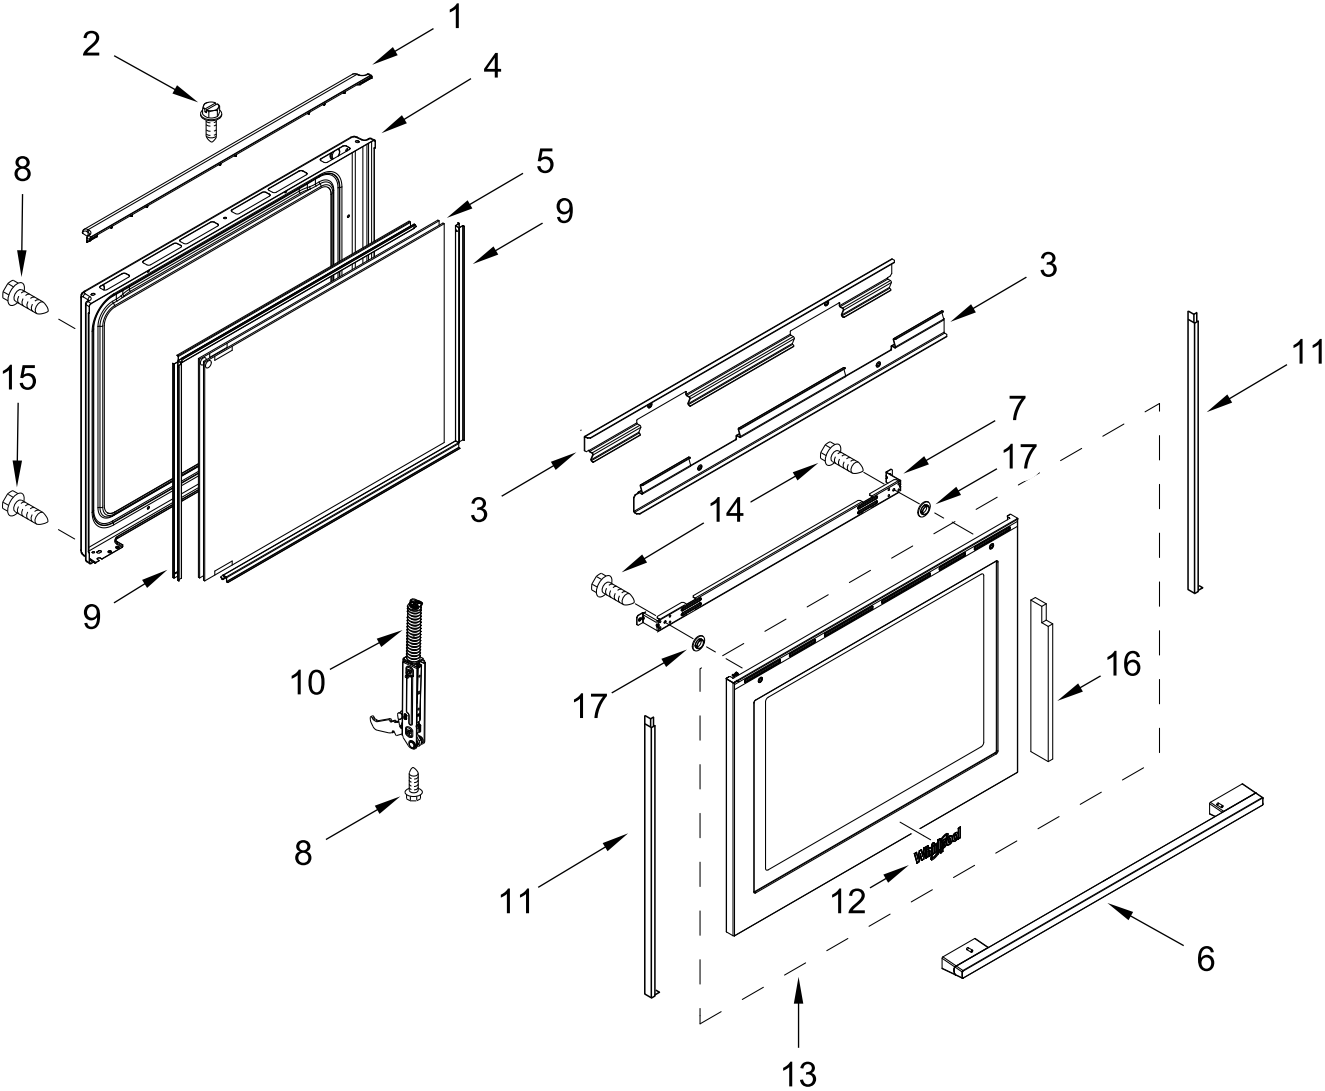


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2	3196184	Screw
3	W10813140	Rail, Horizontal Support
4	W10826568	Liner, Door
5	W11223202	Glass, Inner
6		Handle, Door
	W10914779	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10541911	Bracket, Glass Upper Handle
8	W10031790	Screw
9	W11379948	Glass Spacer
10	W11184046	Hinge, Door (Active)
11	W10813139	Rail, Vertical Support
12	W10884775	Badge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13		Glass, Outer
	W10864214	Stainless
14	W11091878	Screw
15	W10031780	Screw
16	W10766562	Insulation, Door
17	W10319024	Washer, Door

DRAWER PARTS

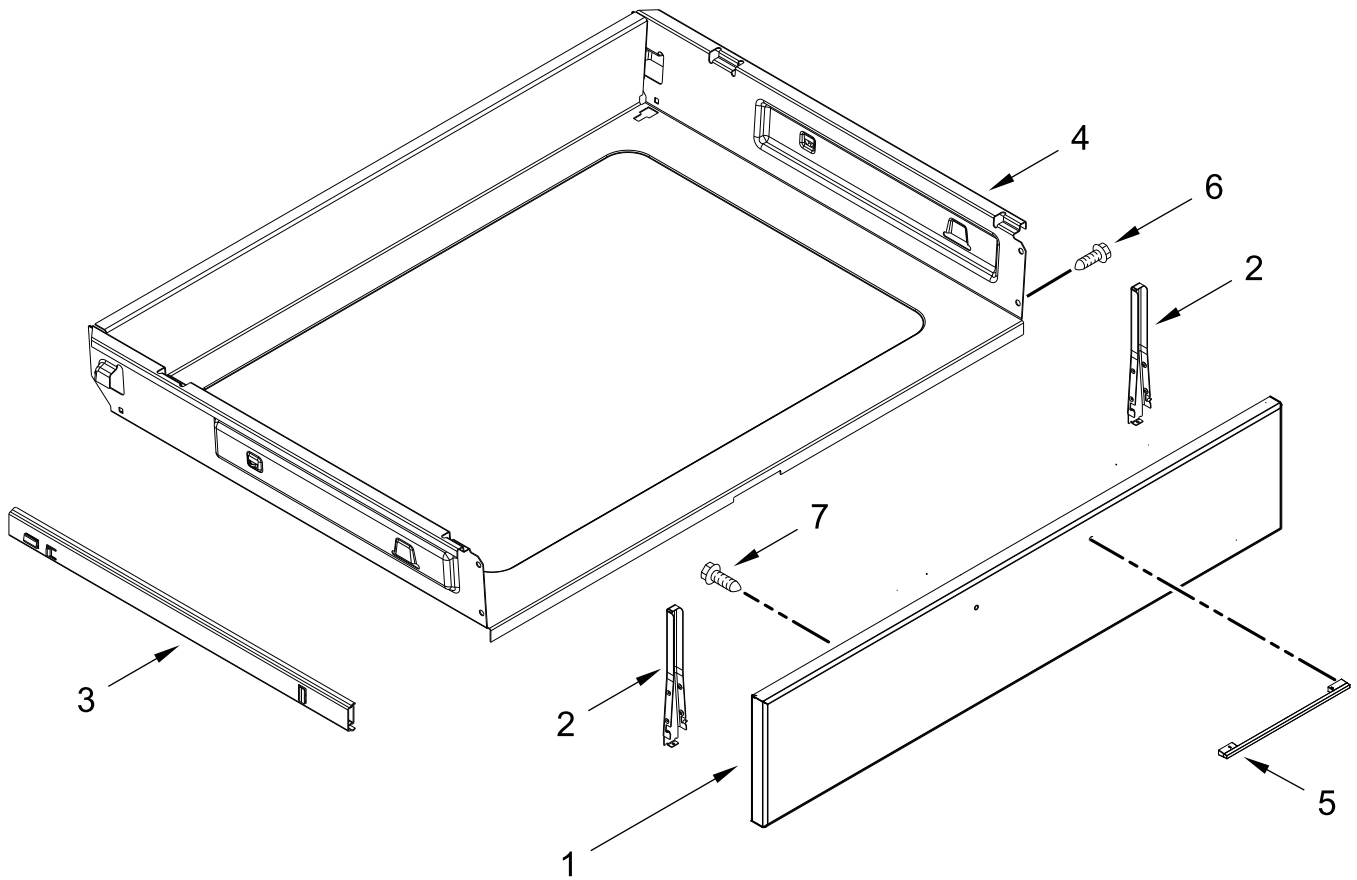

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10441804	Slide, Drawer (Left)	5		Handle, Drawer
	W11449718	Stainless		W10441805	Slide, Drawer (Right)		W11082254	Stainless
2	W10318026	Bracket, Mounting	4	W10688022	Drawer, Storage	6	3196169	Screw
						7	W10327235	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit
		ASSEMBLY, TRIM (INCLUDES BLIND THREADED INSERT)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		(1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless
		ASSEMBLY, BACKSPLASH
	W10655449	Black
	W10655448	White
	W10655450	Stainless