




**ELECTRIC RANGE
Fingerprint Resistant**

MODELS:

WFES5030RV0 (Black Stainless)

WFES5030RZ0 (Stainless)


COOKTOP PARTS

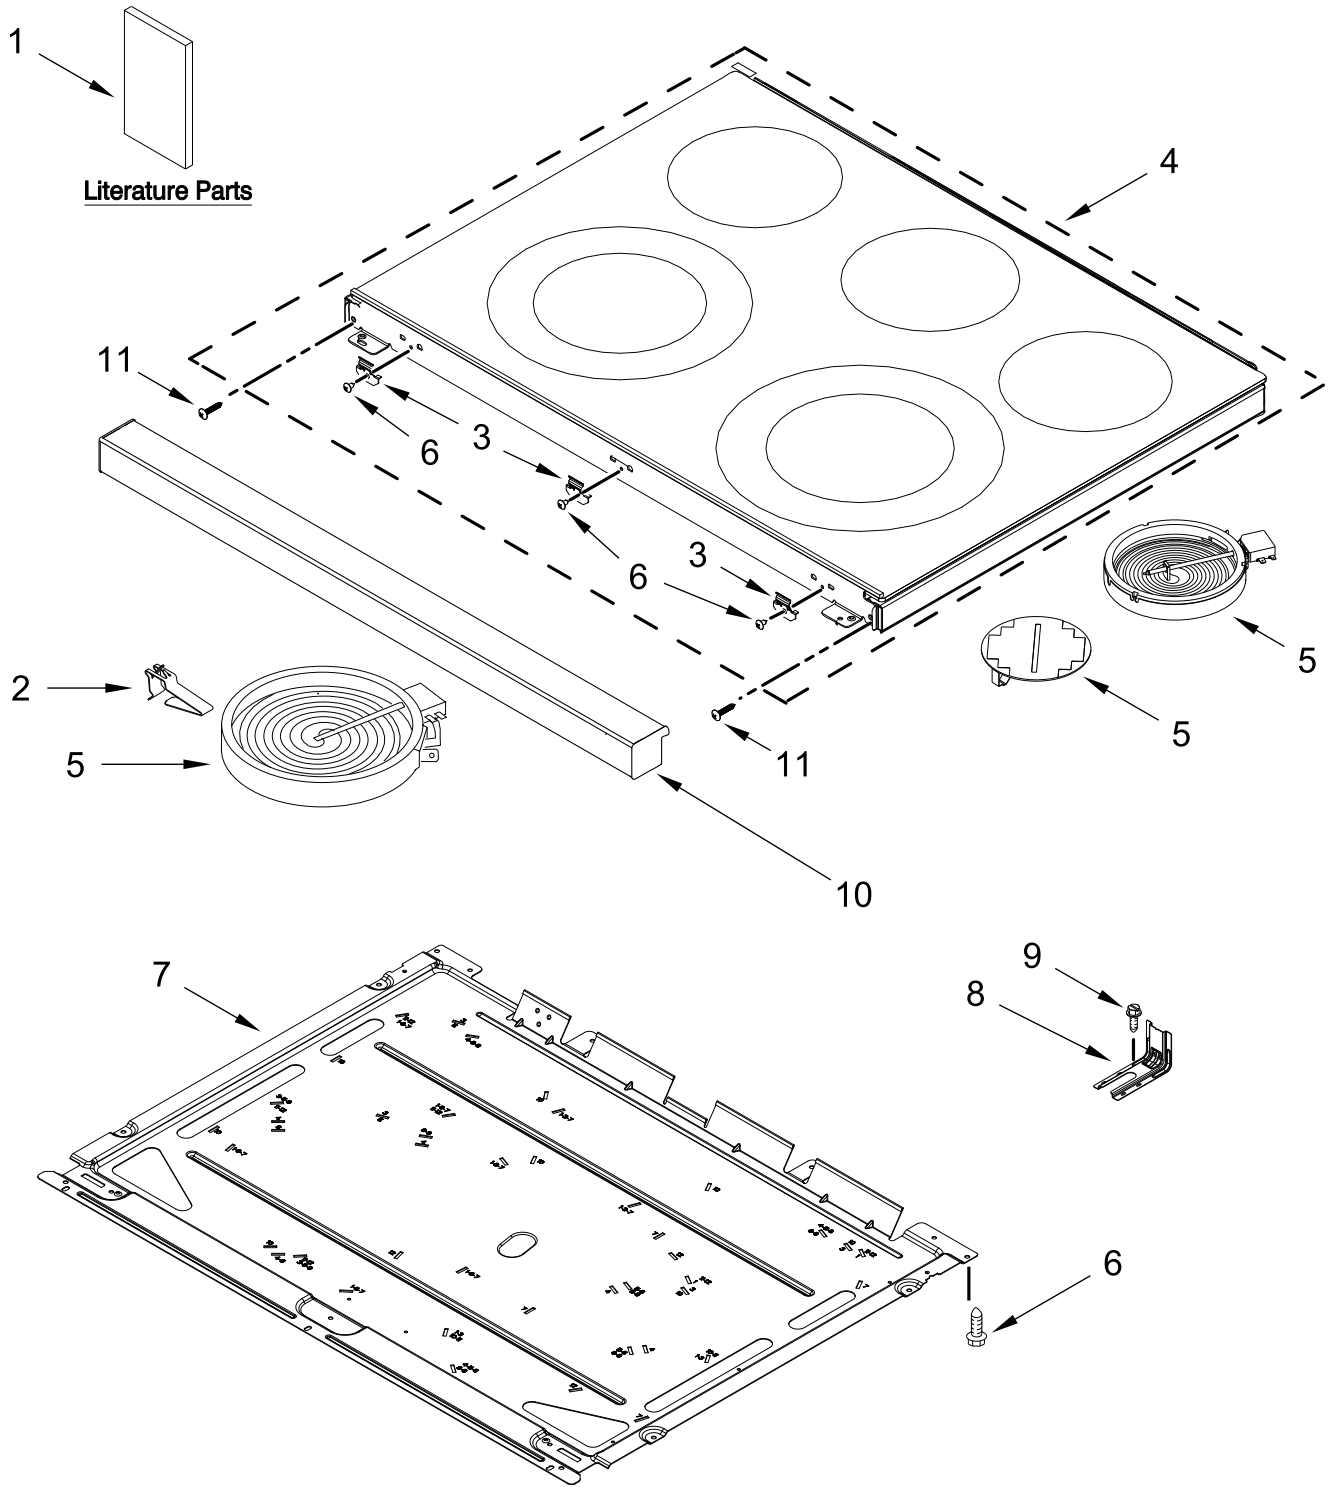

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11282542	Element (3000W Dual)	10		Bullnose
	W11638798	Quick Start Guide			(Left Front)		W11353381	Black Stainless
	W11640146	Owner's Manual		8273994	Element (1200W)		W11353382	Stainless
	W11639163	Tech Sheet			(Left Rear, Right Rear)	11	3400080	Screw
2	W11600012	Spring, Element		W10711900	Element (3000W)			FOLLOWING PARTS NOT ILLUSTRATED
3	W11593284	Bracket, Cooktop			(Right Front)		W11696452	Harness, Main
4		Cooktop		W11668631	Element, Warm Zone		W11706379	Harness, Cooktop
	W11629534	Black (includes, Cooktop Bracket)			(Center)		W11172528	Harness, Hidden Bake
			6	3196169	Screw		3196520	Clip, Wire
			7	W11640572	Pan, Radiant Element		3196896	Clip, Wire
			8	W11379945	Bracket, Anti-Tip			
			9	7101P485-60	Screw, Anti-Tip Kit			


CONTROL PANEL PARTS

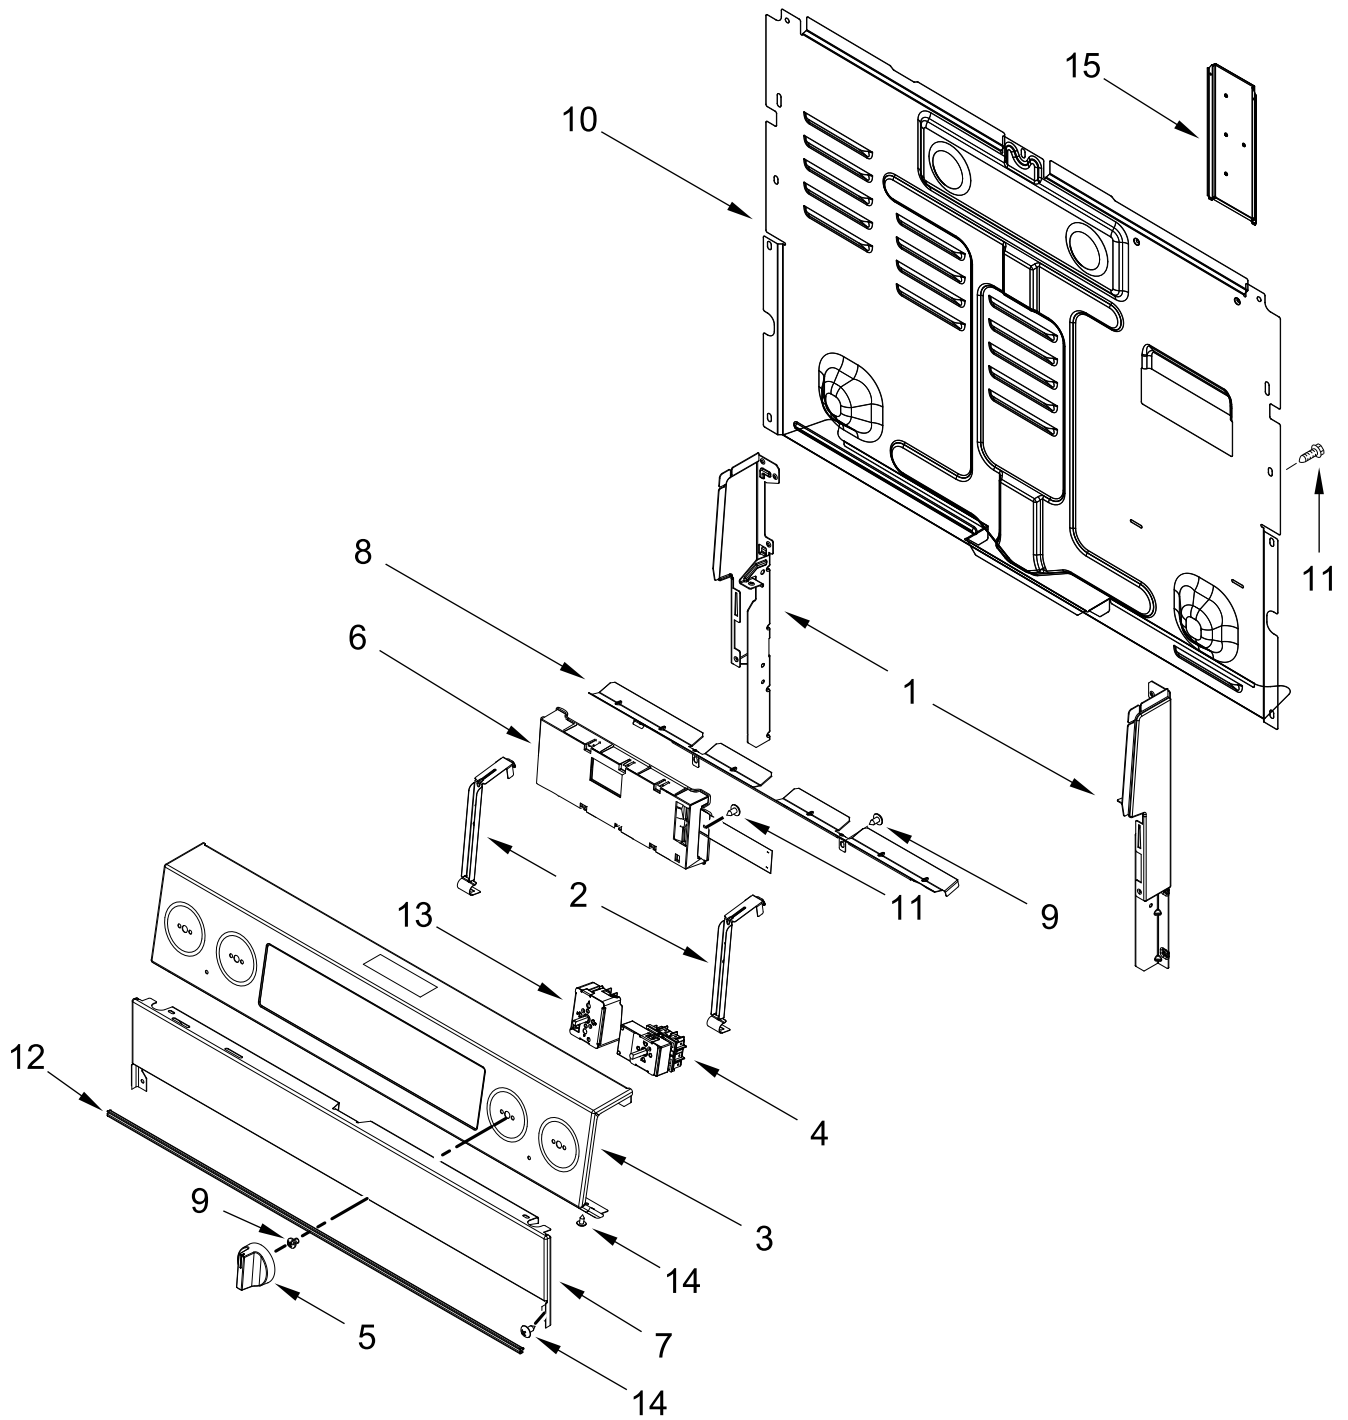

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5		Knob	10	W11393668	Cover, Upper Rear
	W11327041	Black (Left)		W11621540	Black Stainless	11	3196178	Screw
	W11327043	Black (Right)		W11621738	Stainless	12	W11643797	Gasket, Lower Panel
2	W11290750	Bracket, Control	6		Control, Electronic (LCX)	13	W10578768	Switch, Infinite (Right Rear and Left Rear)
3		Console, Assembly		W11652497	Black			
	W11352187	Black Stainless	7		Panel, Lower	14	3196169	Screw
	W11299261	Stainless		W11625413	Black	15	W11394231	Cover, Rear Flue
4	W10437092	Switch, Infinite (Left Front and Right Front)	8	W11363806	Shield, Heat			
			9	3400882	Screw			


CHASSIS PARTS

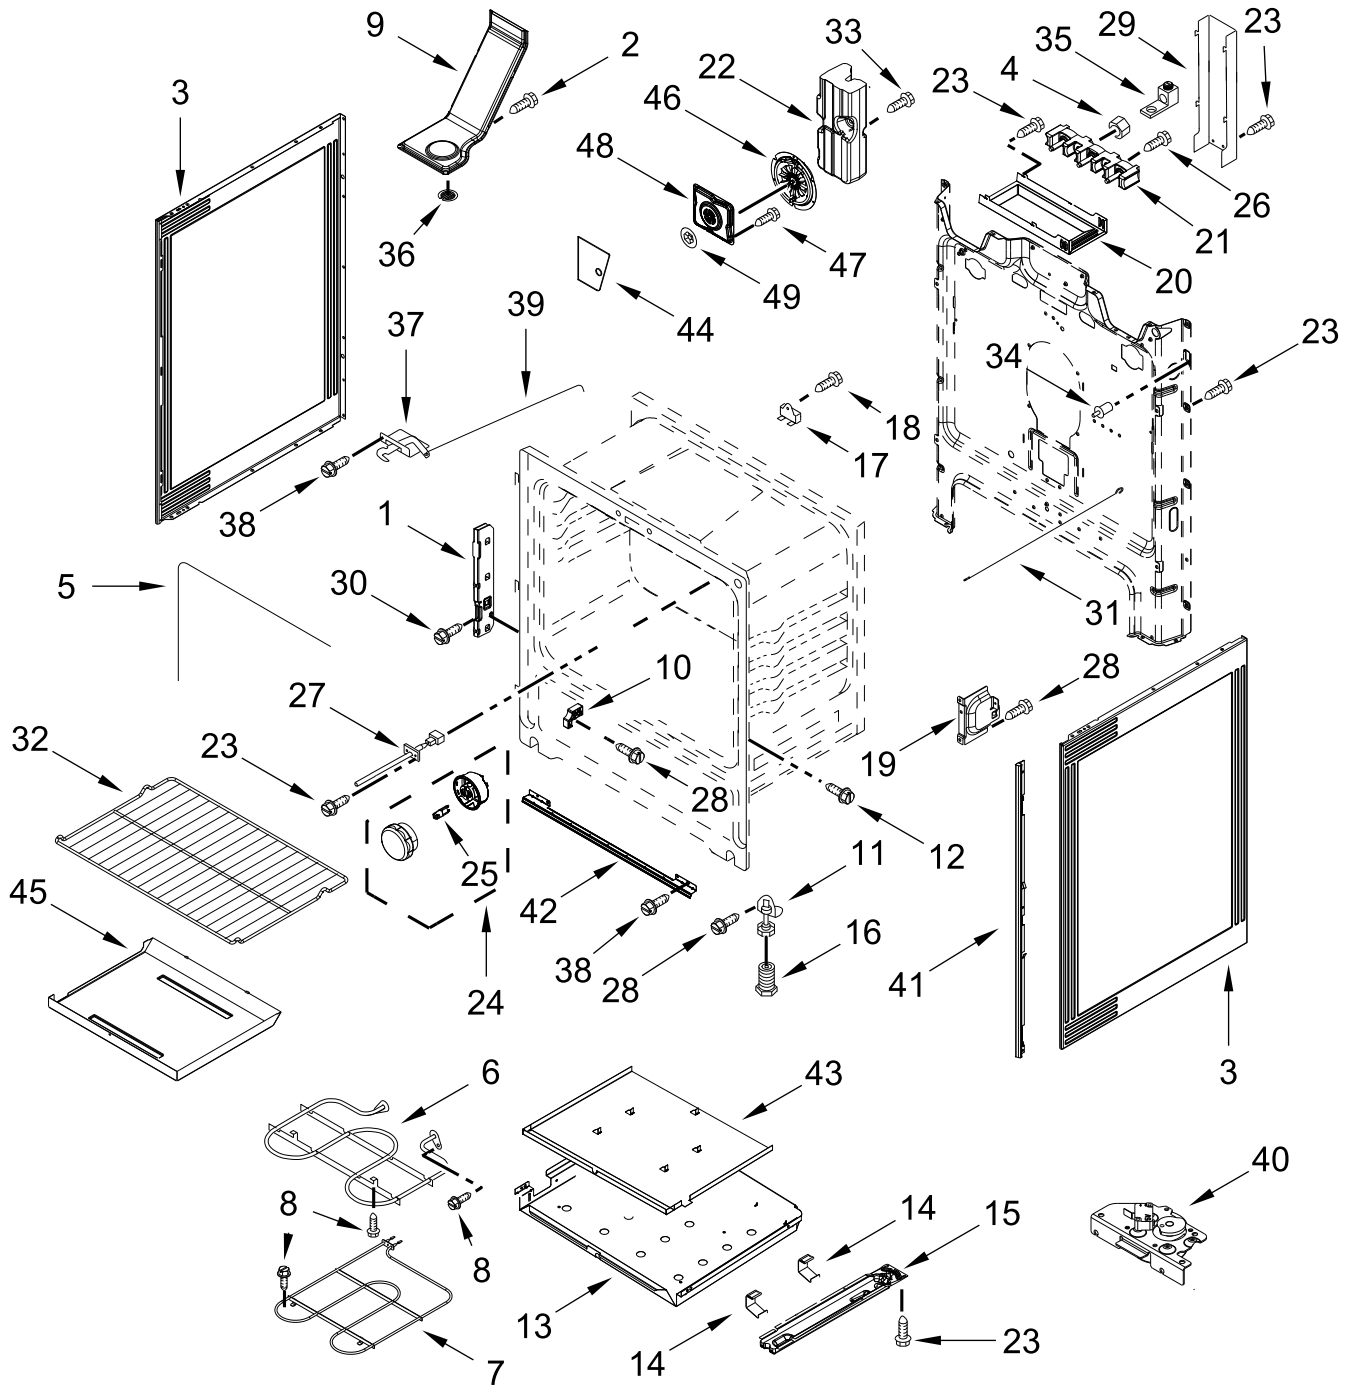

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	W11673744	Bracket, Service	39	W10078380	Rod, Latch
2	W10362924	Screw	21	W11750818	Block, Terminal (without Ground Strap)	40	W10107820	Rear Door Latch Assembly
3		Panel, Side	22	W10910404	Counterweight	41	W11510560	Barrier Rail, Rubber (Left and Right)
	W11445467	Black	23	3196178	Screw	42	W11464547	Bracket, Front Frame
4	3400029	Nut	24	W11634772	Light Assembly	43	W10134125	Shield, Heat
5	W11491751	Seal, Door	25	W10571723	Bulb, Halogen 40 Watts	44	W10646923	Card, Insulator
6	W10308476	Element, Broil	26	3400016	Screw	45	W10183712	Tray, Hidden Bake
7	9755770	Element, Bake	27	W10586204	Sensor	46	W11353930	Fan, Convection
8	3196174	Screw	28	3196169	Screw	47	W10516115	Screw
9	W11621245	Tube, Vent	29	W10326122	Cover, Terminal Block	48	W11373155	Cover, Conv Fan
10	W10674705	Glide, Drawer Front	30	W10031780	Screw	49	3400968	Nut
11	W10341186	Front Foot Assembly	31	9757239	Rod, Door Switch			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	32	W11173792	Rack, Oven		W10774939	Insulation, Wrap
13	W10134121	Tray, Insulation	33	W11034869	Screw		W11404469	Insulation, Flue
14	W10137382	Clip, Panel	34	W11511828	Switch, Door		W11407378	Insulation, Back
15	W10390008	Base Rail Assembly (Left)	35	W10281322	Kit, Bare Wire Adapter Block			
	W10390007	Base Rail Assembly (Right)	36	W11092984	Screen, Vent			
16	W10058460	Foot, Leveling	37	9761013	Front Door Latch Assembly			
17	3196548	Fuse, Thermal	38	3196560	Screw			
18	3196172	Screw						
19	W10404688	Clip, Oven Support						

DOOR PARTS

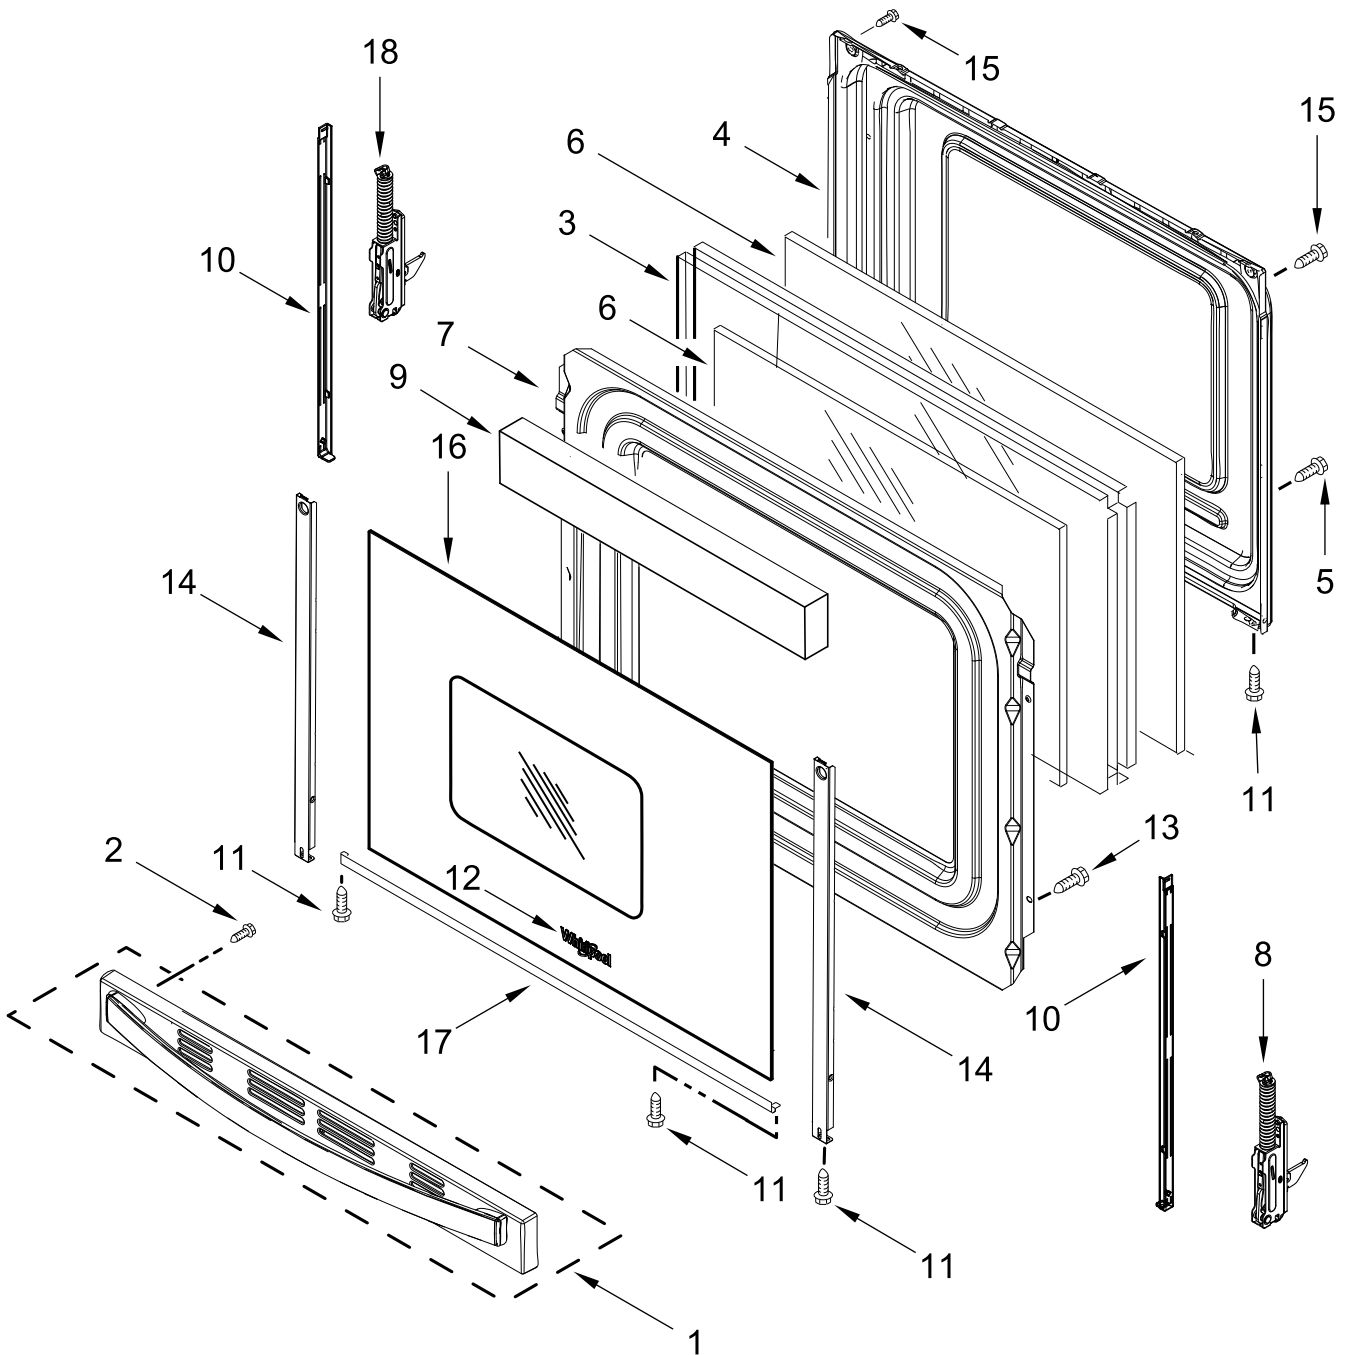


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11353056	Black Stainless
	W11353054	Stainless
2	W10465158	Screw
3	W10316950	Frame, Glass
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11380222	Retainer, Insulation
8	W10388635	Hinge, Door (Active)
9	W10278991	Insulation, Door Strip
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw
12	W10884775	Badge

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10031780	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16		Glass Assembly, Outer Door
	W11729636	Black
17		Trim, Lower
	W11444043	Black
18	W10440013	Hinge, Door (Active)

DRAWER PARTS

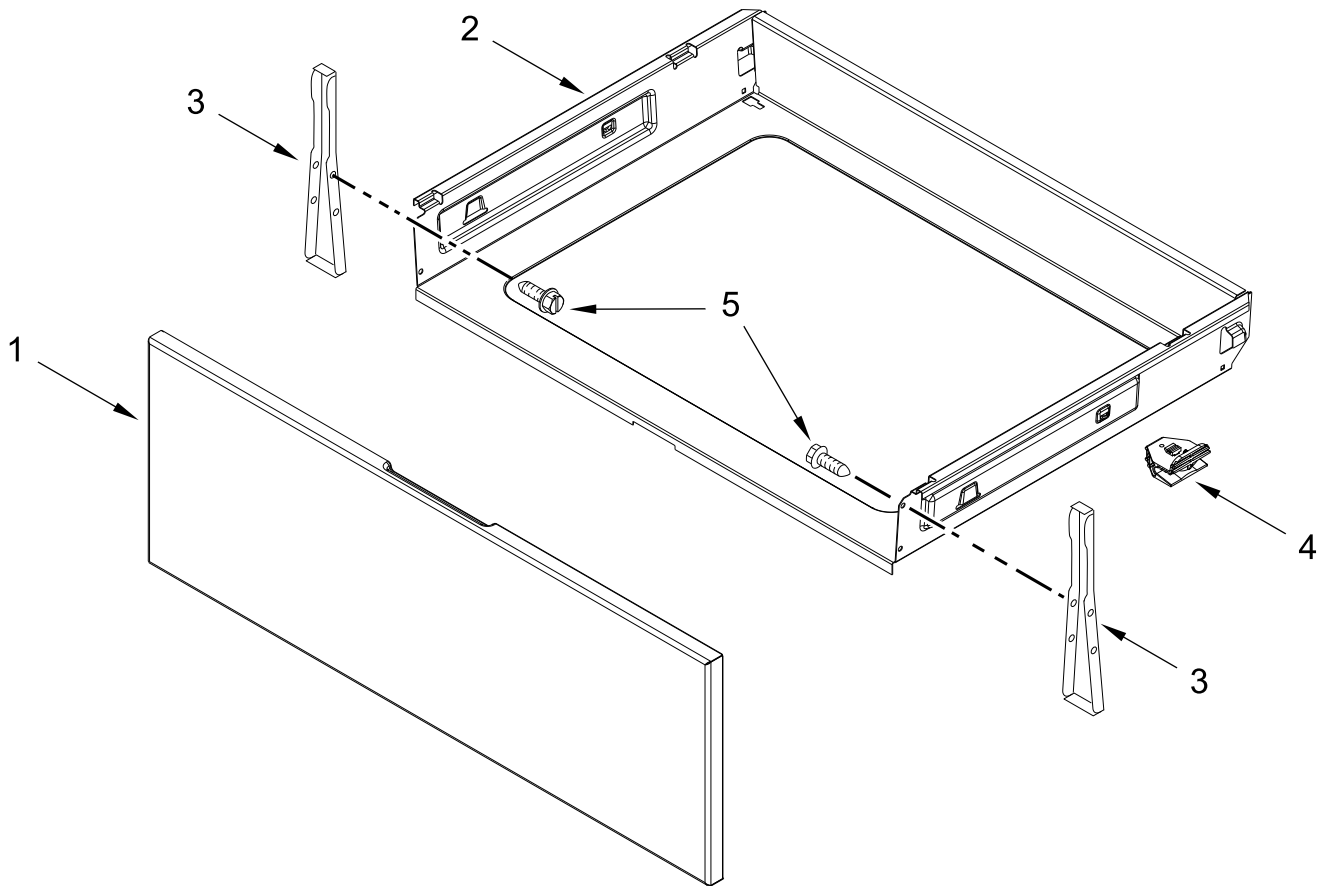

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W11449766	Black Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196169	Screw
	W11449698	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W11601635	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting