




ELECTRIC RANGE

MODELS:

WFES7530RV0 (Black Stainless)

WFES7530RZ0 (Stainless)


COOKTOP PARTS

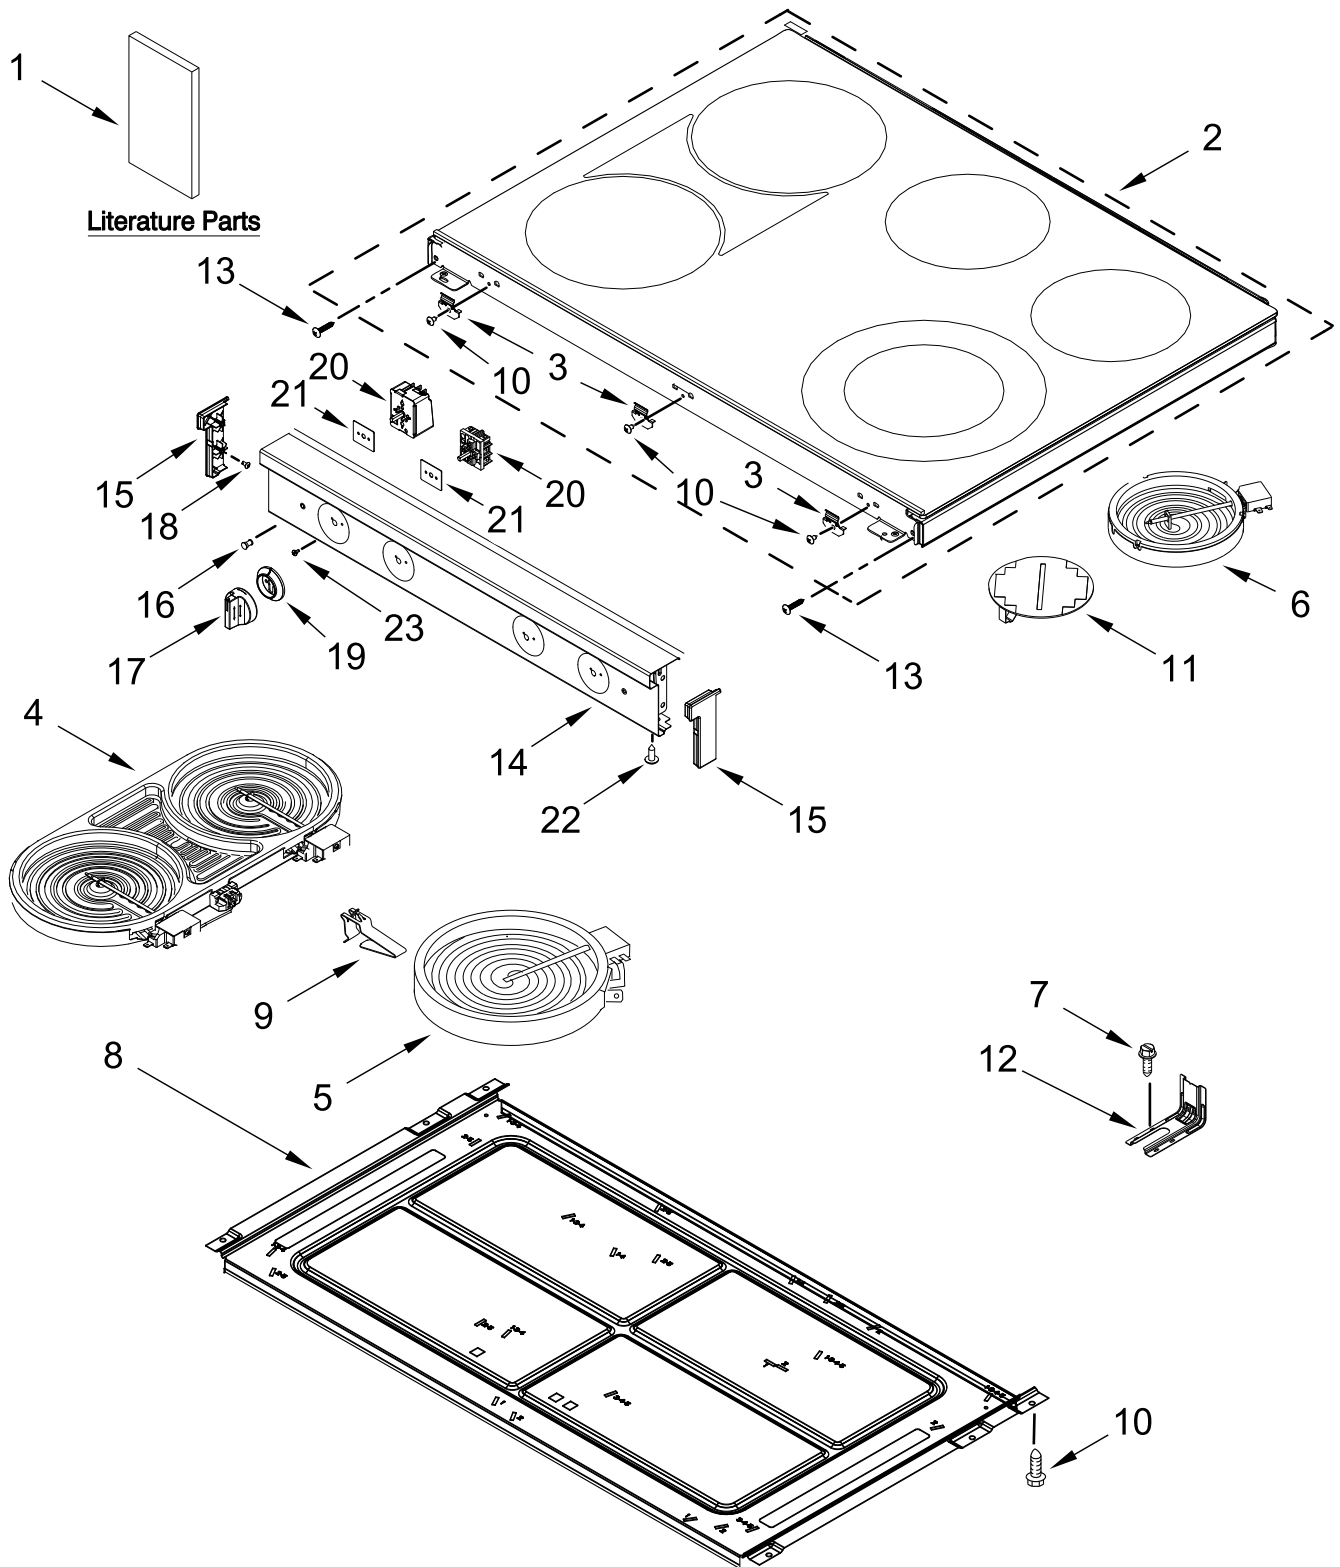

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W11379945	Bracket, Anti-Tip	20	W10437092	Switch, Infinite
	W11638635	Owners Manual	13	3400080	Screw	21	7201P077-60	Gasket, Infinite Switch
	W11638798	Quick Start Guide	14		Panel Upper, Manifold	22	3196178	Screw
	W11639164	Tech, Sheet		W11393097	Black Stainless	23	W10498399	Screw
2		Cooktop		W11393096	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
	W11629537	Black (includes, Cooktop Bracket)	15		Panel, Manifold End Cap		W11334457	Harness, Main
3	W11593284	Bracket, Cooktop		W11361197	Black Stainless (Left)		W11341267	Harness, Cooktop
4	W11724301	Bridge, (1800W, 800W)		W11361196	Black Stainless (Right)		W11393541	Harness, Wire
		(Left Front and Left Rear)		W11386024	Stainless (Left)		W11341202	Harness, Front Dual
				W11386023	Stainless (Right)		W11585874	Harness, Hidden Bake
5	W11735737	Element (3000W) (Right Front)	16	3196068	Lens, Indicator			
6	W11724296	Element (Single, 1200W) (Right Rear)	17		Knob			
				W11635841	Single, (Black Stainless)			
				W11635842	Dual, (Black Stainless)			
7	7101P485-60	Screw, Anti-Tip Kit		W11635836	Single, (Stainless)			
8	W11300812	Pan, Radiant Element		W11635837	Dual, (Stainless)			
9	W11600012	Spring, Element	18	9780274	Screw			
10	3196169	Screw	19		Bezel			
11	W11668631	Element, Warm Zone (Center Rear)		W11635851	Black Stainless			
				W11635850	Stainless			


CONTROL PANEL PARTS

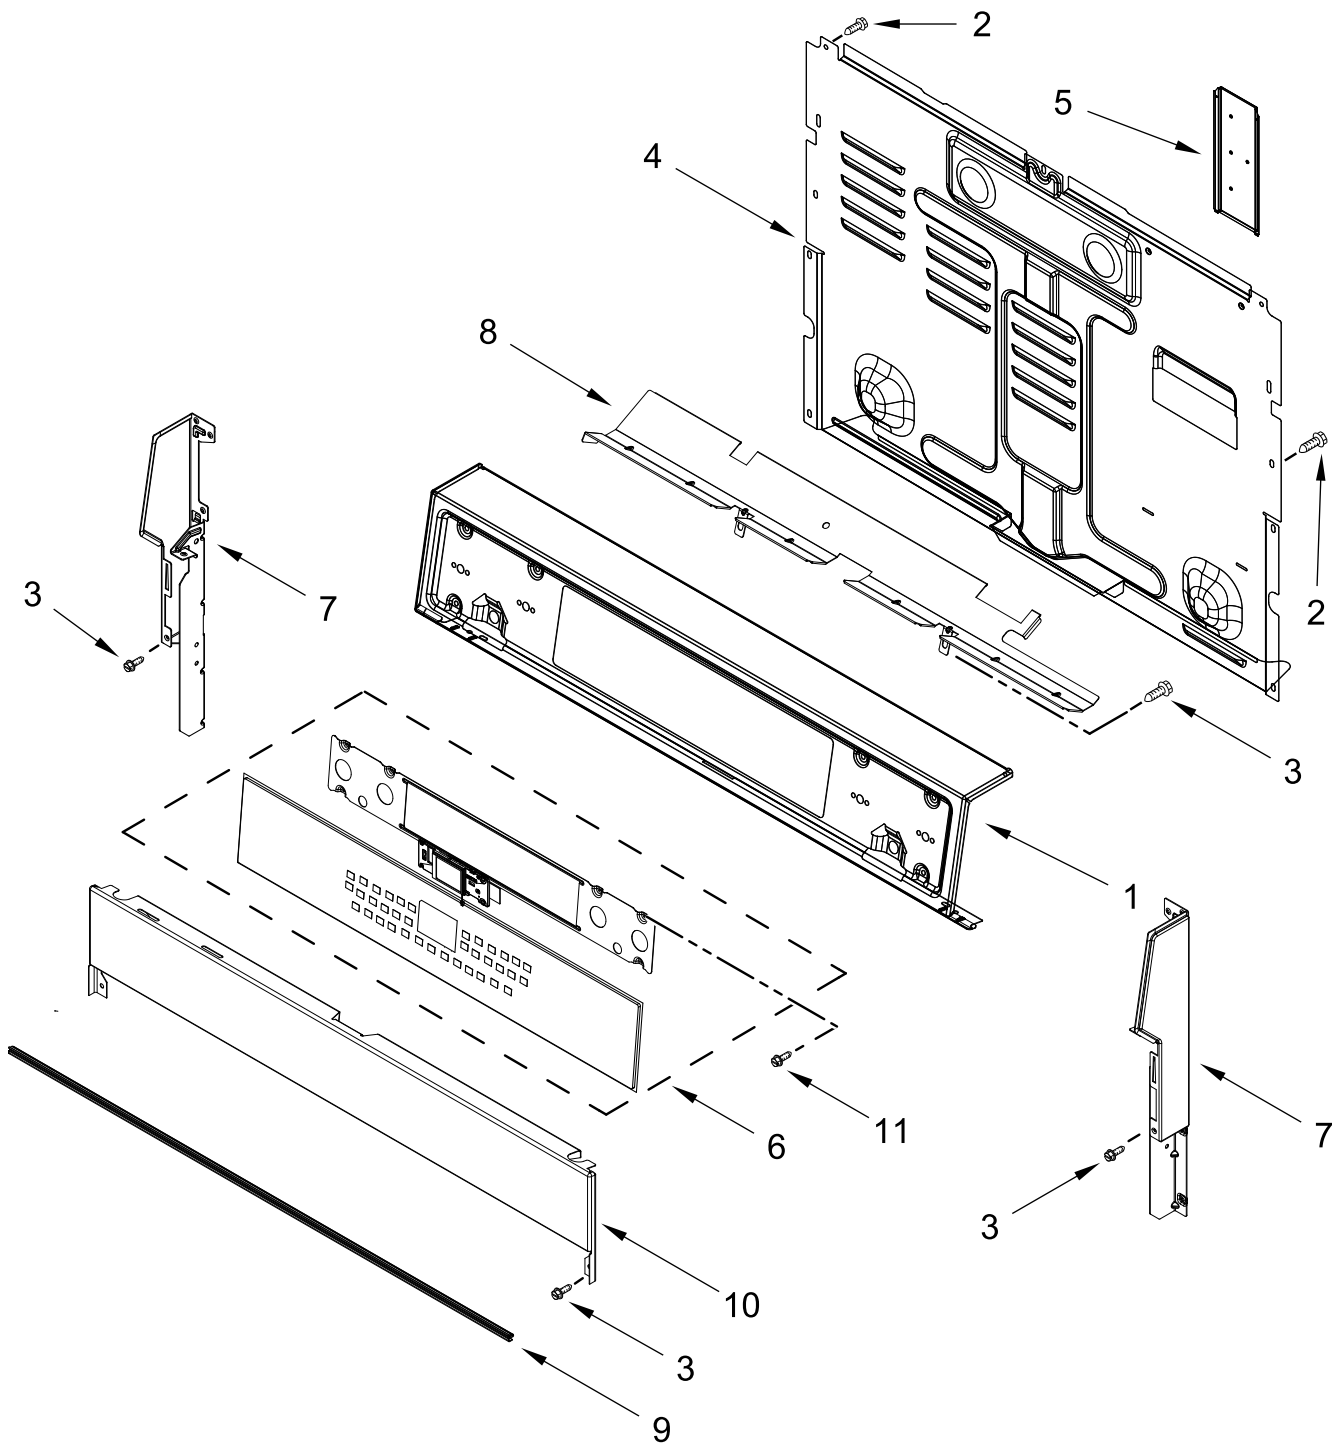

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	4	W11392241	Cover, Upper Rear	7		Endpost, Console
	W11371989	Black Stainless			(Left Front and Right Front)		W11625423	Black (Left)
	W11371988	Stainless					W11625420	Black (Right)
2	3196178	Screw		W10843843	Switch, Infinite (Left Rear)	8	W11363806	Shield, Heat
3	3196169	Screw		W10578768	Switch, Infinite (Right Rear)	9	W11643797	Gasket, Lower Panel
						10		Panel, Lower
			5	W11394231	Cover, Rear Flue		W11303750	Black Stainless
			6	W11400085	Assembly, User Interface		W11625404	Stainless
						11	3196160	Screw


CHASSIS PARTS

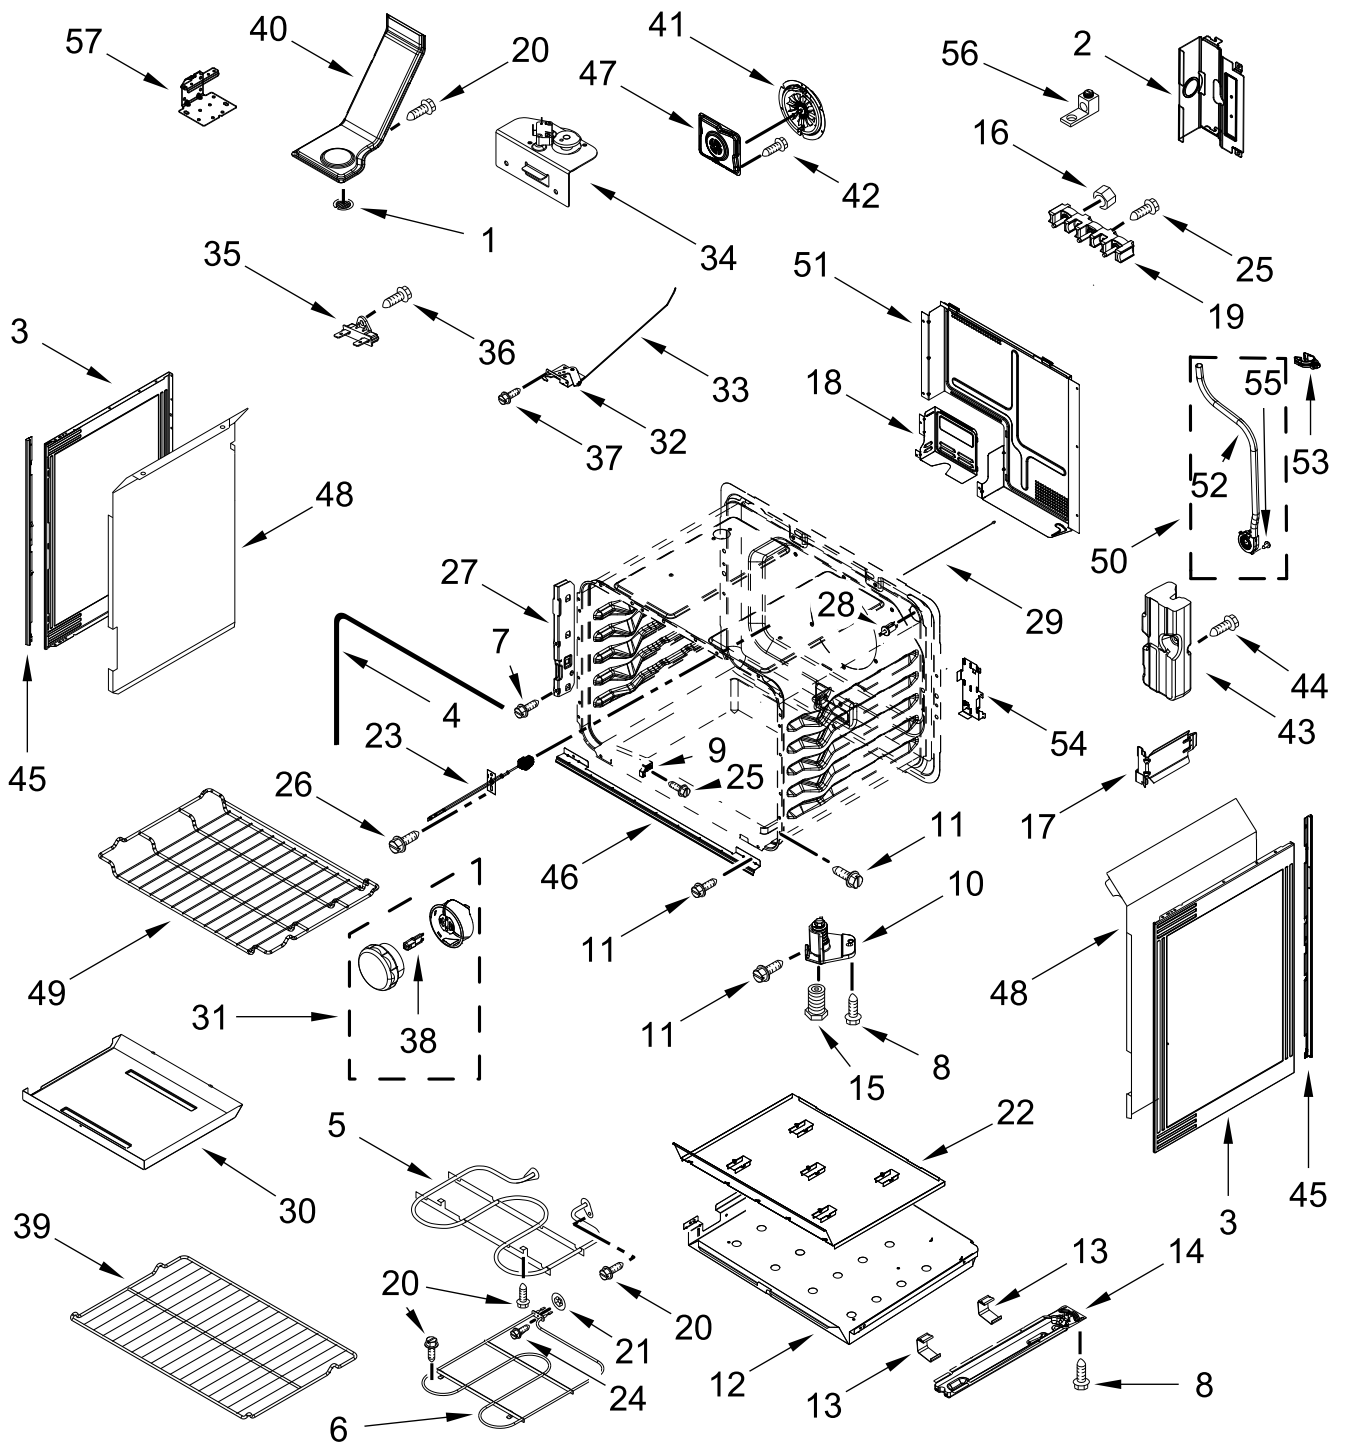

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	24	3196174	Screw	47	W11373155	Cover, Conv Fan
2	W11391997	Bracket, Service	25	3400080	Screw	48	W11379353	Retainer, Insulation (Left)
3		Panel, Side	26	3196169	Screw		W11379943	Retainer, Insulation (Right)
	W11445467	Black	27	W10289077	Receiver, Hinge			
4	W11491751	Seal, Door	28	W11511828	Switch, Door	49	W11607819	Rack, Oven (Gull-Wing)
5	W10308476	Element, Broil	29	9757239	Rod, Door Switch	50	W11625914	Ventilation Assembly, Console
6	9755770	Element, Bake	30	W10183712	Tray, Hidden Bake	51	W11367541	Side, Fan Cover
7	W10031780	Screw	31	W11634772	Light Assembly	52	W11411632	Blower, Tube
8	3196178	Screw	32	9761013	Front Door Latch Assembly	53	W11642475	Tube, Clamp
9	W10674705	Glide, Drawer Front	33	W10078370	Rod, Push Latch	54	W11365827	Bracket, Acu
10	W10341186	Front Foot Assembly	34	W10107820	Rear Door Latch Assembly	55	3400701	Screw
11	W10067840	Screw	35	3196548	Fuse, Thermal	56	W10281322	Kit, Bare Wire Adapter Block
12	W11309796	Tray, Insulation	36	3196172	Screw	57	W11287215	Bracket, Cooktop Console
13	W10137382	Clip, Panel	37	3196560	Screw			FOLLOWING PARTS NOT ILLUSTRATED
14	W10390007	Base Rail Assembly (Right)	38	W10571723	Bulb, Halogen 40 Watts			
	W10390008	Base Rail Assembly (Left)	39	W11173792	Rack, Oven		3196520	Clip, Wire
15	W10058460	Foot, Leveling	40	W11366092	Tube, Vent		W10646923	Card, Insulator
16	3400029	Nut	41	W11635909	Fan, Convection		W10774939	Insulation, Wrap
17	W10404688	Clip, Oven Support	42	W10516115	Screw		W11407378	Insulation, Back
18	W11596201	Corner, Cover	43	W10910404	Counterweight		W11404469	Insulation, Flue
19	W11750818	Block, Terminal (without Ground Strap)	44	W11034869	Screw		4820F015-59	Insulation, Strap
20	W10362924	Screw	45	W11510561	Barrier Rail, Rubber (Front Left)			
21	3400968	Nut		W11510562	Barrier Rail, Rubber (Front Right)			
22	W11310684	Shield, Heat	46	W11464547	Bracket, Front Frame			
23	W11633068	Sensor						


DOOR PARTS

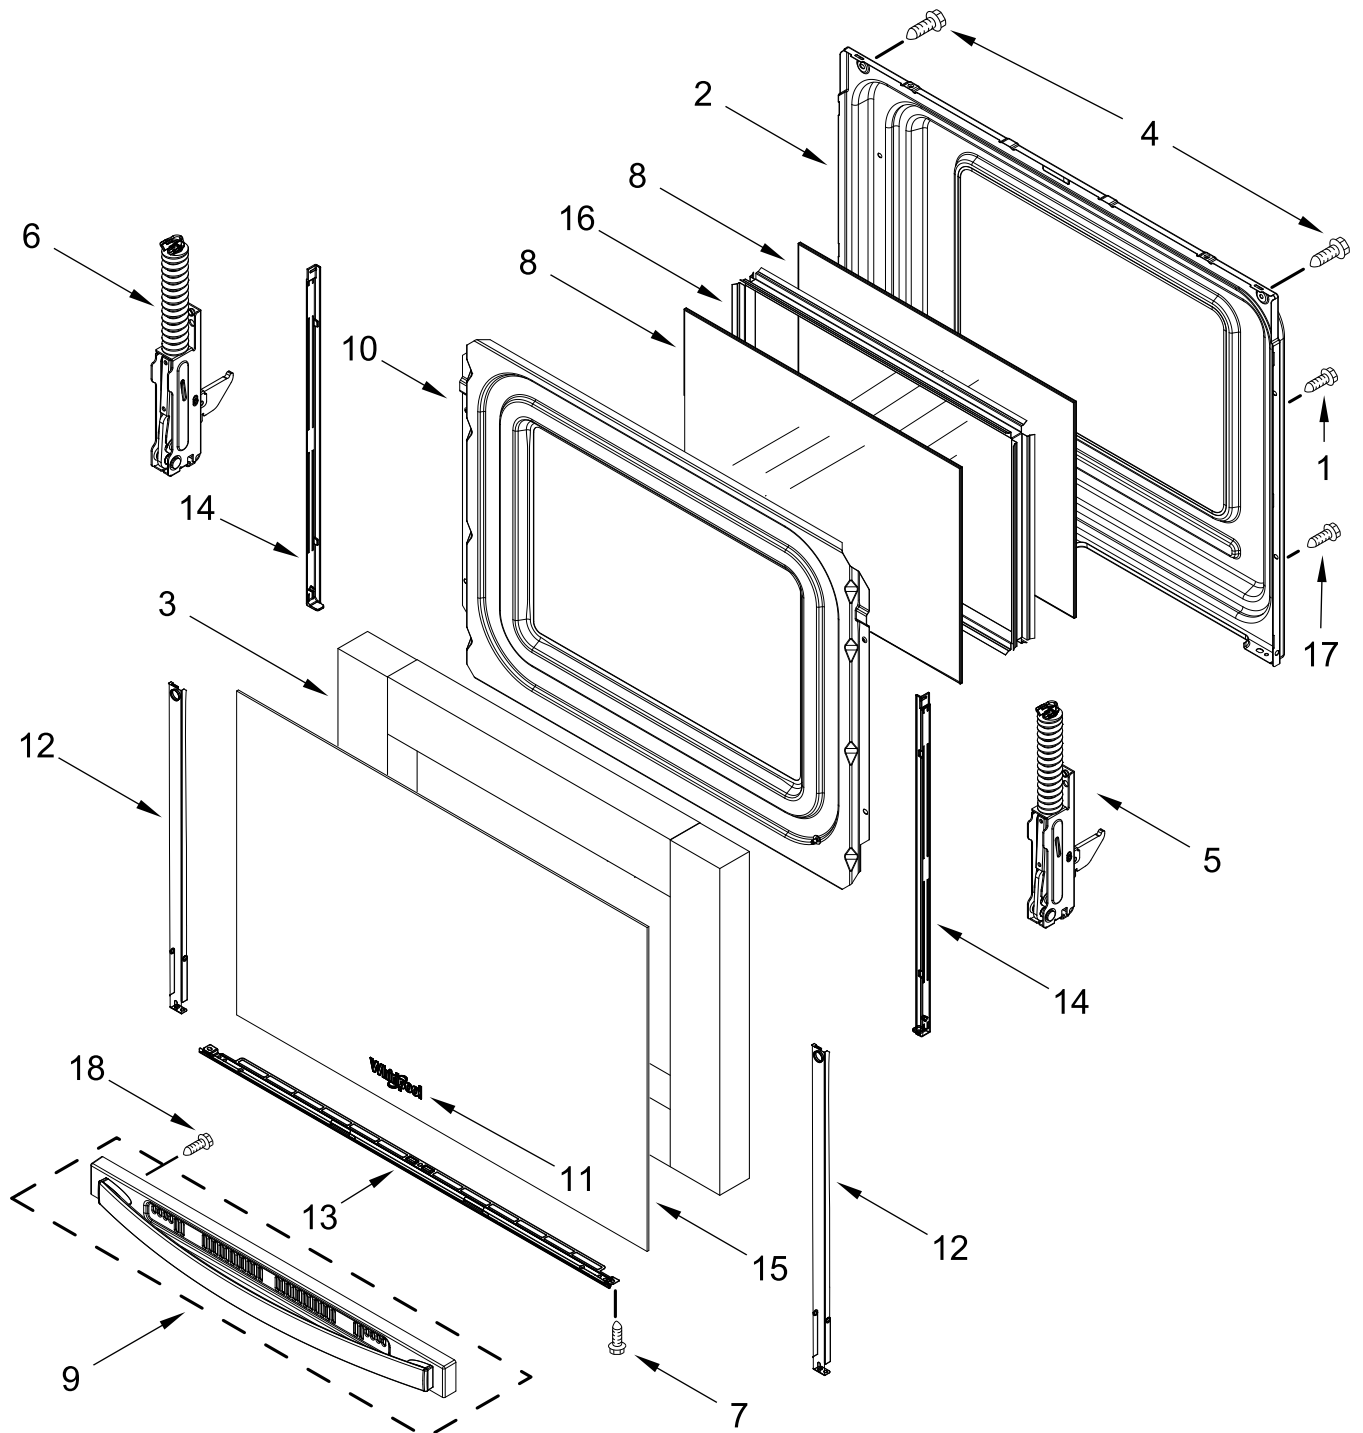

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	9		Handle and Vent Assembly	13		Door, Lower Trim
2	9761344	Liner, Door					W11444043	Black
3	W10278991	Insulation, Door Strip		W11353056	Black Stainless	14	W11379944	Strap, Door
4	W10200660	Screw		W11353054	Stainless	15		Glass Assembly, Outer Door
5	W10388635	Hinge, Door (Active)	10	W11380222	Retainer, Insulation		W11729636	Black
6	W10440013	Hinge, Door (Active)	11	W10884775	Badge	16	W10316950	Frame, Glass
7	W10327235	Screw	12		Door, Trim	17	W10031780	Screw
8	9758162	Glass, Inner		W10746436	Black (Left)	18	W10465158	Screw
				W10746435	Black (Right)			

DRAWER PARTS

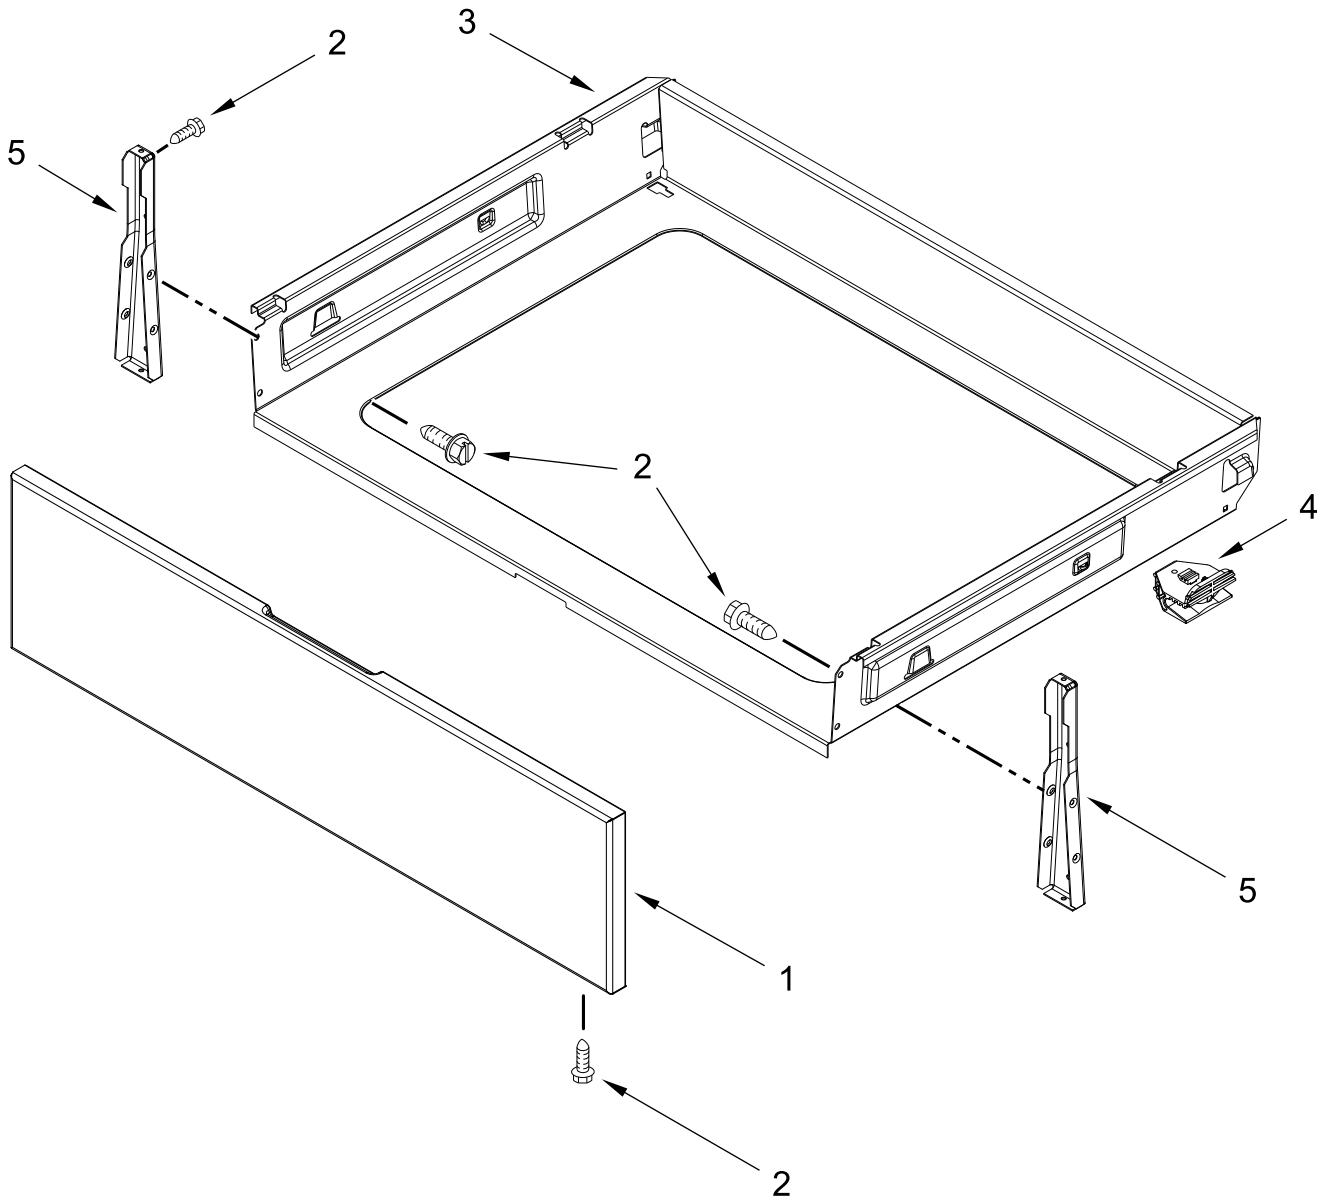

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer	2	3196169	Screw	4	W10674708	Glide, Drawer Rear
	W11450003	Black Stainless	3	W10688022	Drawer, Storage	5	W10462909	Bracket, Mounting
	W11190210	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black PAINT, BULK (1 qt.)
	799344	White (Uncut) ACCESSORY PARTS
	W11661815	Basket, Airfry