




**ELECTRIC RANGE  
(Fingerprint Resistant)**

**MODELS:**

MFES4030RS0 (Stainless)


# COOKTOP PARTS

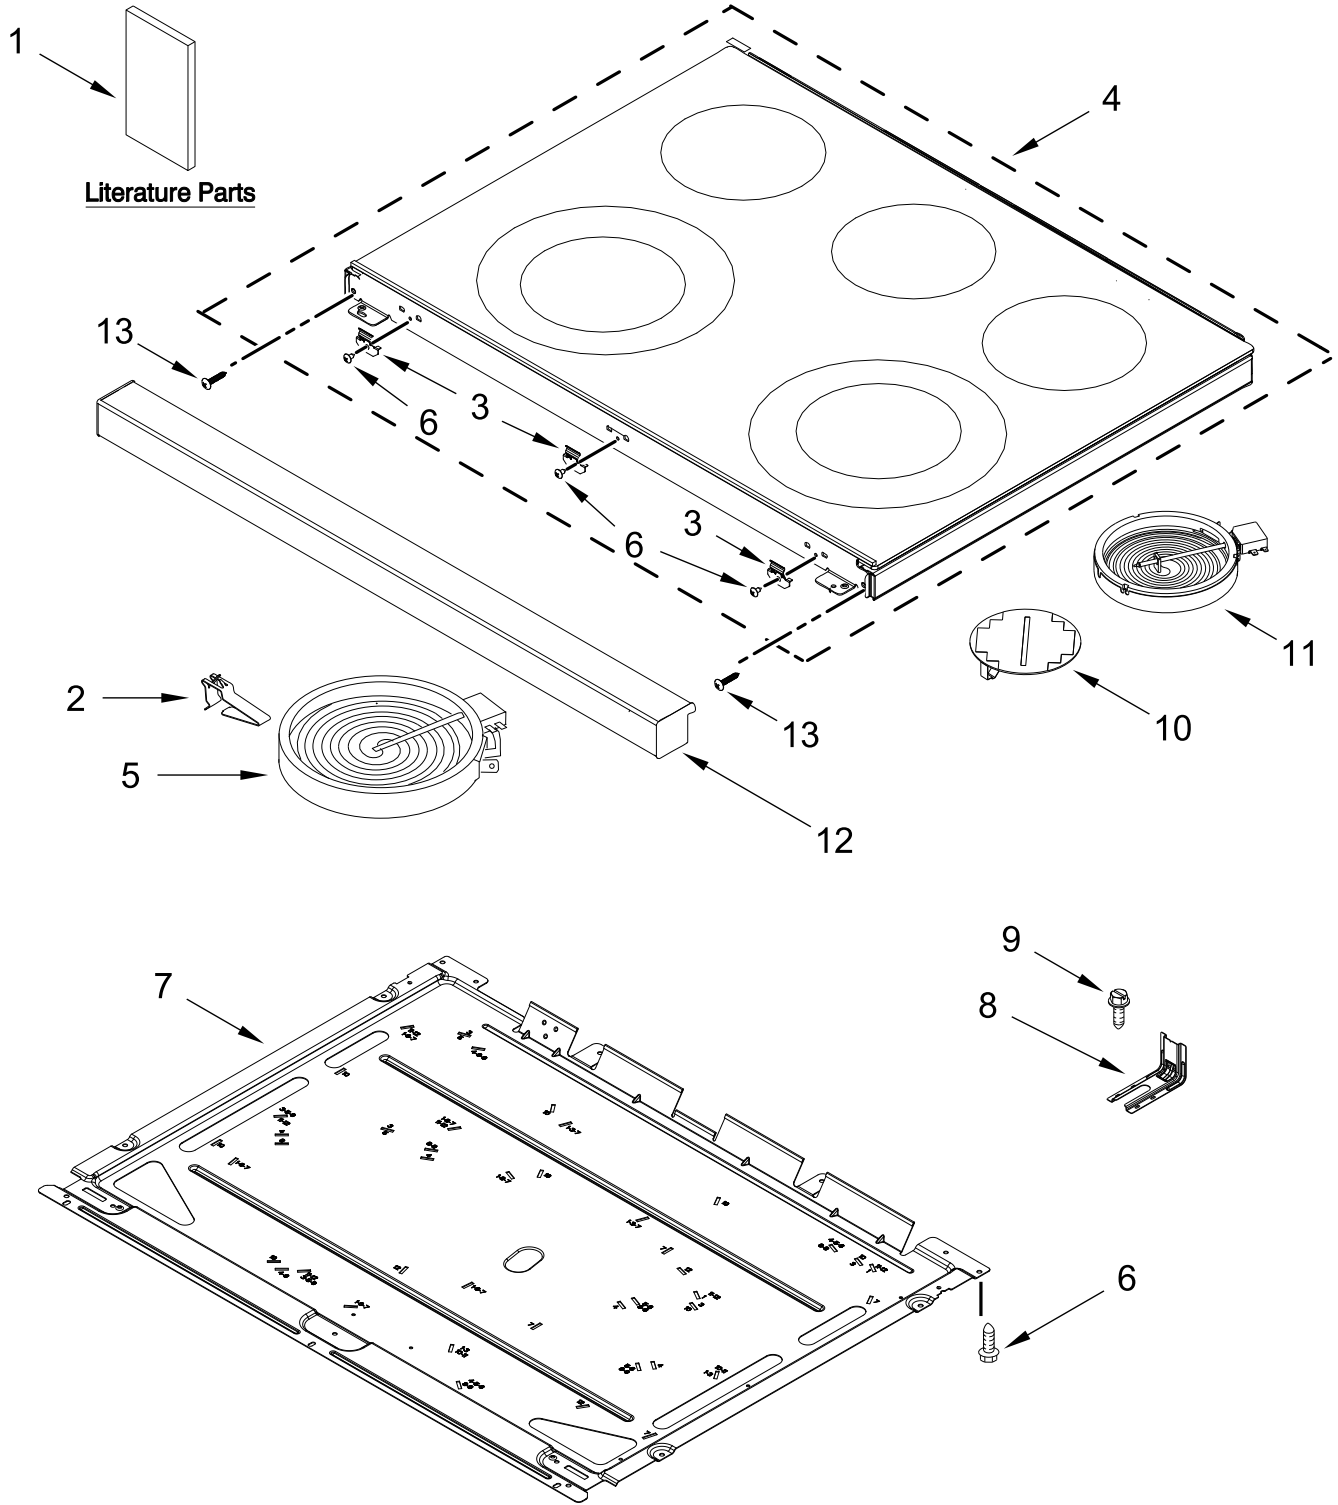

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	13	3400080	Screw
	W11640146	Owner's Manual	7	W11640572	Pan, Radiant Element			FOLLOWING PARTS NOT ILLUSTRATED
	W11638796	Quick Start Guide	8	W11379945	Bracket, Anti-Tip		W11706104	Harness, Main
	W11639165	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit		W11706379	Harness, Cooktop
2	W11600012	Spring, Element	10	W11668631	Element, Warm Zone (Center)			
3	W11593284	Bracket, Cooktop	11	8273994	Element (1200W) (Left Rear and Right Rear)			
4		Cooktop	12		Bullnose			
	W11633197	Black (Includes, Cooktop Bracket)		W11624927	Stainless			
5	W11282542	Element (3000W Dual) (Left Front and Right Front)						


# CONTROL PANEL PARTS

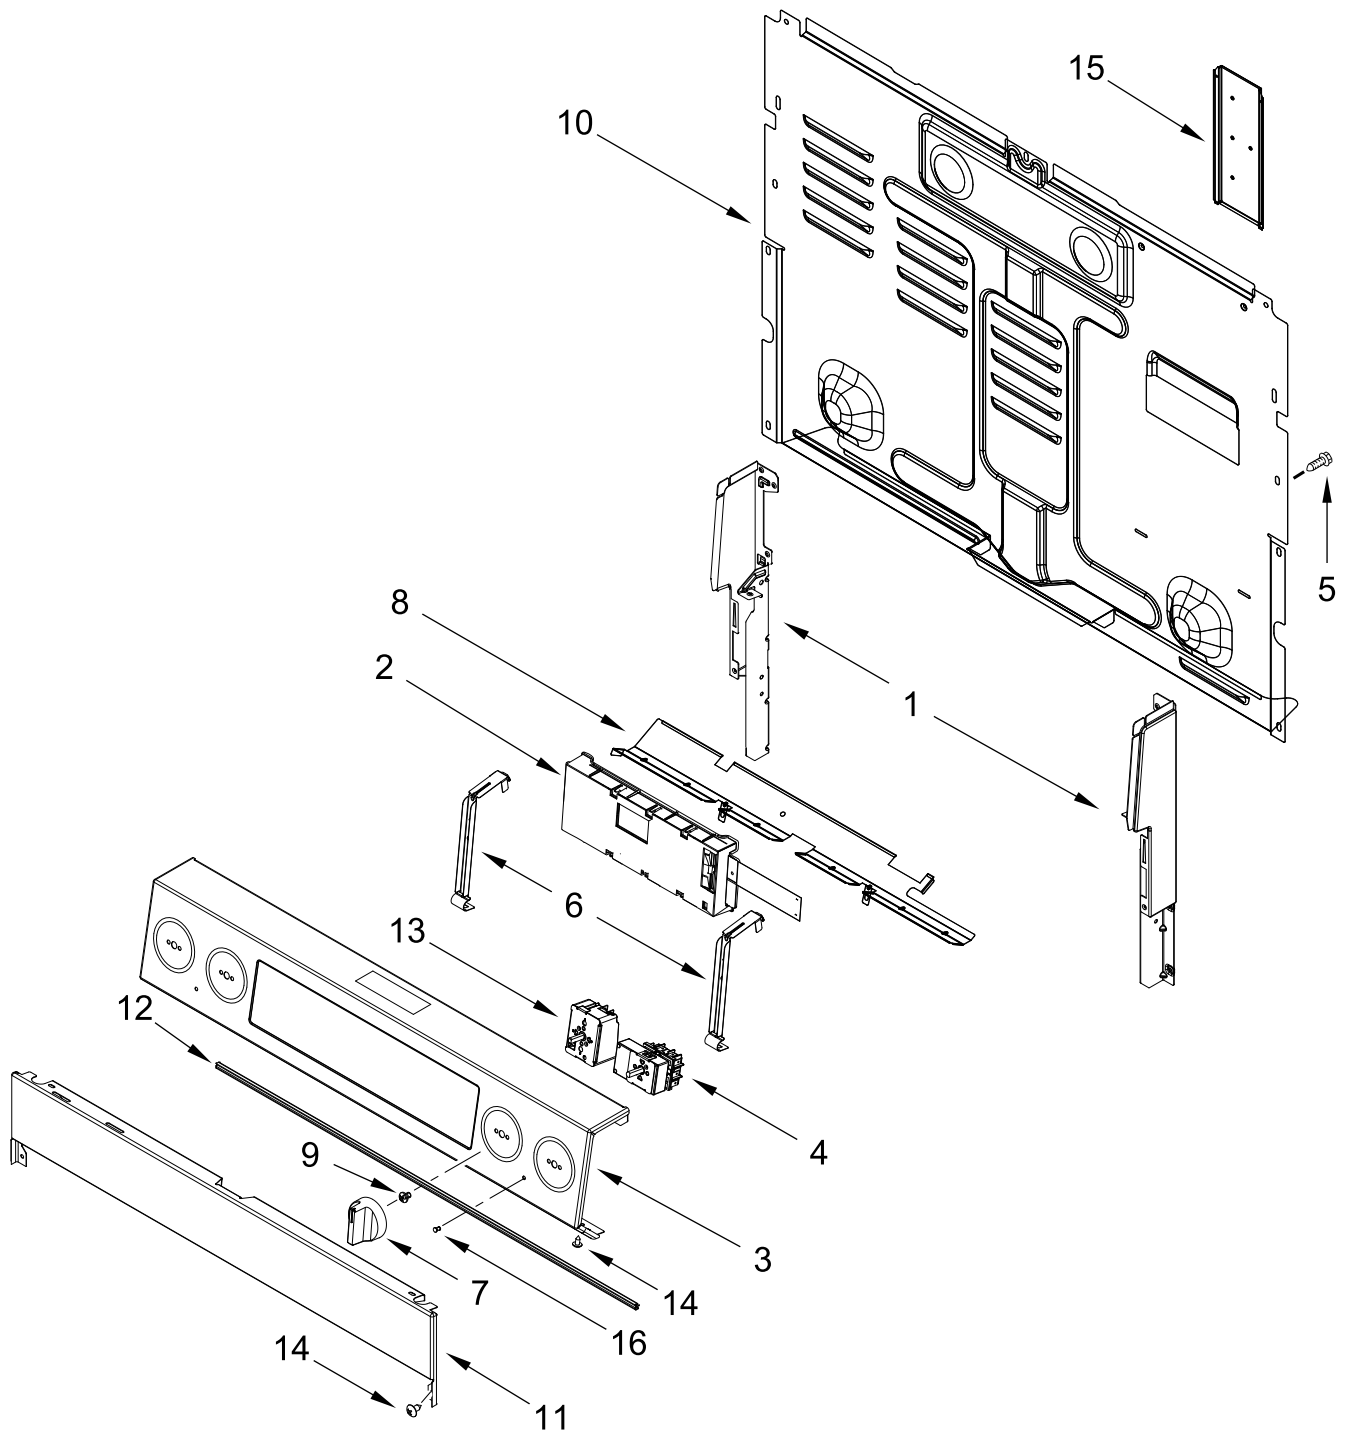

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196178	Screw	13	W10578768	Switch, Infinite
	W11625424	Stainless (Left)	6	W11371599	Bracket, Control			(Left Rear and Right
	W11625421	Stainless (Right)	7		Knob			Rear)
2		Control, Electronic (LCX)		W11584001	Stainless	14	3196169	Screw
	W11637092	Black	8	W11736649	Shield, Heat	15	W11736681	Cover, Rear Flue
3		Panel, Console	9	3400882	Screw	16	3196068	Lens, Indicator
	W11730158	Stainless	10	W11393668	Cover, Upper Rear			
4	W10437092	Switch, Infinite (Left Front and Right Front)	11		Panel, Lower			
				W11625403	Stainless			
			12	W11643797	Gasket, Lower Panel			


# CHASSIS PARTS

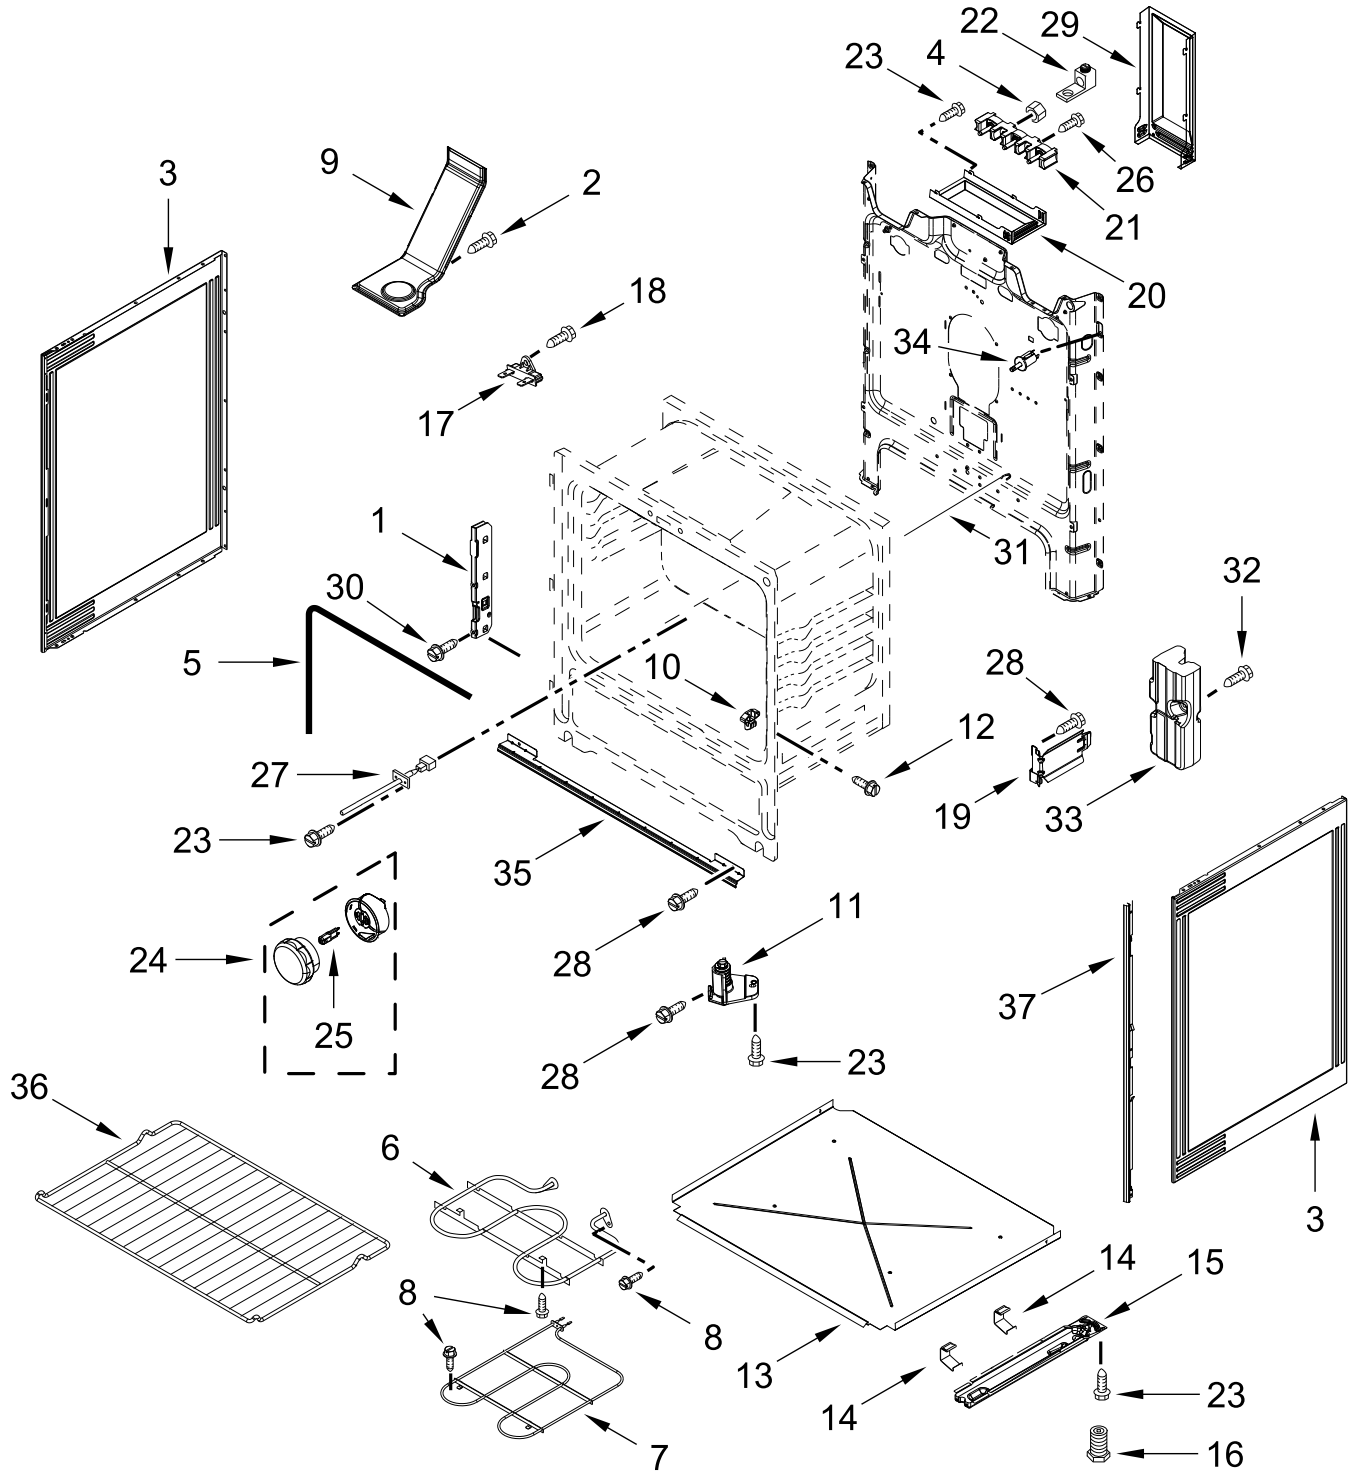

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	32	W11034869	Screw
2	W10362924	Screw	17	3196548	Fuse, Thermal	33	W10910404	Counterweight
3		Panel, Side	18	3196172	Screw	34	W11511828	Switch, Door
	W11445467	Black	19	W10404688	Clip, Oven Support	35	W11464547	Bracket, Front Frame
4	3400029	Nut	20	W11673744	Bracket, Service	36	W11173792	Rack, Oven
5	W10129032	Seal, Door	21	W11750818	Block, Terminal (without Ground Strap)	37	W11510560	Barrier Rail, Rubber (Left and Right)
6	W10308476	Element, Broil						
7	W11111743	Element, Bake	22	W10281322	Kit, Bare Wire Adapter Block			FOLLOWING PARTS NOT ILLUSTRATED
8	3196154	Screw						
9	W11621245	Tube, Vent	23	3196178	Screw		8273263	Insulation, Wrap
10	W10674705	Glide, Drawer Front	24	W11634772	Light Assembly		8272611	Insulation, Back
11	W10341186	Front Foot Assembly	25	W10571723	Bulb, Halogen 40 Watts		W11404469	Insulation, Flue
12	W10067840	Screw						
13	8054068	Retainer, Insulation	26	3400016	Screw			
14	W10137382	Clip, Panel	27	W10586204	Sensor			
15	W10390008	Base Rail Assembly (Left)	28	3196169	Screw			
	W10390007	Base Rail Assembly (Right)	29	W10326122	Cover, Terminal Block			
			30	W10031780	Screw			
			31	9757239	Rod, Door Switch			

# DOOR PARTS

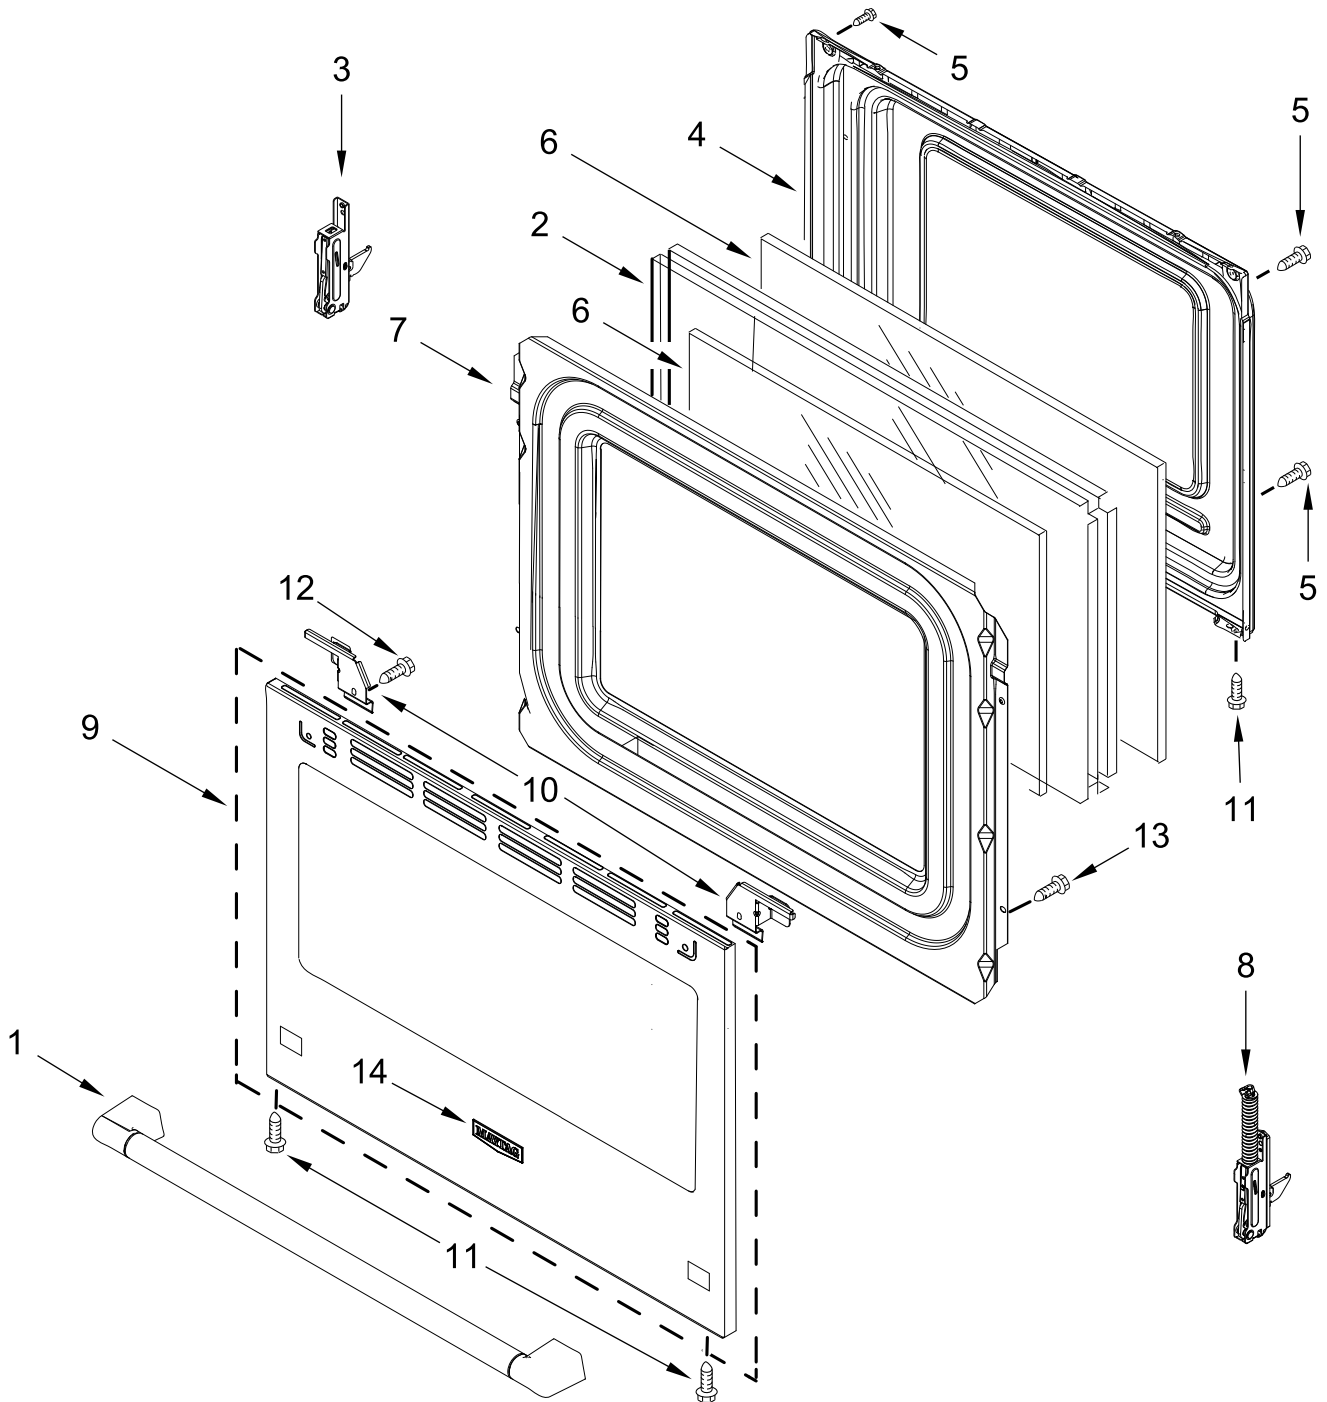




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door	9		Glass Assembly, Outer Door	13	W10031780	Screw
	W11495825	Stainless				14	W11628148	Badge
2	W11353036	Frame, Glass		W11631961	Stainless (Includes Badge)			
3	W10299227	Hinge, Door (Passive)						
4	9761344	Liner, Door	10	W11157607	Bracket, Handle Mount (Right)			
5	W10031790	Screw						
6	W11367326	Glass, Inner		W11417442	Bracket, Handle Mount (Left)			
7	W11380221	Retainer, Insulation	11	W10327235	Screw			
8	W10299226	Hinge, Active	12	3196154	Screw			

# DRAWER PARTS

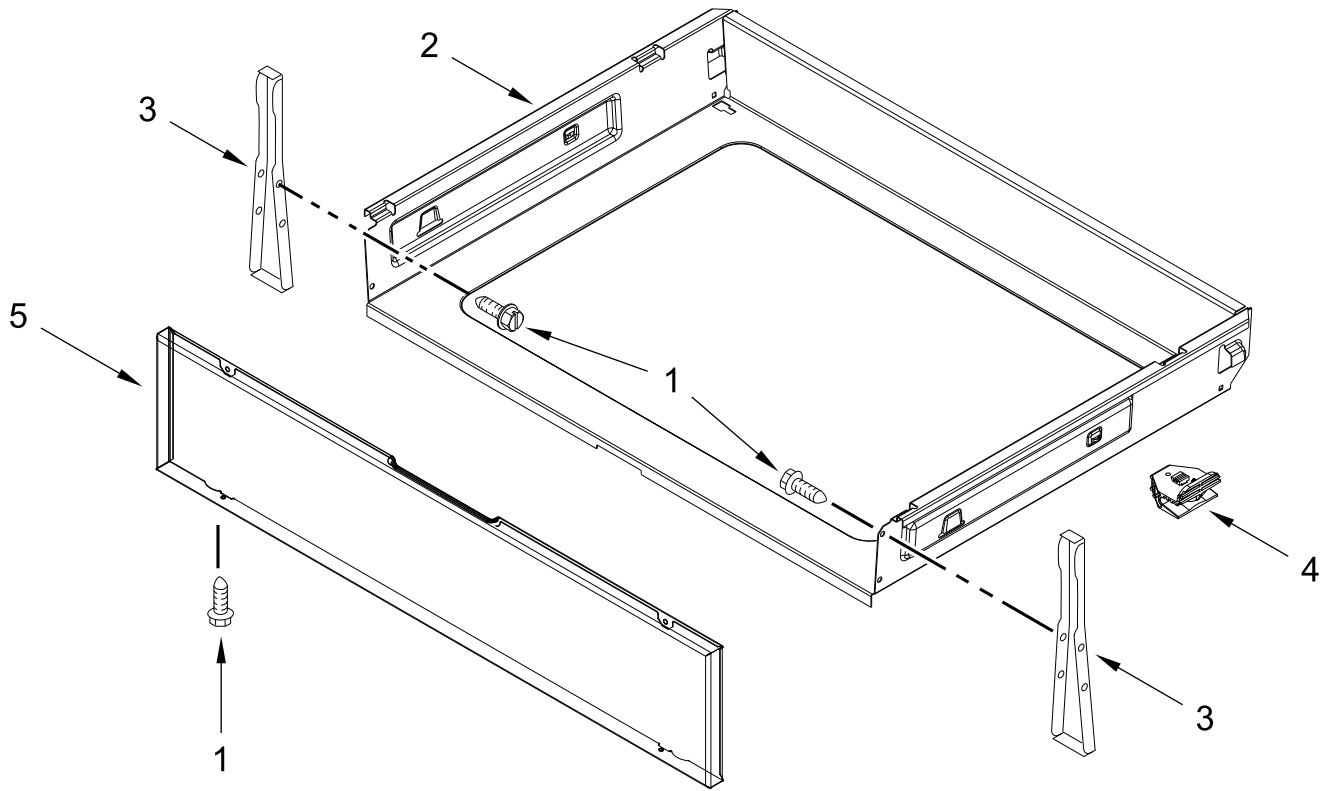

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10462910	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10330070	Stainless

# OPTIONAL PARTS

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W11601635	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting