

 
Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Level:



Hot



Accessory	Functions	Level
	<input checked="" type="checkbox"/> Toast <input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 / 2

* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

 
Consejos de uso de accesorios



Colocar los accesorios en el nivel correcto logrará un mejor rendimiento de cocción. Consulte las recetas en la guía de control en línea.

Nivel:



Caliente



Accesorio	Funciones	Nivel
	<input checked="" type="checkbox"/> Tostar <input checked="" type="checkbox"/> Hornear <input checked="" type="checkbox"/> Asar a la parrilla	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Hornear <input checked="" type="checkbox"/> Asar a la parrilla	0 / 1 0 / 1 / 2

* Cuando cocine alimentos aceitosos o jugosos, coloque una placa para hornear resistente en la parte inferior del horno para recoger las gotas.

IMPORTANTE: No use los accesorios incluidos ni otros utensilios de cocina metálicos con las funciones de microondas, como recalentar, descongelar, ablandar, derretir, mantener caliente y cocinar.