




**GAS RANGE**

**MODELS:**

WEG750H0HV7 (Black Stainless)


# COOKTOP PARTS

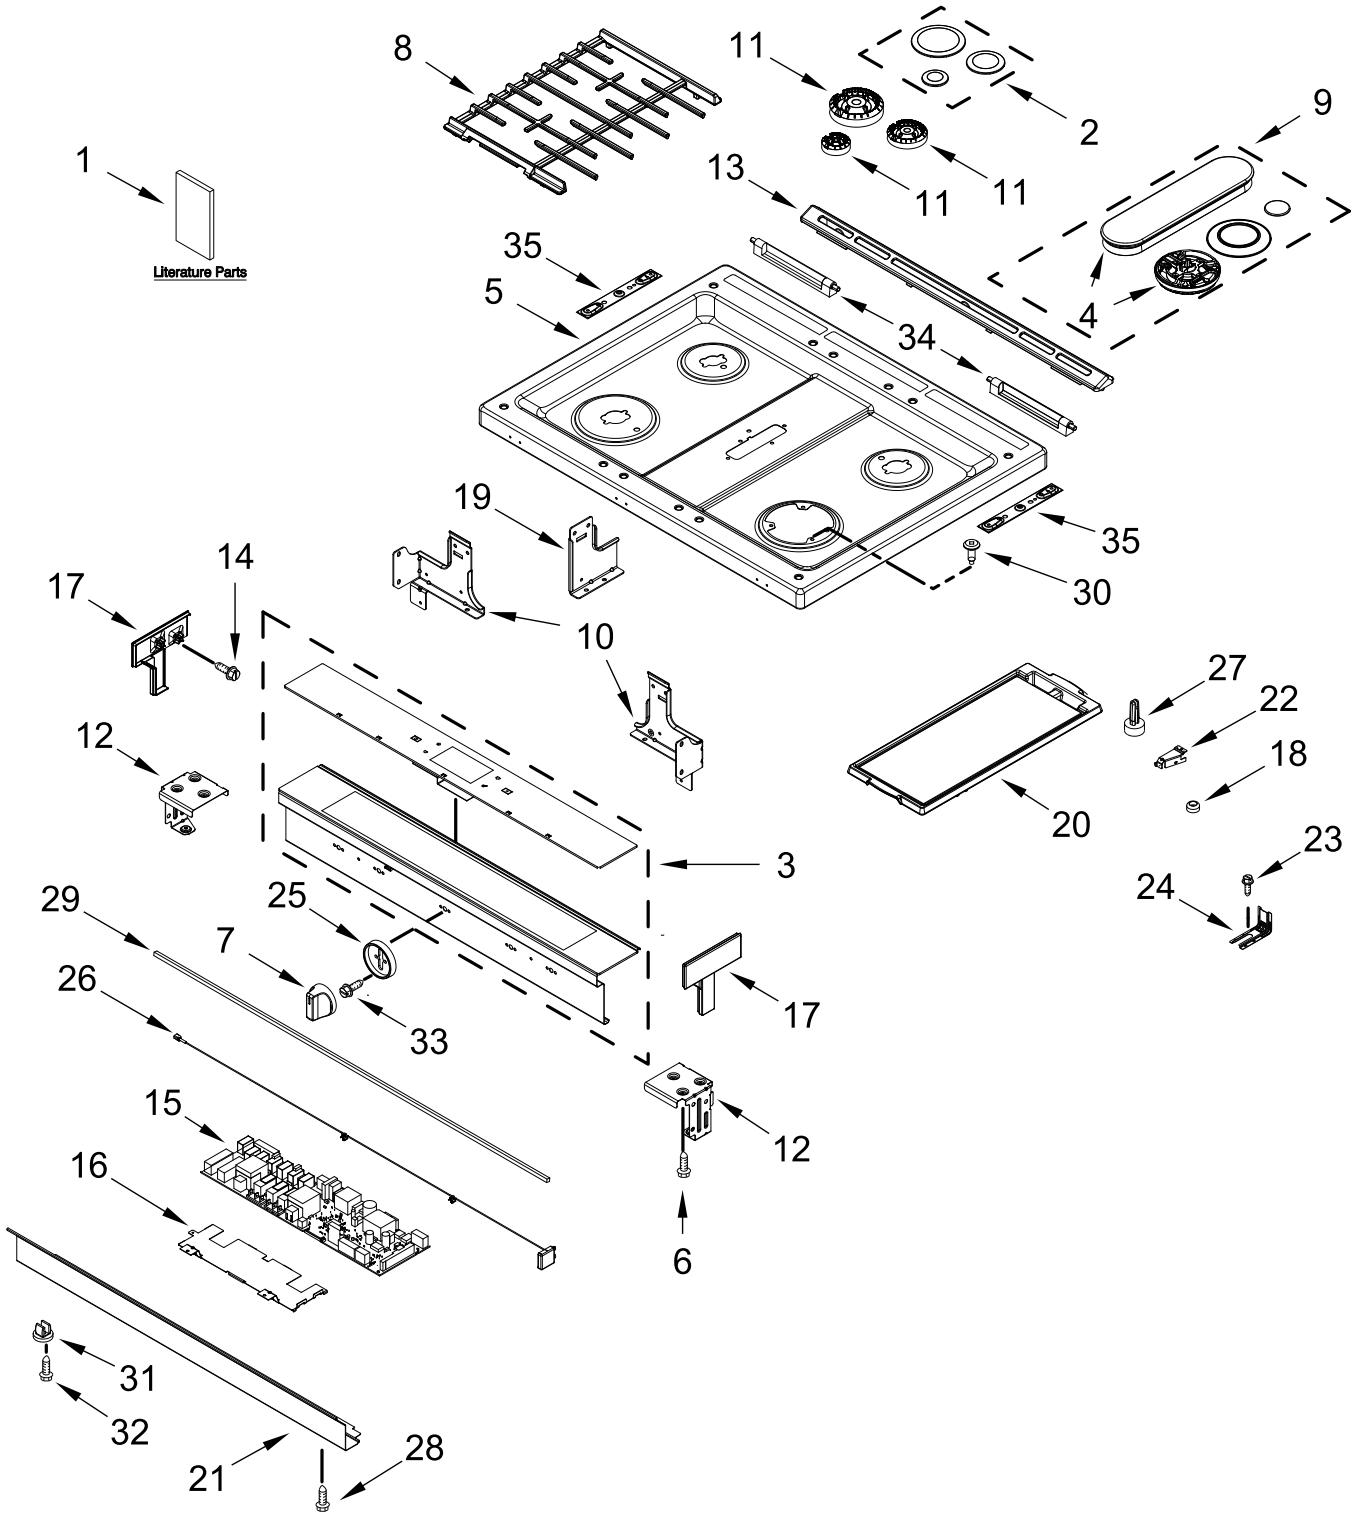

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10867593	Support, Cooktop (Left)	22	W10162253	Brace, Corner (Left)
	W11498994	Owners Manual		W10867592	Support, Cooktop (Right)		W10162252	Brace, Corner (Right)
	W11428052	Quick Start Guide				23	7101P485-60	Screw, Anti-Tip Kit
	W11565459	Tech Sheet	11	W11352193	Flame Spreader (Left Front)	24	W11379947	Bracket, Anti-Tip
2		Caps, Burner		W11352195	Flame Spreader (Left Rear)	25		Bezel
	W11498501	Black (Set of 3) (Left Front, Left Rear, Right Rear)		W11352197	Flame Spreader (Right Rear)		W10906021	Black Stainless
3		Console	12	W10828159	Base, Console (Left)	26	W11516200	Antenna
	W11295850	Black Stainless		W10828160	Base, Console (Right)	27	8016P022-60	Glide, Main Top
4	W10867781	Spreader, Flame (Right Front)				28	3196178	Screw
	W11357364	Spreader, Flame (Fish) (Center)	13		Trim, Vent	29	W10612719	Gasket, Console and Cooktop
		Cooktop		W10577781	Black	30	W11103318	Screw
5	W11511787	Black	14	9780274	Screw	31	W10645947	Grommet
6	3196160	Screw	15	W11543343	Control, Electronic (Powermax)	32	W10516115	Screw
7		Knob	16	W10908536	Bracket, Control	33	W10919387	Screw
	W10906402	Black Stainless	17		Endcap	34	W10826075	Rear, Hinge-Grate
8		Grate Kit (Includes 2 Grates)		W10913756	Black Stainless (Left)	35	W10879790	Grate Hinge Spacer
	W11160332	Black		W10913757	Black Stainless (Right)			FOLLOWING PARTS NOT ILLUSTRATED
9	W11495472	Spreader, Flame Kit (Includes Burner Caps) (Right Front and Center)	18	W10854253	Bumper		W11456871	Harness, Main
			19	W10867600	Bracket, Console (Center)		W10754419	Harness, Bake and Broil
			20	W11043399	Griddle		313438	Clip, Harness
			21		Console, Lower Panel		3196520	Clip, Wire
				W10899344	Black		7111P017-60	Clamp, Wire
							W10580229	Wire, Ground


# CHASSIS PARTS

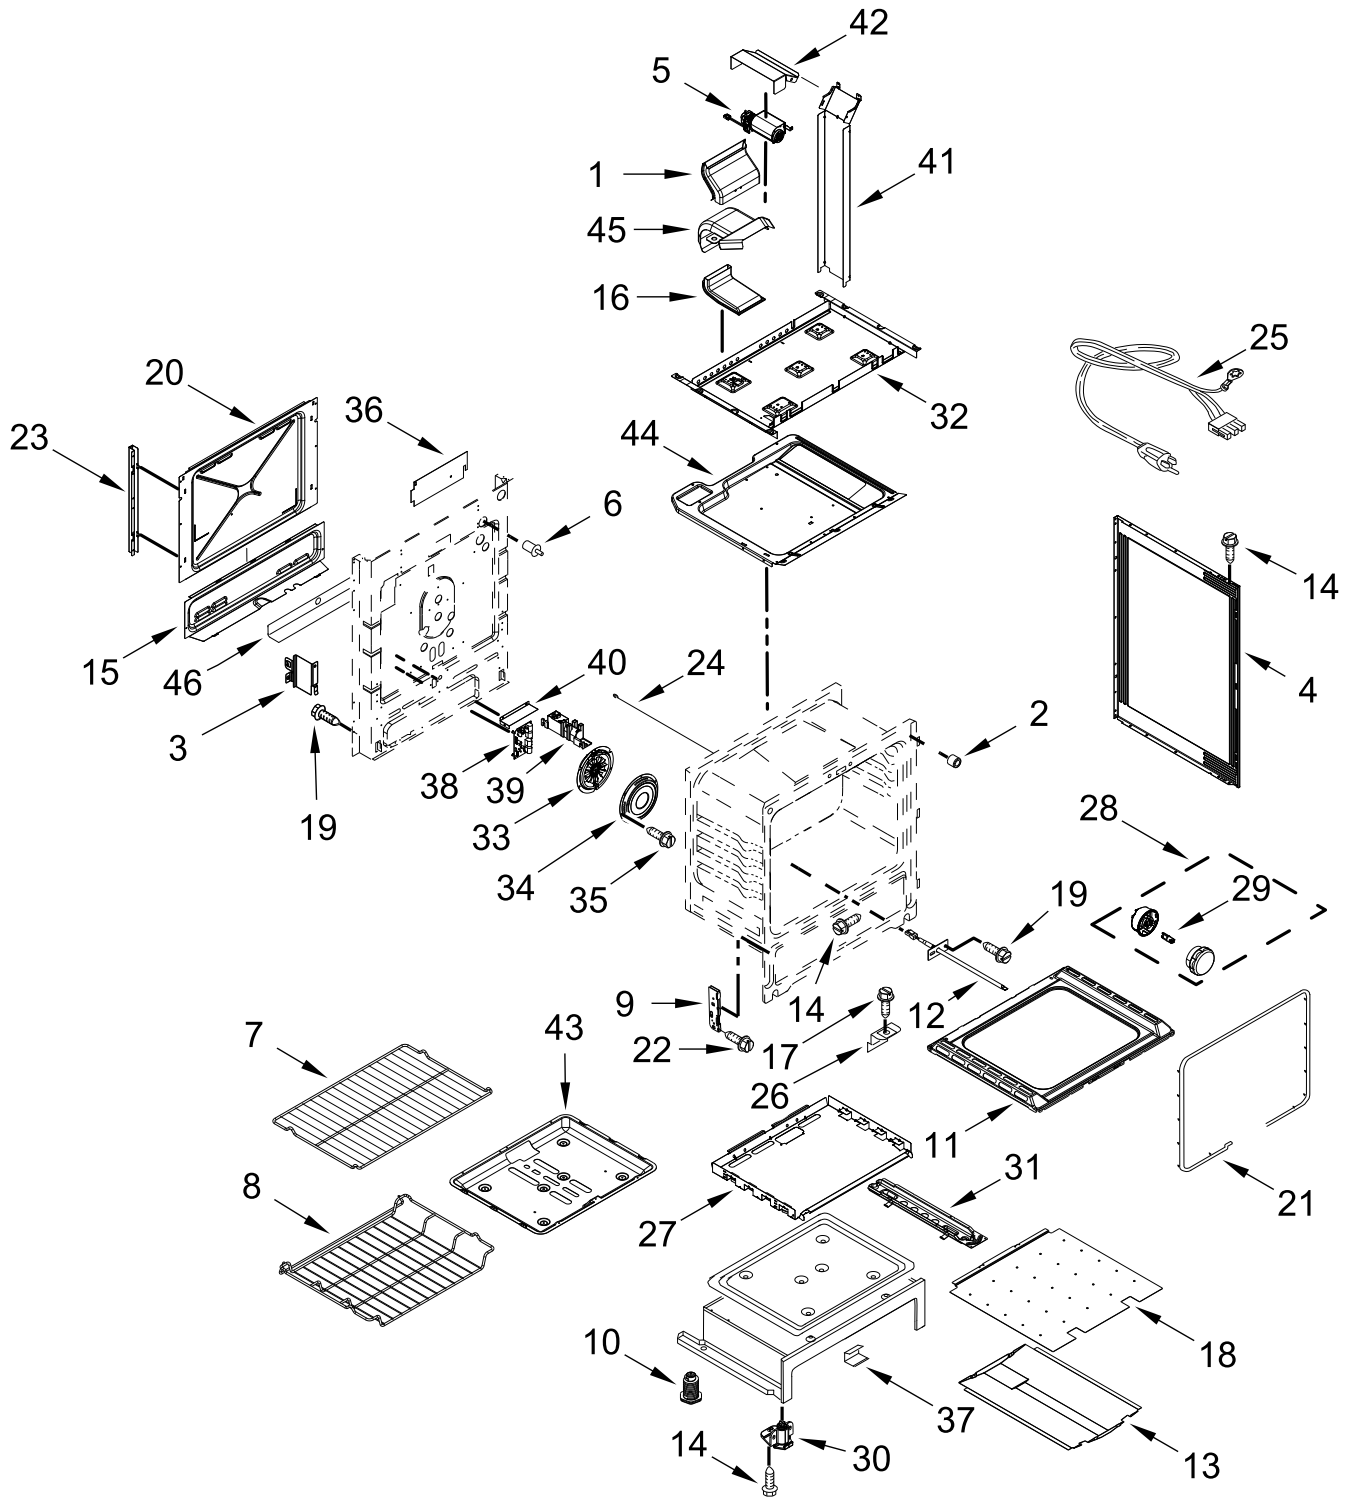

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	21	W11491752	Gasket, Door	39	W11350452	Spark Module
2	9758701	Spacer, Door	22	W10031780	Screw	40	W11206138	Guard, Splash
3	W10273002	Bracket, Oven Support	23	W10162241	Channel, Rear	41	W10162254	Duct, Cooling
4		Panel, Side	24	W10273192	Rod, Door Switch	42	W10162255	Duct, Cover
	W11445467	Black	25	W10910642	Cord, Power	43	W11379356	Pan, Bake
5	W11467246	Cooling Fan	26	W10035900	Support, Oven Bottom	44	W10289168	Box, Burner SI
6	W11511828	Switch, Door	27	W10541959	Shield, Bake	45	W10162257	Duct, Cooktop
7	W10531060	Rack, Oven	28	W11634772	Light Assembly	46	W10435470	Brace, Main Back
8	W10289145	Rack, Oven (Gull-Wing)	29	W10571723	Bulb, Halogen 40 Watts			FOLLOWING PARTS NOT ILLUSTRATED
9	W10289077	Receiver, Hinge	30	W10341186	Front Foot Assembly	4820F015-59		Insulation, Strap
10	W10058460	Foot, Leveling	31	W10390008	Base Rail Assembly (Left)	W10289173		Insulation, Wrap
11	W10211368	Bottom, Oven		W10390007	Base Rail Assembly (Right)	W10162240		Insulation, Back
12	W10586204	Sensor				3196896		Clip, Wire
13	3601P356-45	Baffle, Bake Burner	32	W11216156	Box, Burner	W11504279		Kit, LP 5 Orifice Conversion
14	3196178	Screw	33	W11353926	Convection Assembly	W10566535		LP Conversion Kit (Bake and Broil)
15	W10162249	Cover, Wire	34	W10346154	Cover, Convection	W10400494		Orifice, LP Bake
16	W11040249	Assembly, Flue (Upper)	35	W10362924	Screw	W10465078		Orifice, LP Broil
17	W10362924	Screw	36	W10818358	Shield, Wire			
18	W10323077	Diffuser, Flame	37	W10137382	Clip, Panel			
19	3196178	Screw	38	W10457998	Module, Spark (0 plus 2)			
20	W11379355	Cover, Back						


# MANIFOLD PARTS

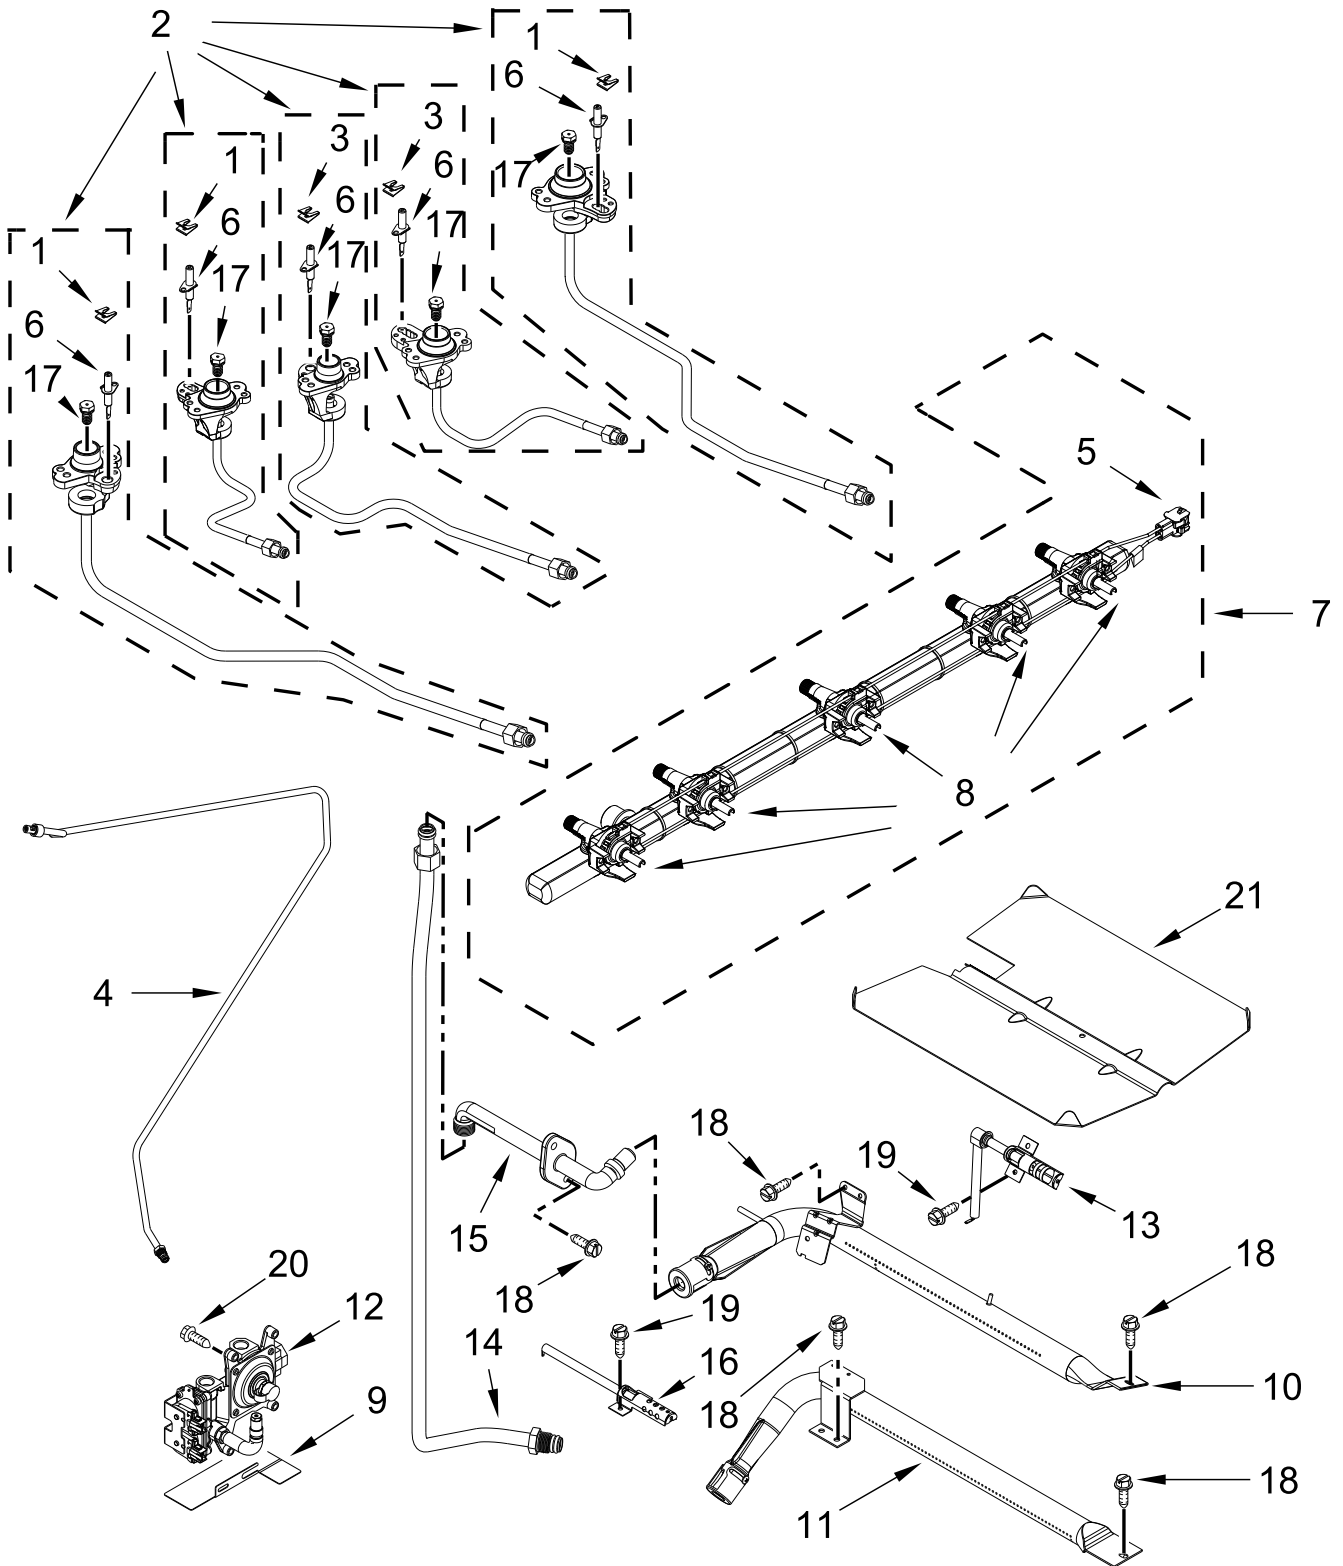

# MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10827923	Electrode, Spring	6	W10669526	Electrode, Burner	16	W10333842	Electrode, Broil
2	W10867777	Assembly, Orifice (Left Front) (Includes Orifice)			(Left Front, Left Rear)	17	W10849722	Orifice (18K) (Left Front) Orifice, Not Serviced
	W10867779	Assembly, Orifice (Left Rear) (Includes Orifice)		W10669524	Electrode, Burner (Center)		W10849719	Orifice (5K) (Left Rear) Orifice, Not Serviced
	W10867780	Assembly, Orifice (Right Front) (Includes Orifice)		W11084034	Electrode, Burner (Right Front)		W10672111	Orifice (1.65MM) (Right Front) Orifice, Not Serviced
	W10867778	Assembly, Orifice (Right Rear) (Includes Orifice)	7	W11504626	Assembly, Manifold		W10849714	Orifice (9.5K) (Right Rear) Orifice, Not Serviced
	W11498076	Assembly, Orifice (Center) (Includes Orifice)	8	W11259513	Valve, Gas (Right Rear)		W10907868	Orifice (10K) (Center) Orifice, Not Serviced
3	W11084050	Clip, Electrode		W11259514	Valve, Gas (Left Rear)			
4	W11107282	Tube, Supply		W11259404	Valve, Gas (Left Front, Right Front, Center)	18	3196178	Screw
5	W10885903	Harness, Spark Switch	9	W10224921	Bracket, Aegis	19	3196385	Screw
			10	W10439242	Burner, Broiler	20	3400016	Screw
			11	W10680035	Burner, Bake	21	3601P336-45	Baffle, Broil Burner
			12	W10554066	Valve, Regulator			
			13	W10324262	Igniter, Bake			
			14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)			
			15	W10583216	Fitting, Broil Burner			

# DOOR PARTS

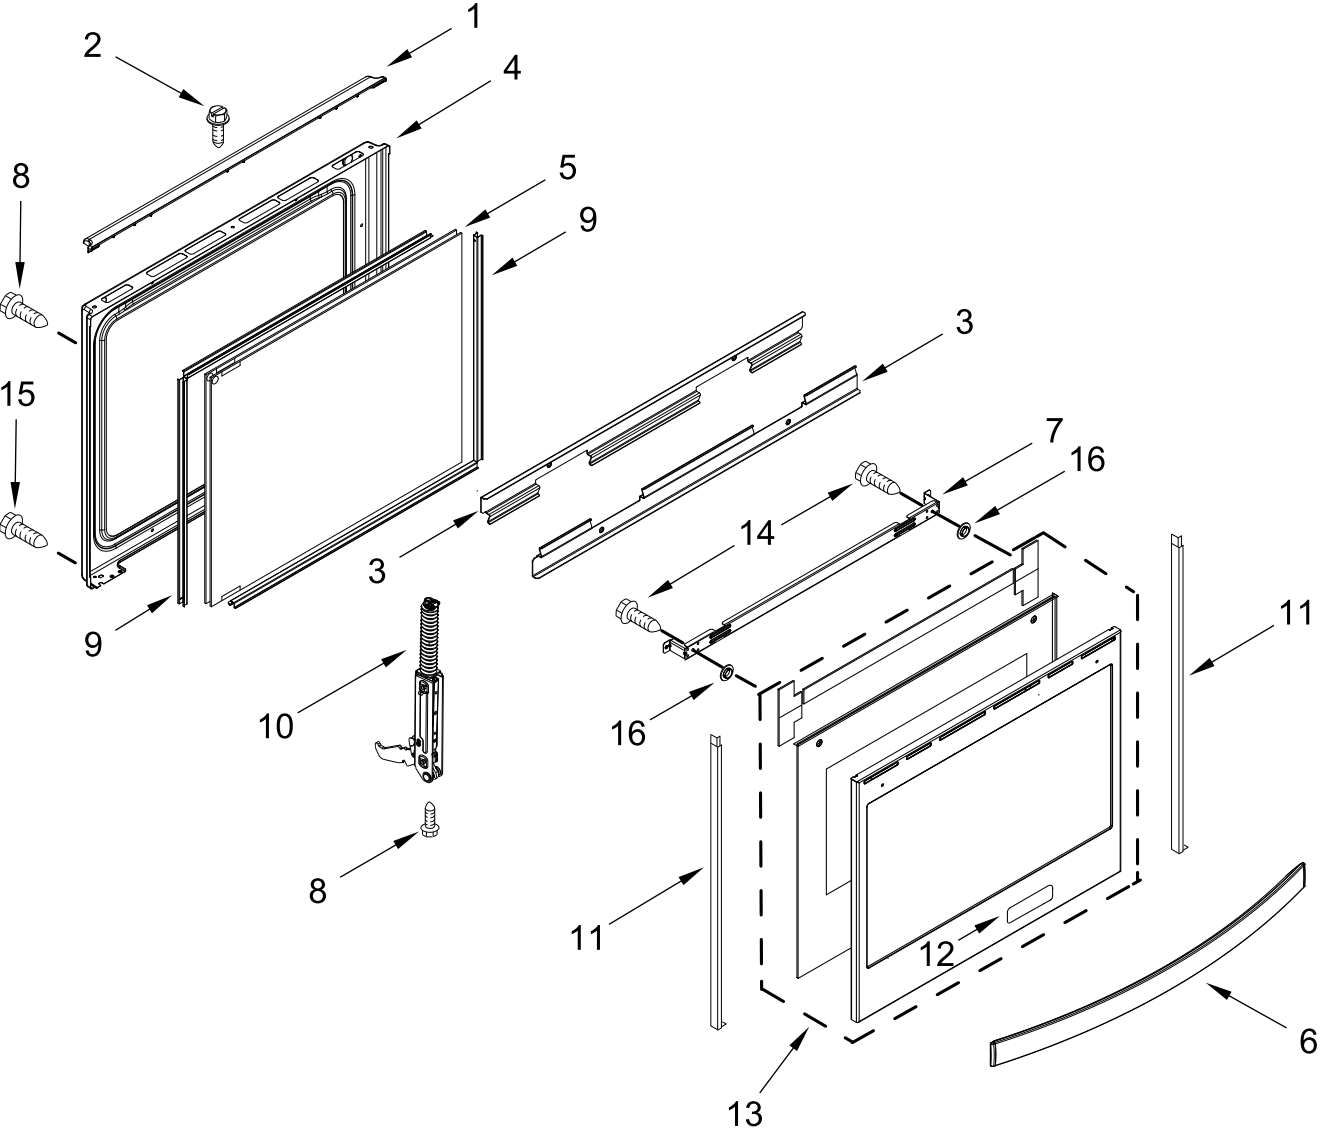




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2	3196184	Screw
3	W10813140	Rail, Horizontal Support
4	W10826568	Liner, Door
5	W11223202	Glass, Inner
6		Handle, Door
	W10903342	Black Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10541911	Bracket, Glass Upper Handle
8	W10031790	Screw
9	W11379948	Glass Spacer
10	W10885519	Hinge, Door (Active)
11	W10813139	Rail, Vertical Support
12	W10884775	Badge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13		Glass, Outer
	W10888239	Black Stainless
14	W11091878	Screw
15	W10031780	Screw
16	W10319024	Washer, Door

# DRAWER PARTS

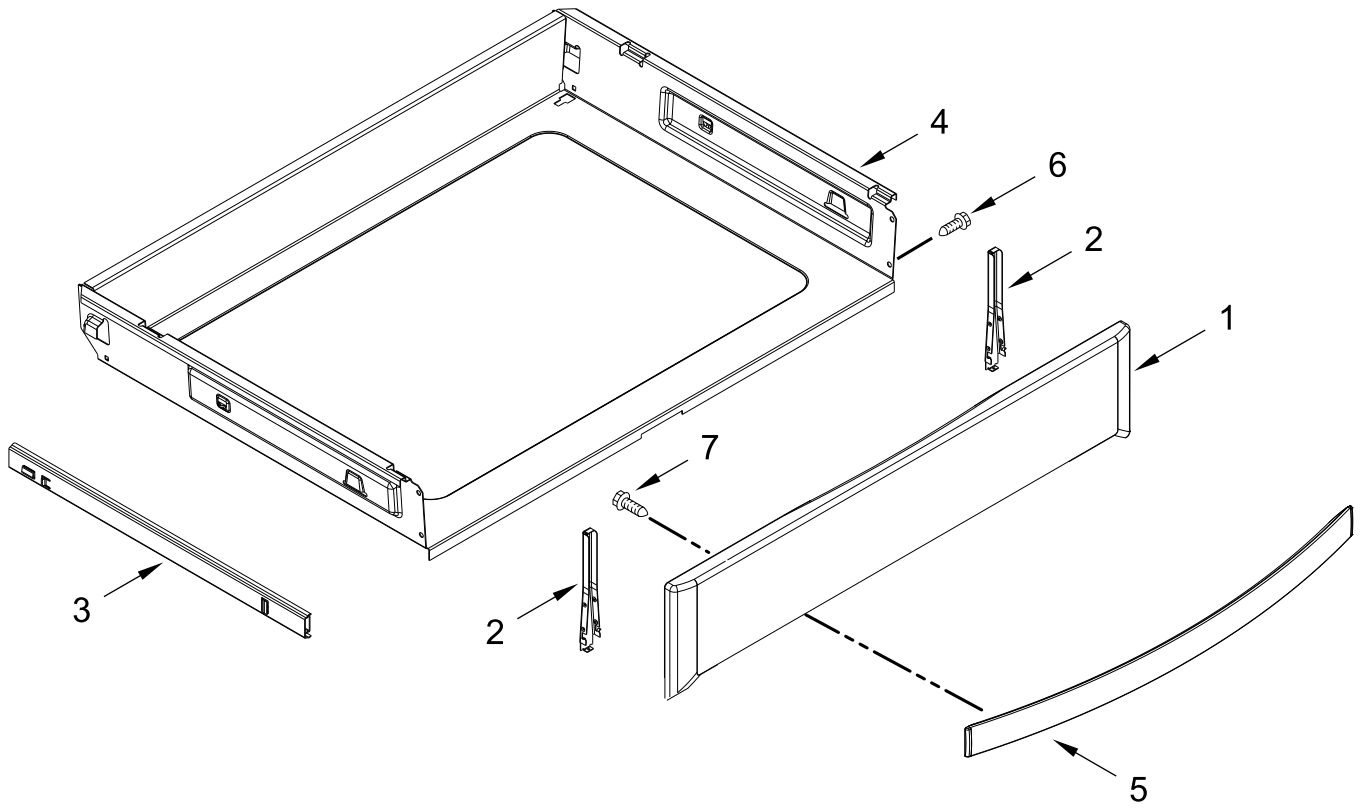

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10441804	Slide, Drawer (Left)	5		Handle, Drawer
	W11449756	Black Stainless		W10441805	Slide, Drawer (Right)		W10903342	Black Stainless
2	W10318026	Bracket, Mounting	4	W10688022	Drawer, Storage	6	3196169	Screw
						7	W10498399	Screw

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		REFINISHING MATERIAL		285006	Black		W10432545	Kit, Grill
				350939	Enamel, Black		W10432019	Alt Cleaning Kit
242756		Oven Liner Touch Up Paint		350930	White			ASSEMBLY, TRIM (INCLUDES BLIND THREADED INSERT)
				350942	White Primer PAINT, BULK (1 qt.)			(5/8 in)
		INSULATION		799344	White (Uncut)		W10675026	Black
261514		Insulation (1-1/2 x 24 x 120 in)			ACCESSORY PARTS		W10675027	White
240132		Insulation (2-1/2 x 22 x 120 in)		31605	Kit, Cooktop Care		W10675028	Stainless (1 1/8 in)
		PAINT, TOUCH-UP (1/2oz.)		W10355016	Cleaner, Stainless Steel		W10731886	Black
72032		Black		W10355051	Cleaner, Cooktop		W10731885	White
72017		White		W10391473	Pad, Cooktop Cleaning		W10731887	Stainless
511873		White Porcelain (2 oz.)		WA906B	Scraper, Cooktop			ASSEMBLY, BACKSPLASH
		PAINT, PRESSURIZED SPRAY (12 oz.)		4396923	Broiler Pan and Grid		W10655449	Black
				W10123240	Rack, Broiler Pan and Roasting		W10655448	White
							W10655450	Stainless