




ELECTRIC DRYER

MODELS:

WED5010LW1 (White)


TOP AND CONSOLE PARTS

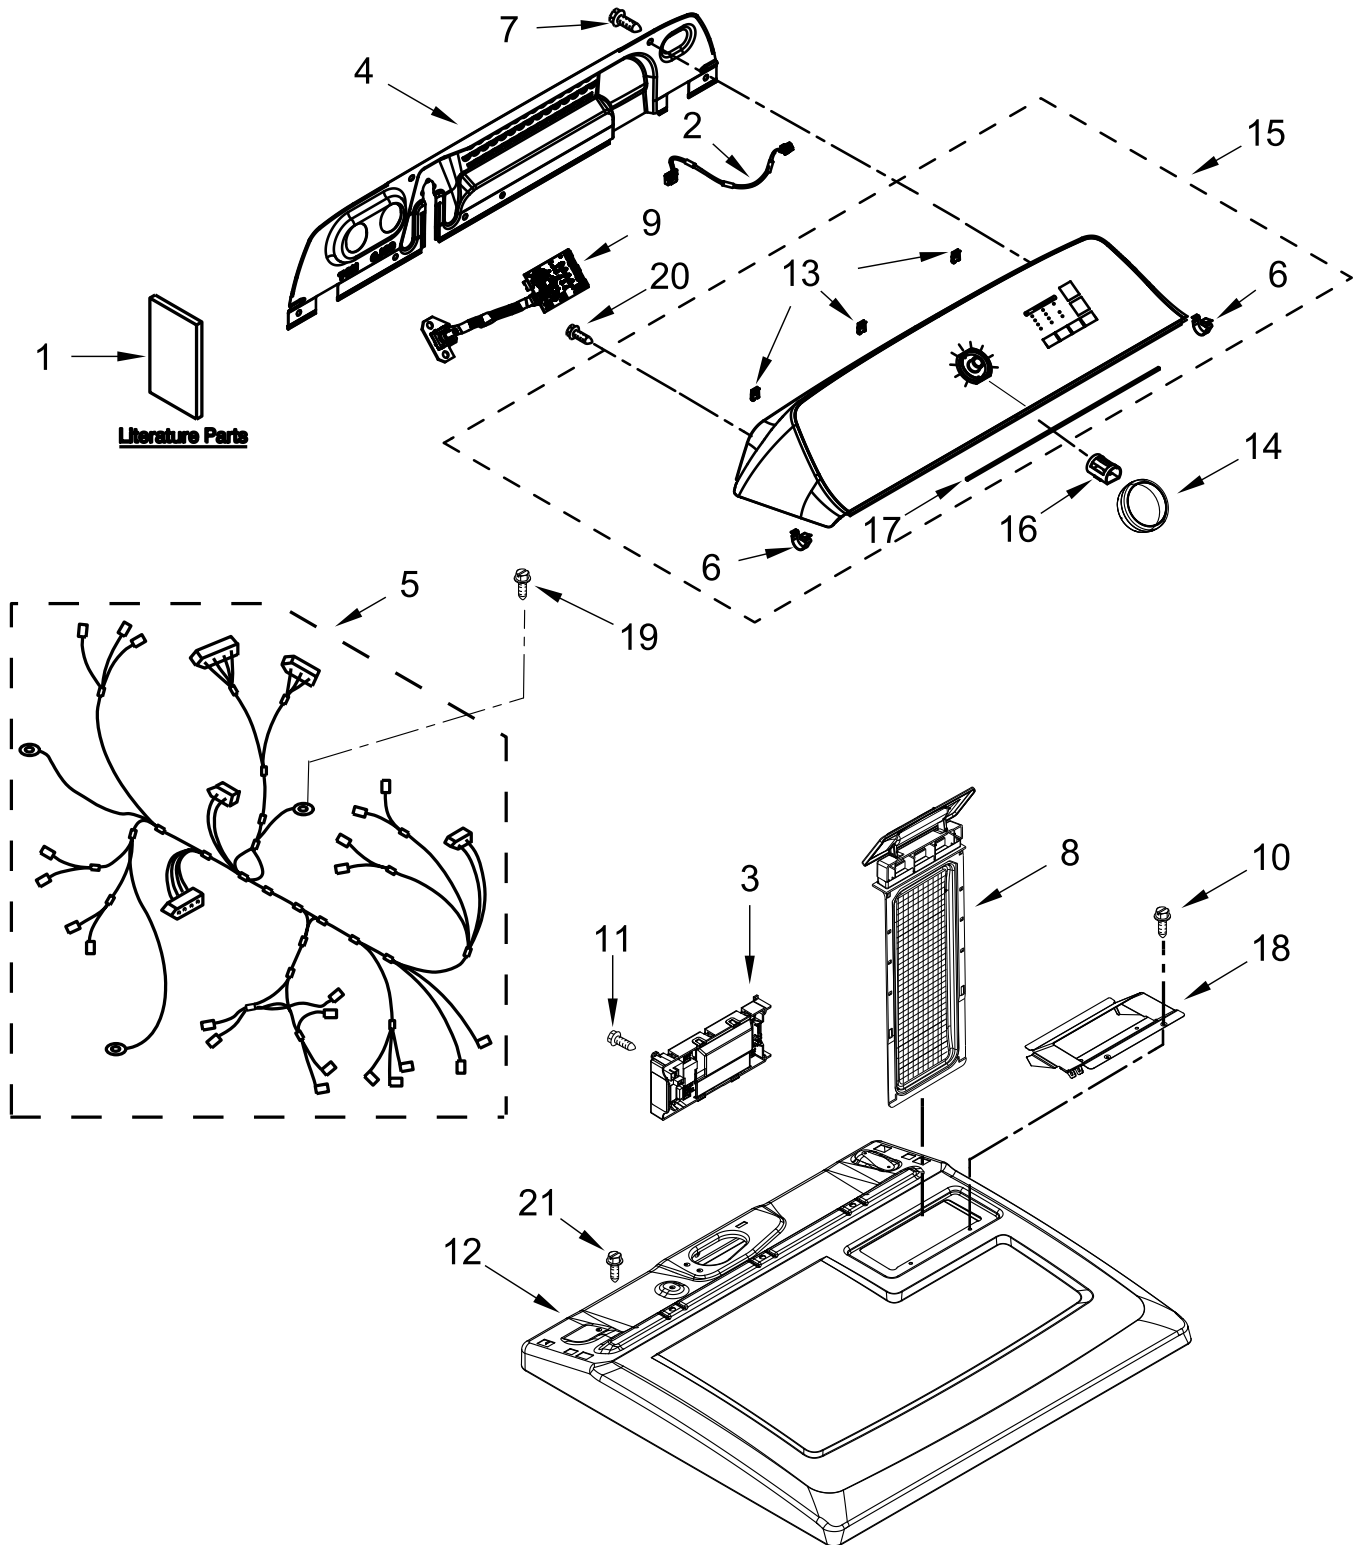

TOP AND CONSOLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Lint Screen	15		Assembly, Console
	W11364660	Owners Manual		W11451393	White		W11394091	White
	W11565129	Tech Sheet	9	W11374901	Encoder, Mega Assembly	16	688805	Clip, Spring
	W11423864	Quick Start Guide				17	W10726632	Seal, Console
2	W11469485	HMI Harness	10	688983	Screw	18	W10662472	Collar, Lint Chute
3	W11581956	Appliance Control Unit (ACU)	11	3348629	Screw	19	W10773242	Screw
4	W10775189	Panel, Rear	12		Top	20	9740848	Screw
5	W11448299	Harness, Main		W10613389	White	21	343641	Screw
6	8312709	Clip, Console	13	W10298336	Nut, "U"			
7	693995	Screw	14	W11430050	Knob Assembly			


CABINET PARTS

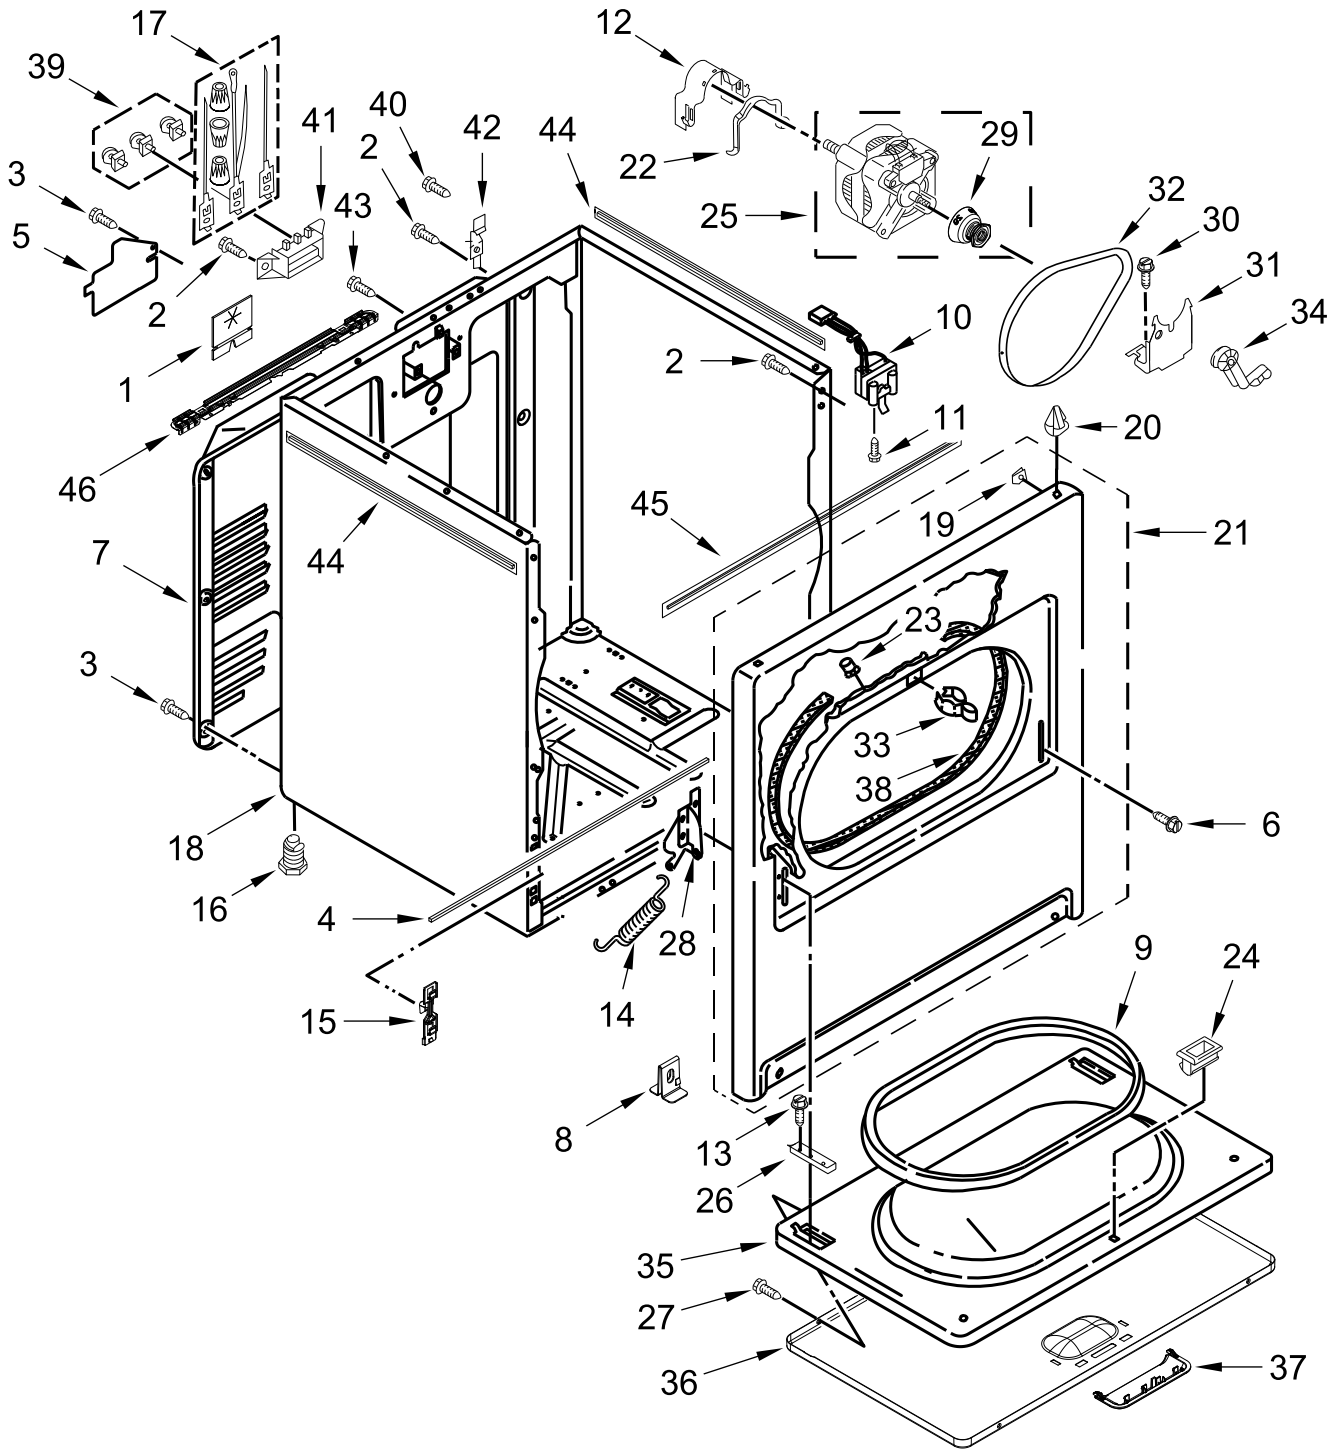

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11198597	Pad, Power Cord	18		Cabinet	34	691366	Idler Assembly
2	3390631	Screw		8530603	White	35	695737	Door, Rear
3	693995	Screw	19	98234	Clip, Ground	36		Door, Front
4	W10841728	Seal, Spill Guard	20	8066092	Lock, Front Top		W10714515	White
5	W11219688	Cover, Terminal Block	21		Panel, Front	37		Handle, Door
6	342043	Screw		W10664693	White		W10714516	White
7	W10571724	Panel, Rear	22	W10121316	Clamp, Motor Mount	38	W10803476	Assembly, Seal and Bearing
8	W10575896	Clip, Spring	23	685203	Clip, Felt Pad	39	3393008	Screw
9	W10823580	Seal, Door	24	3389441	Assembly, Door Catch	40	343641	Screw
10	W10569603	Switch, Door	25	W10396029	Assembly, Motor	41	3397659	Block, Terminal
11	697773	Screw	26	337189	Clip, Hinge	42	W10641296	Hinge, Top
12	3404162	Clamp, Motor (With Shield)	27	342055	Screw	43	W10773242	Screw
13	3357011	Screw	28	8066056	Hinge, Door (Right)	44	W10316529	Seal, Foam
14	W10041960	Spring, Door		8066057	Hinge, Door (Left)	45	W10316619	Seal, Spill Guard
15	W10775448	Clip, Front Panel	29	8066184	Pulley, Motor	46	W10641295	Bracket, Rear
16	W10561321	Foot, Dryer	30	3400500	Bolt			
17	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)	31	348780	Base, Motor			
			32	W10131364	Belt, Drive			
			33	696144	Strike, Door			

BULKHEAD PARTS

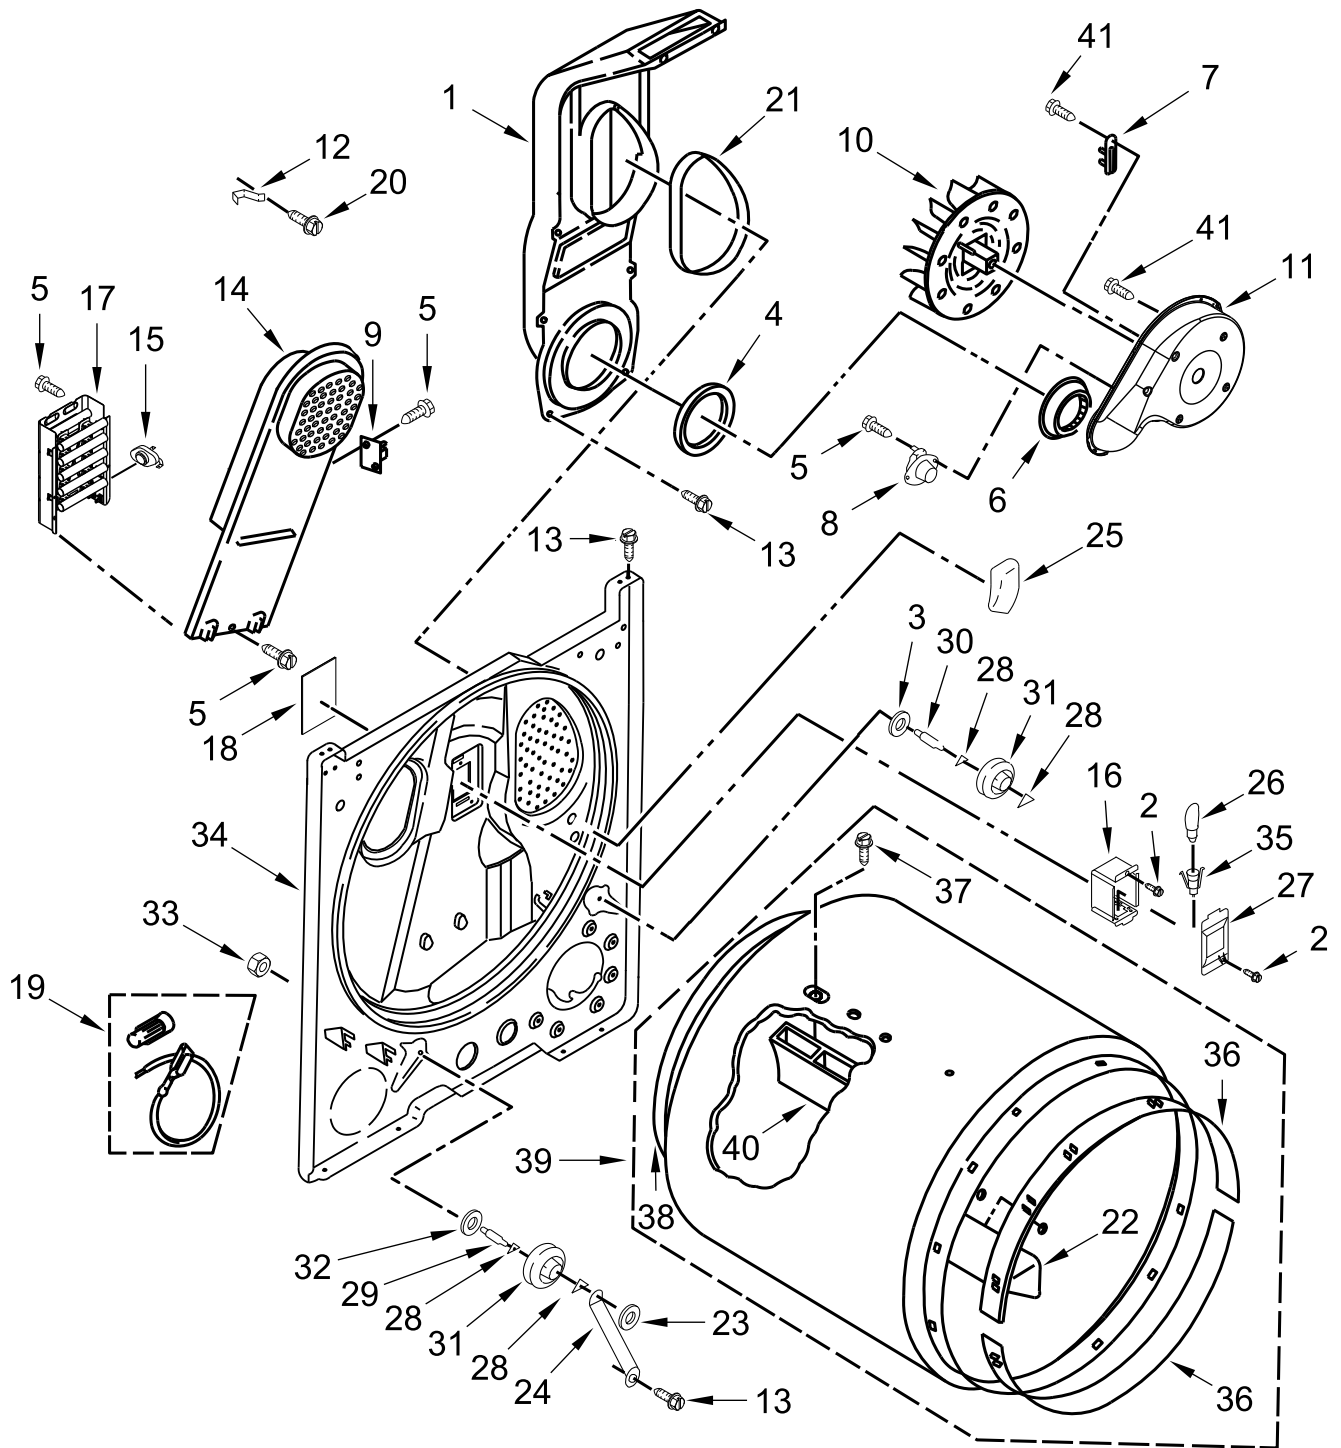

BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10798023	Assembly, Lint Chute	16	3977373	Bracket, Drum Light	30	W10359269	Shaft, Drum Roller - Right Hand Thread
2	3390647	Screw	17	W10724237	Element, Heater	31	3397590	Roller, Support
3	3388703	Washer	18	W10653662	Pad, Foam	32	348197	Washer
4	347139	Seal, Lint Chute	19	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	33	W10298789	Nut, Hex
5	3348629	Screw				34	W10714469	Bulkhead
6	W10389567	Shield, Exhaust	20	489463	Screw	35	W10214261	Socket, Light
7	3392519	Fuse, Thermal (91C)	21	339956	Seal	36	692526	Bearing, Ring
8	8577274	Thermistor	22	3403636	Baffle, Drum (Short)	37	W10219342	Screw
9	W10900067	Kit, Thermal Cut-Off (Includes Thermostat)	23	90296	Nut, Push On	38	W10856781	Seal, Rear Drum
10	694089	Wheel, Blower	24	W11032820	Bracket, Support	39	W10757750	Assembly, Drum (Complete)
11	8577230	Housing, Blower	25	W11424720	Pad, Sensor	40	692490	Baffle, Drum (Long)
12	3398161	Clip, Heater Box	26	3406124	Bulb, Light	41	90767	Screw
13	343641	Screw	27	3402841	Lens, Drum Light			
14	W11338355	Box, Heater	28	W10512946	Washer, Tri Ring			
15	3977767	Thermostat, 221 F (105 C)	29	W10359270	Shaft, Drum Roller - Left Hand Thread			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
-------------------	-----------------	--------------------

	72017	White
--	-------	-------

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
-------------------	-----------------	--------------------

	350930	White
	350938	Gray Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
-------------------	-----------------	--------------------

	799344	White (Uncut)
--	--------	---------------

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
-------------------	-----------------	--------------------

	279948	Kit, Dryer Repair
	346764	Kit, Hold Down
	8522199	Kit, Dryer Vent Testing
	W10322470A	Dry Rack
	W10676169	BAG ASSEMBLY, INCLUDES THE FOLLOWING:
	W10439655	Hose, Inlet (2')
	3976300	Washer, Inlet Hose
	W10336486	Connector, Hose -"Y"
	W10242307	Washer, Hose

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
-------------------	-----------------	--------------------

	80047	Kit, Dryer Repair
	3406839	Dry Rack
		Power Cords
	PT600L	6', 30 Amp, 4 Wire, Dryer Cord
	PT400L	4', 30 Amp, 4 Wire, Dryer Cord
	PT220L	4', 30 Amp, 3 Wire, Dryer Cord
	W10242307	Washer, Hose
	W10336486	Connector, Hose -"Y"
	3976300	Washer, Inlet Hose