




GAS RANGE

MODELS:

MGR6600PZ0 (Stainless)


COOKTOP PARTS

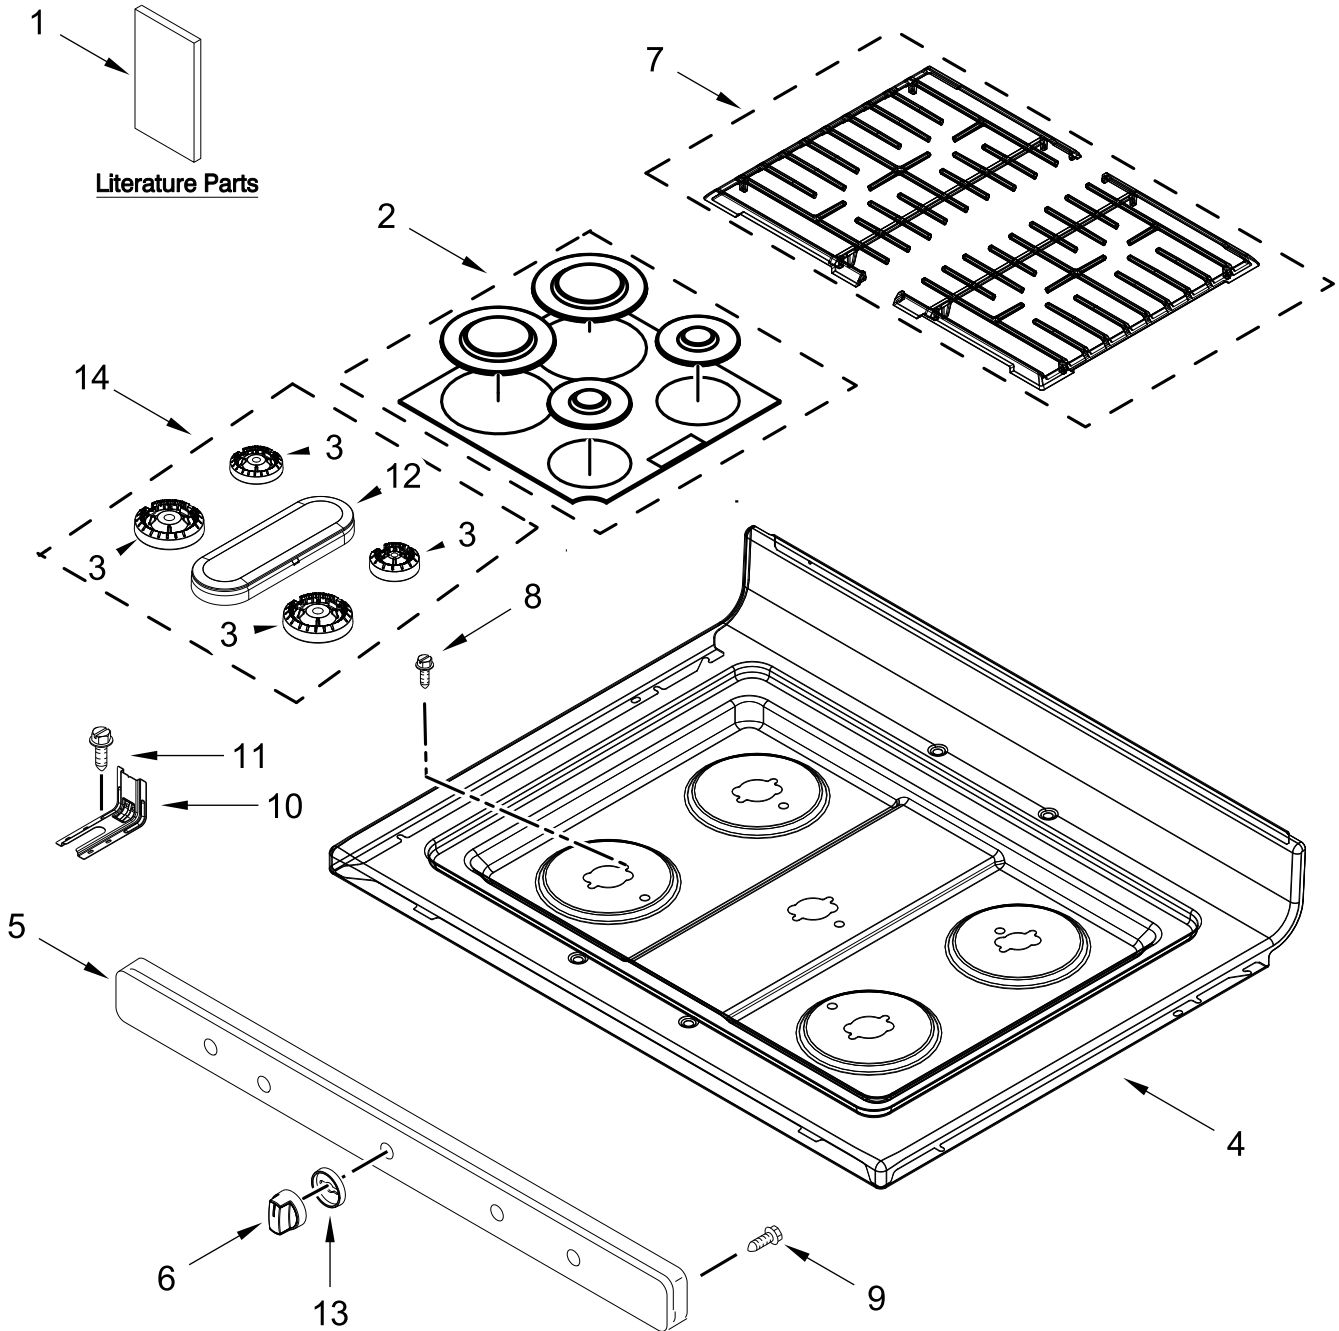

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	14	W11368533	Burner Kit
	W11651766	Quick Start Guide		W11418086	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11450808	Owners Manual	5		Panel, Manifold		W11457167	Harness, Main
	W11642952	Tech Sheet		W10861559	Stainless		W11450461	Harness, Bake and Broil
2		Burner Cap Kit	6		Knob, Control		313438	Clip, Harness
	W11498499	Black (Set of 4)		W11641208	Black		W11537754	Harness, Igniter (Includes Switches)
3	W10515455	Assembly, Burner (17.5K)	7		Grate Kit		3196520	Clip, Wire
		(Left Front and Right Front)		W10911970	Black		3196896	Clip, Wire
	W10515454	Assembly, Burner (9.5K)	8	W10673618	Screw		W10334923	Clip, Gas Wiring
		(Left Rear and Center)	9	3196557	Screw			
	W10515453	Assembly, Burner (6K) (Right Rear)	10	W11379945	Bracket, Anti-Tip			
			11	7101P485-60	Screw, Anti-Tip Kit			
			12	W10298664	Spreader, Flame			
			13		Bezel			
				W11042485	Stainless			


CONTROL PANEL PARTS

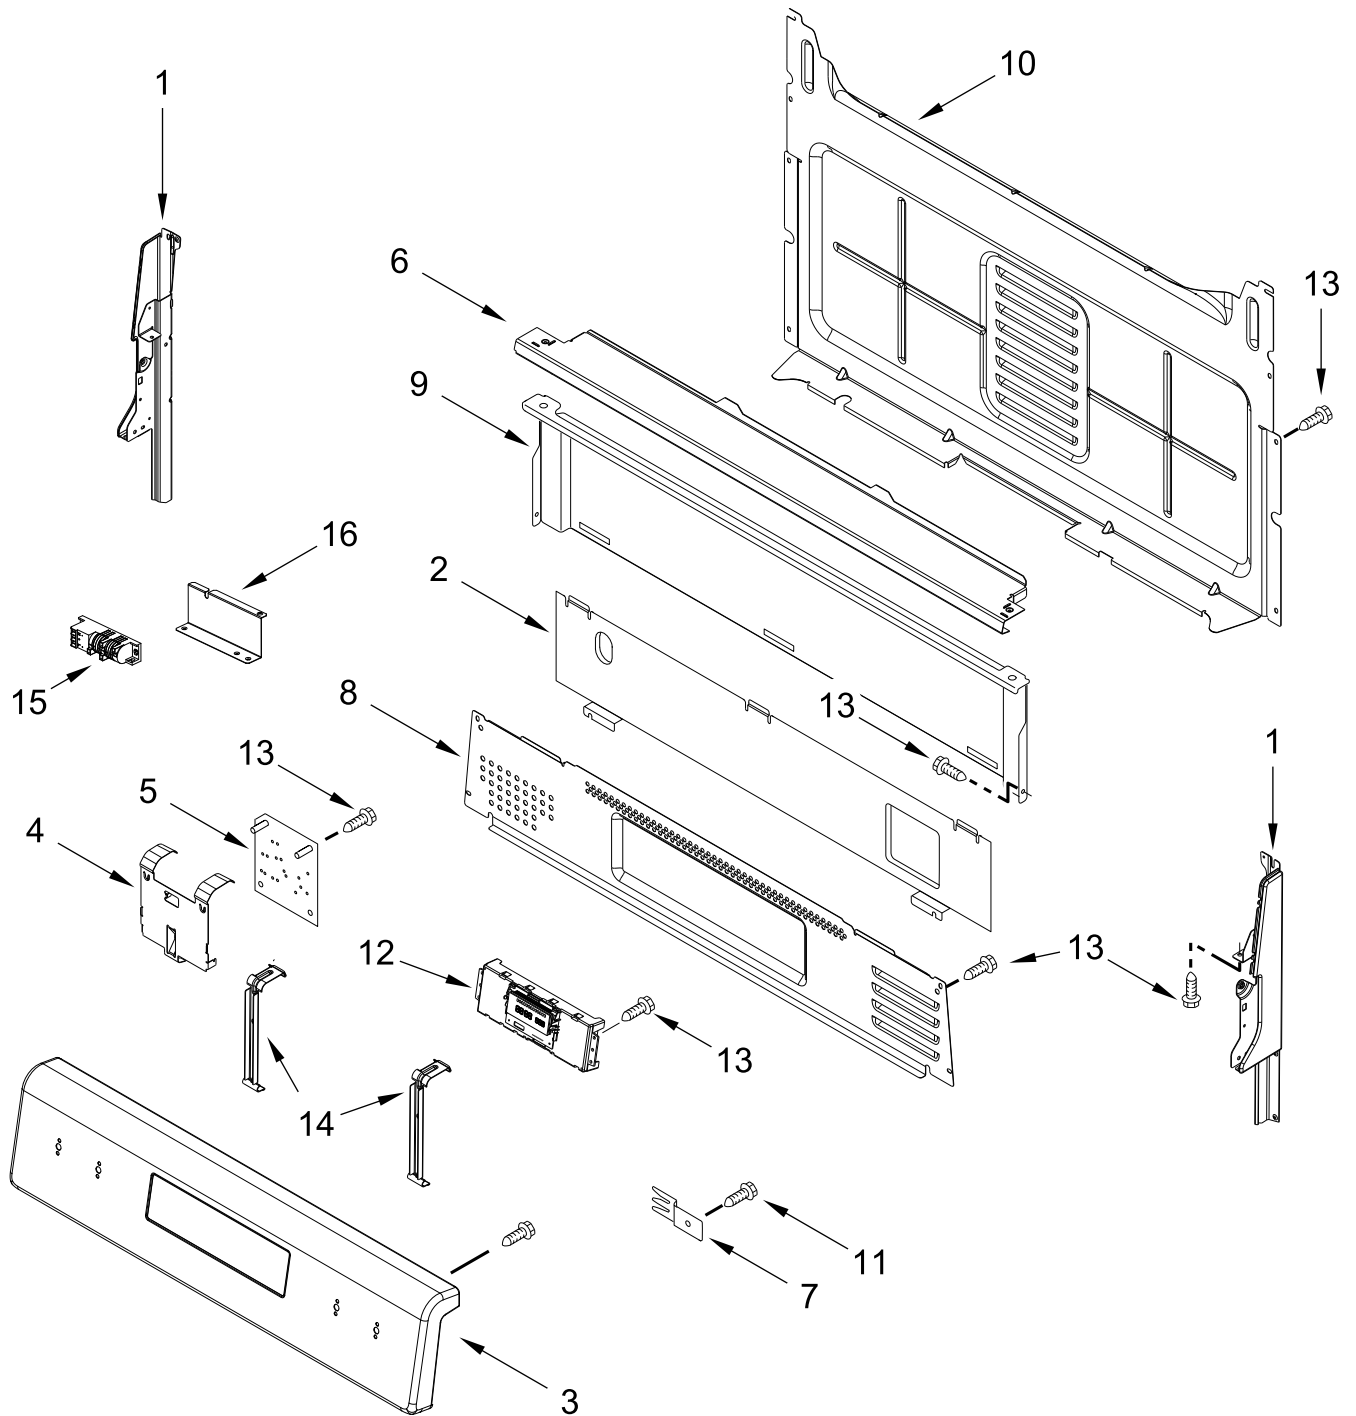

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W11130372	Black (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Electronic (LCX)
	W11130379	Black (Right)					W11520695	Black
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W10835288	Stainless	9	W10192841	Shield, Heat	15	W10475149	Module, Spark
4	W10762981	Bracket, Mounting	10	W10184370	Cover, Back	16	W10797001	Bracket, Ignitor


MANIFOLD PARTS

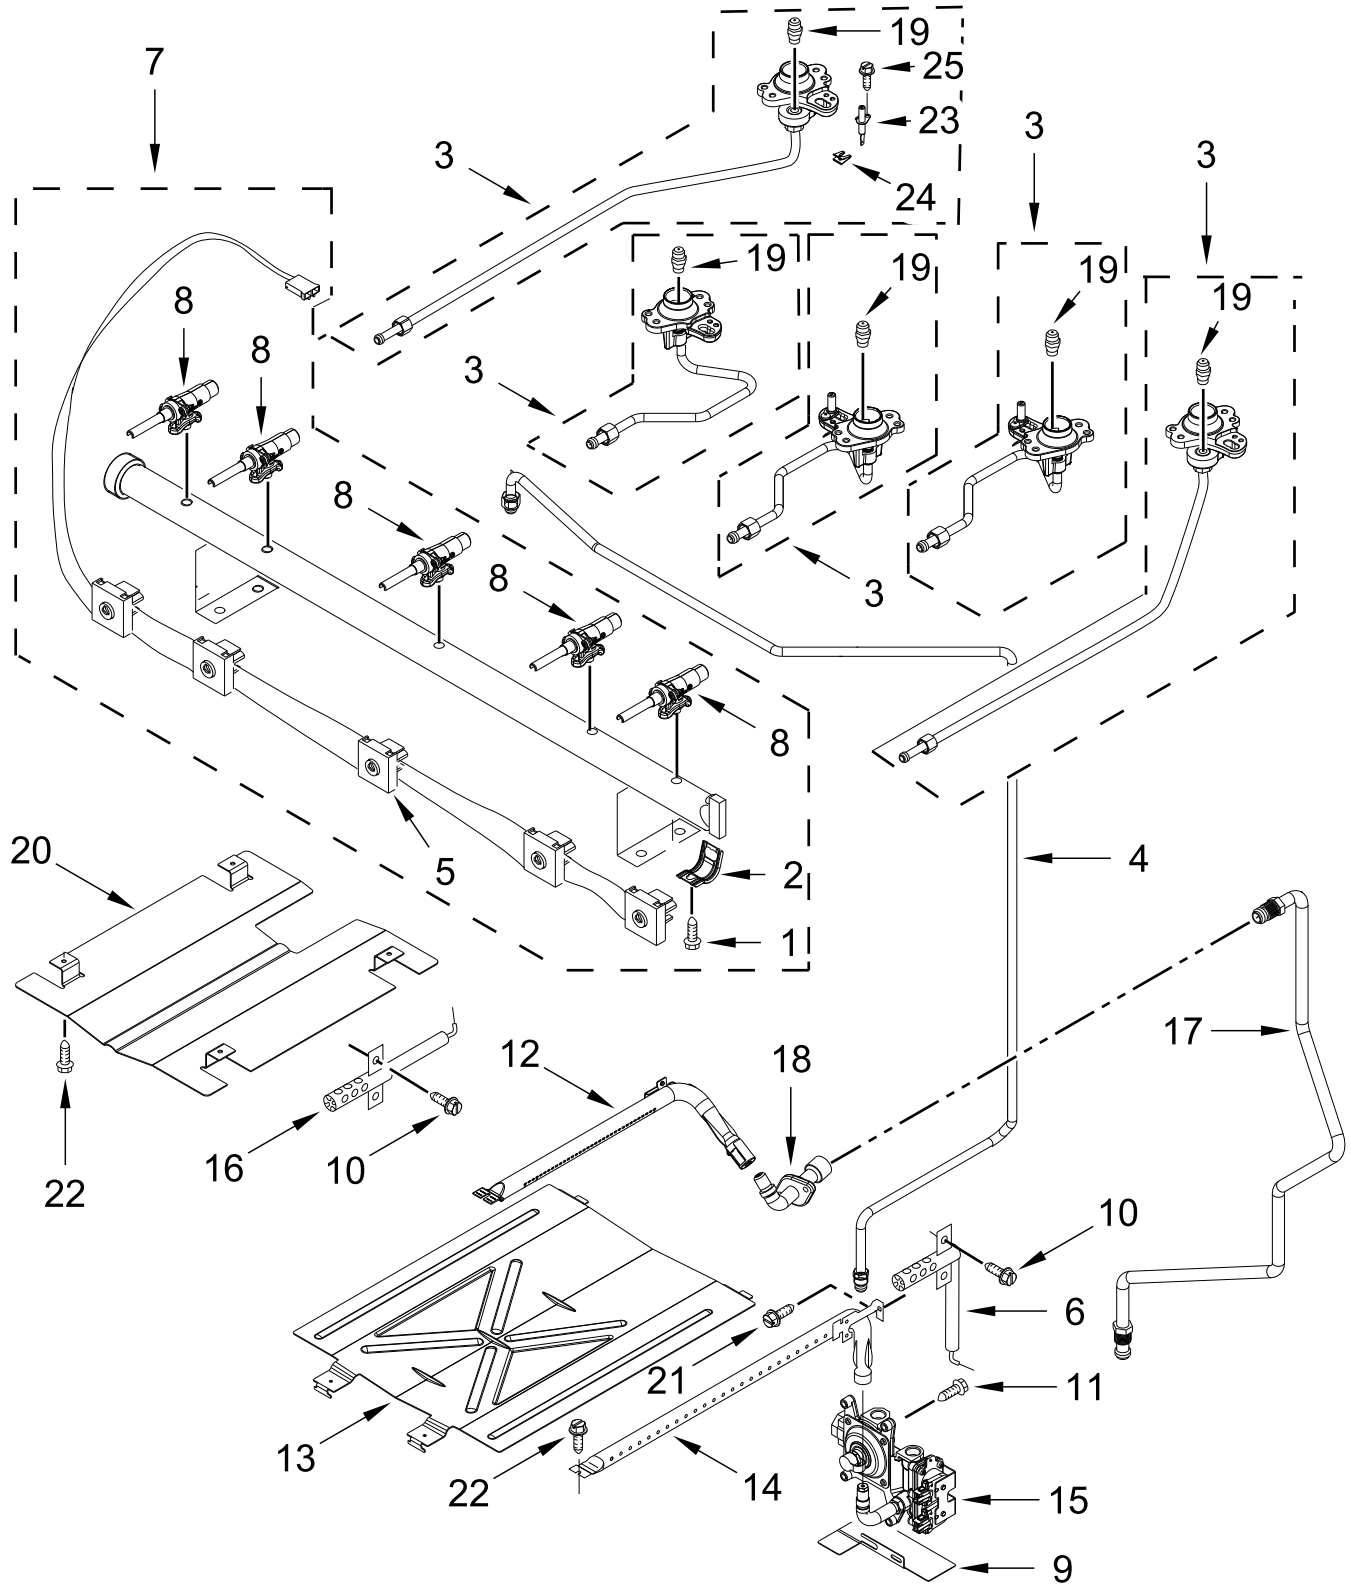

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577792	Screw, Valve	8	W11509685	Valve, Gas	20	W10137062	Spreader, Flame (Broiler)
2	W10949105	Bracket, Saddle Valve			(Left Front and Right Front)	21	3196265	Screw
3	W11459257	Orifice Holder Assembly (15K)		W11509686	Valve, Gas	22	W10362924	Screw
		(Left Front)			(Left Rear and Center)	23	W11428858	Electrode
	W11459258	Orifice Holder Assembly (9.5K)		W11509687	Valve, Gas			(Right Front and Right Rear)
		(Left Rear)	9	W10224921	Bracket, Aegis		W11428831	Electrode
	W11459260	Orifice Holder Assembly (15K)	10	3196385	Screw			(Left Front, Left Rear, Center)
		(Right Front)	11	3400016	Screw	24	W10827923	Electrode, Spring
	W11459259	Orifice Holder Assembly (5K)	12	8054078	Burner, Broiler			(Left Front, Right Front, Left Rear, Right Rear and Center)
		(Right Rear)	13	W10184491	Spreader, Flame (Oven)	25	8273062	Screw
	W11459261	Orifice Holder Assembly (8K)	14	9758078	Burner, Bake			FOLLOWING PARTS NOT ILLUSTRATED
		(Center)	15	W11370883	Regulator		W11489399	LP 5 Orifice Conversion Kit
4	W10215439	Tubing (Manifold to Regulator)	16	W10333842	Electrode, Broil		W10566537	LP Bake and Broil Kit
5	W11537754	Harness, Igniter (Includes Switches)	17	W10420040	Tube, Broiler Supply		W10400495	Orifice, LP Bake
6	W11450459	Electrode, Bake	18	W11435700	Fitting, Broiler		W10465080	Orifice, LP Broil
7	W11510000	Manifold Assembly	19	W11485872	Orifice (15K)		W10182767	Tie, Manifold Wire
					(Left Front and Right Front)			
				W11485873	Orifice (9.5K)			
					(Left Rear)			
				W11485871	Orifice (5K)			
					(Right Rear)			
				W11485874	Orifice (8K)			
					(Center)			


CHASSIS PARTS

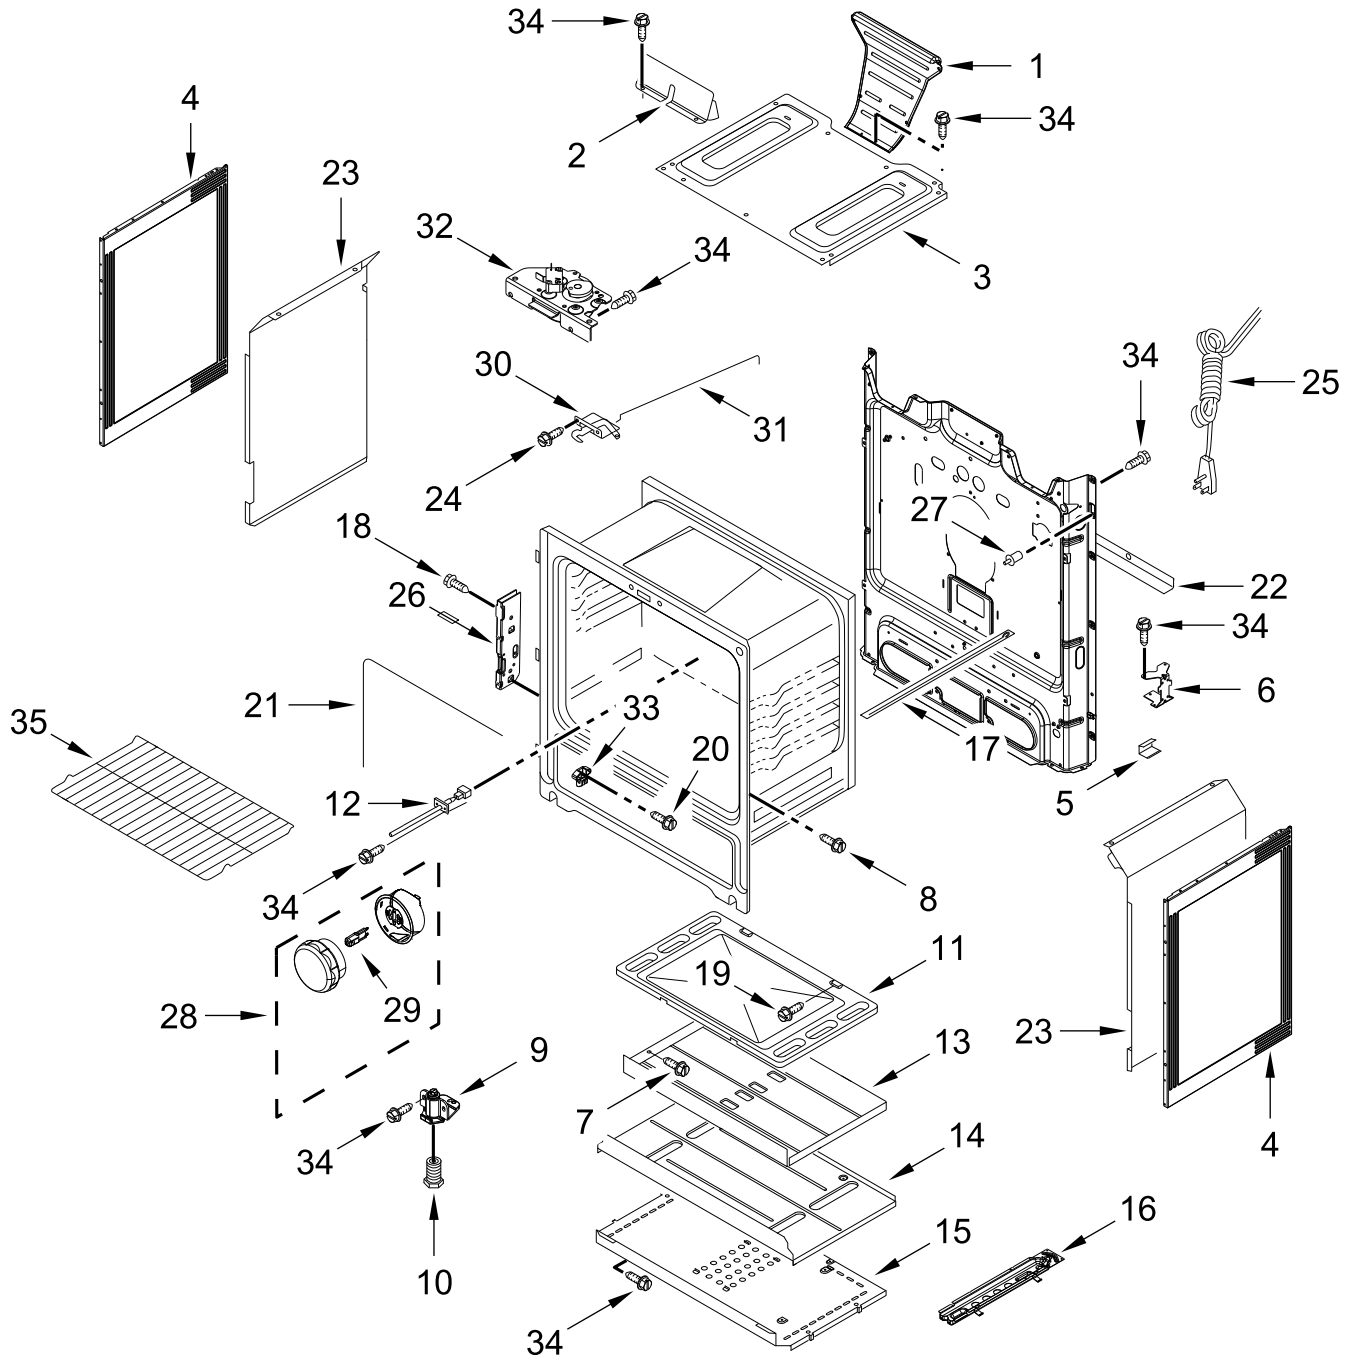

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11457094	Box, Flue	16	W10390008	Base Rail Assembly (Left)	28	W11544377	Light Assembly
2	8272747	Shield, Flue				29	W10571723	Bulb, Halogen 40 Watts
3	W11379351	Box-Burner, Gas Sealed		W10390007	Base Rail Assembly (Right)	30	9761013	Front Door Latch Assembly
4		Panel, Side	17	9757239	Rod, Door Switch	31	W10078370	Rod, Push Latch
	W10162245	Black	18	W10031780	Screw	32	W10107820	Rear Door Latch Assembly
5	W10137382	Clip, Panel	19	W10379120	Screw	33	W10674705	Glide, Drawer Front
6	8523249	Bracket, Manifold	20	3400080	Screw	34	3196178	Screw
7	W10362924	Screw	21	W11491751	Seal, Door	35	W11173792	Rack, Oven
8	3196560	Screw	22	W10435470	Brace, Main Back			FOLLOWING PARTS NOT ILLUSTRATED
9	W10341186	Front Foot Assembly	23	W11379353	Retainer, Insulation (Left)		8524099	Insulation, Wrap
10	W10058460	Foot, Leveling		W11379943	Retainer, Insulation (Right)		W10180437	Insulation, Back
11	3195097	Bottom, Oven	24	3196560	Screw			
12	W10586204	Sensor	25	W10910642	Cord, Power			
13	8053967	Baffle, Burner Oven	26	W10289077	Receiver, Hinge			
14	8053969	Shield, Heat	27	W11511828	Switch, Door			
15	8053968	Shield, Lower						


DOOR PARTS

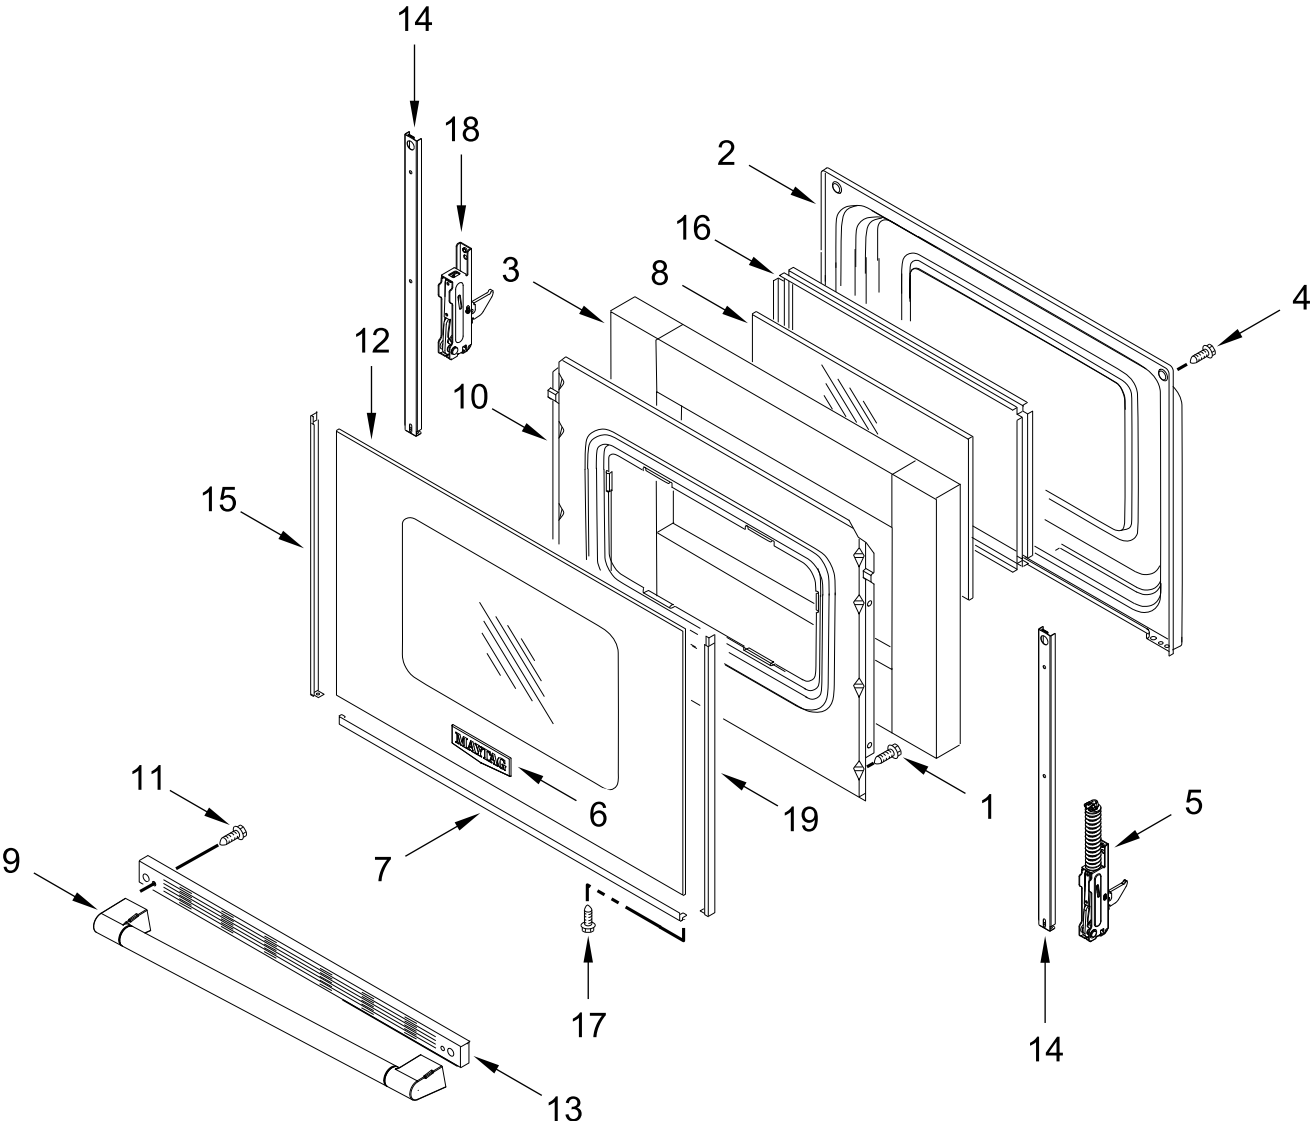

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	9		Handle, Oven Door	15		Trim, Door
2	9761344	Liner, Door		W11495825	Stainless		W10746436	Black (Left)
3	W10278991	Insulation, Door Strip	10	9761357	Retainer, Insulation	16	W10316950	Frame, Glass
4	W10200660	Screw	11	W10480830	Screw	17	W10327235	Screw
5	W10299224	Hinge, Active (With Spring)	12		Glass, Window	18	W10299227	Hinge, Door (Passive)
6	W11628148	Badge		W10884159	Black	19		Trim, Door
7		Trim, Lower Door	13		Trim, Oven Door Vent		W10746435	Black (Right)
	8523177	Black		W11675010	Black			
8	9758162	Glass, Inner	14	W11379944	Strap, Door			

DRAWER PARTS

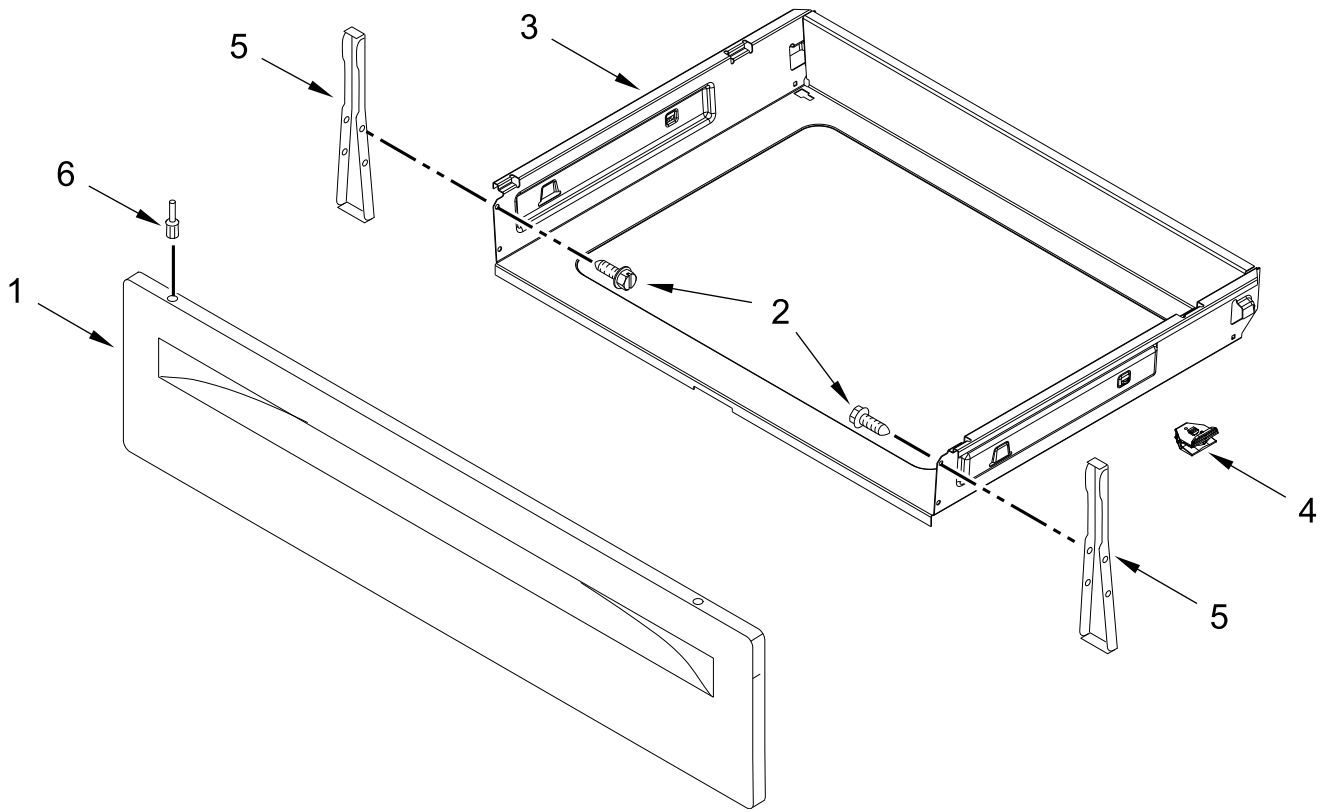

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer	3	W10688022	Drawer, Storage	6		Rivet, Push
	W11190210	Stainless	4	W10674708	Glide, Drawer Rear		3196813	Black
2	3196165	Screw	5	W10462909	Bracket, Mounting			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting